



ALLIED MAKER

MADE IN NEW YORK

# Wood Totem

## Installation Guide

212-334-7333

[help@alliedmaker.com](mailto:help@alliedmaker.com)

### LIVING FINISHES


Wear Gloves!



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE  
INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND  
OPERATION OF THE PRODUCT AND HAZARDS INVOLVED




# Contents Included

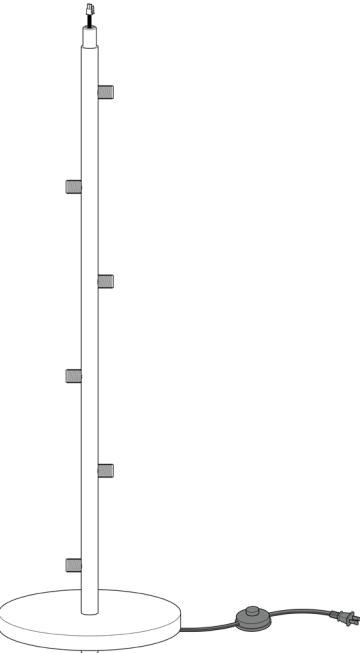		 24x Shade Screw			
 Lighting Fixture A			 Lighting Fixture B		

# 1

Connect the  
molex cables ① together.



Insert lighting fixture B ②  
onto lighting fixture A ③

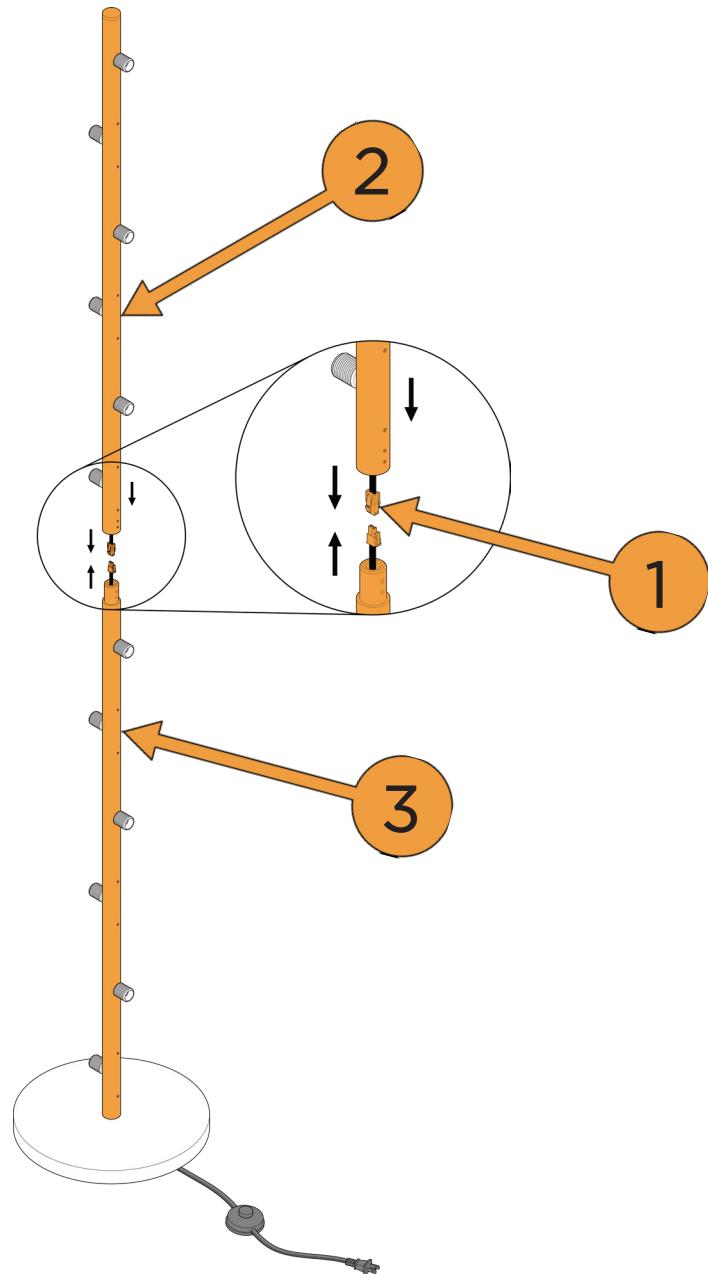

# 2



Using the provided 1/16 Hex Driver ①  
screw the set screws ②  
into lighting fixture B ③  
to secure lighting fixture B ③  
with lighting fixture A ④

**NOTE:** Make sure the inside holes  
of lighting fixture B line up with the  
holes of lighting fixture A. If not  
aligned properly, the set screws will  
not fully engage and will extend  
outside the lighting fixture.

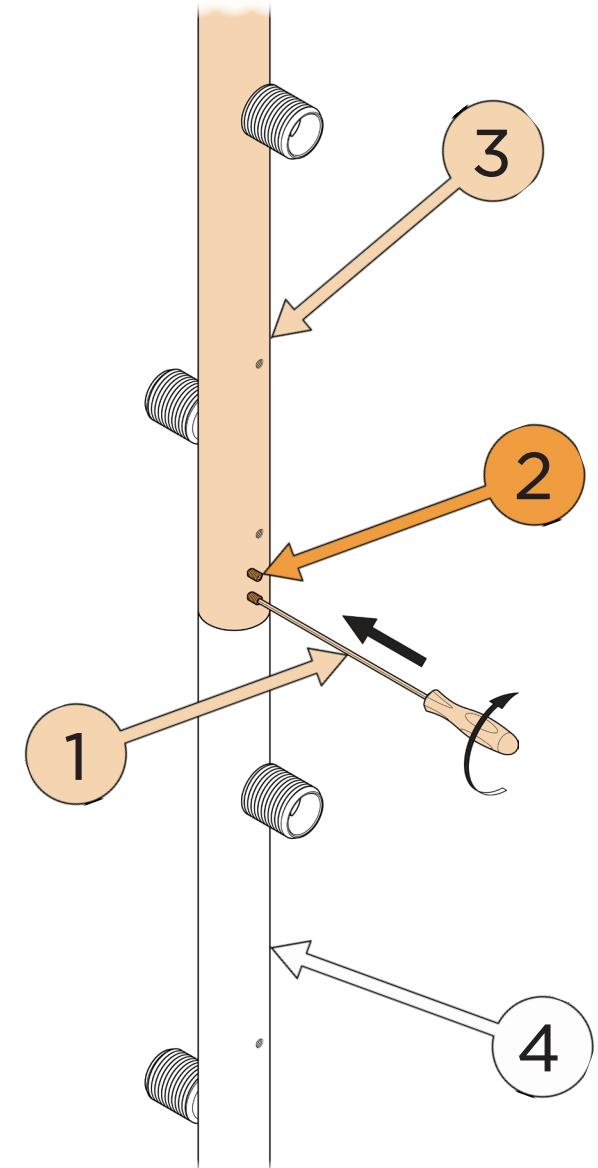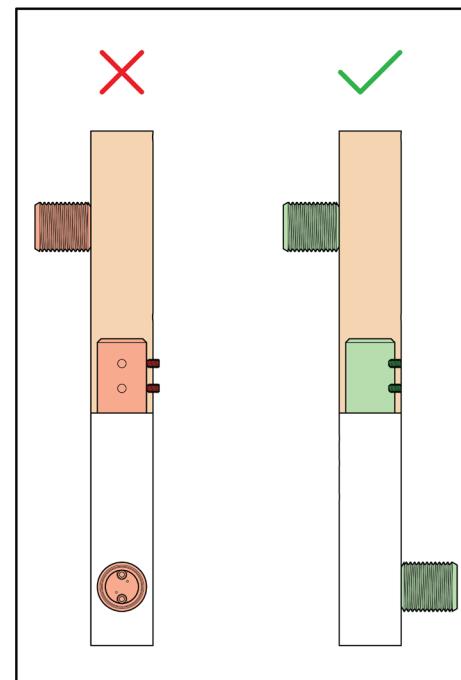

# 3

Insert the light bulbs ①  
into the fixture sockets ②

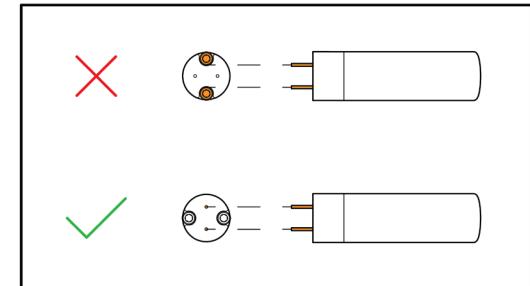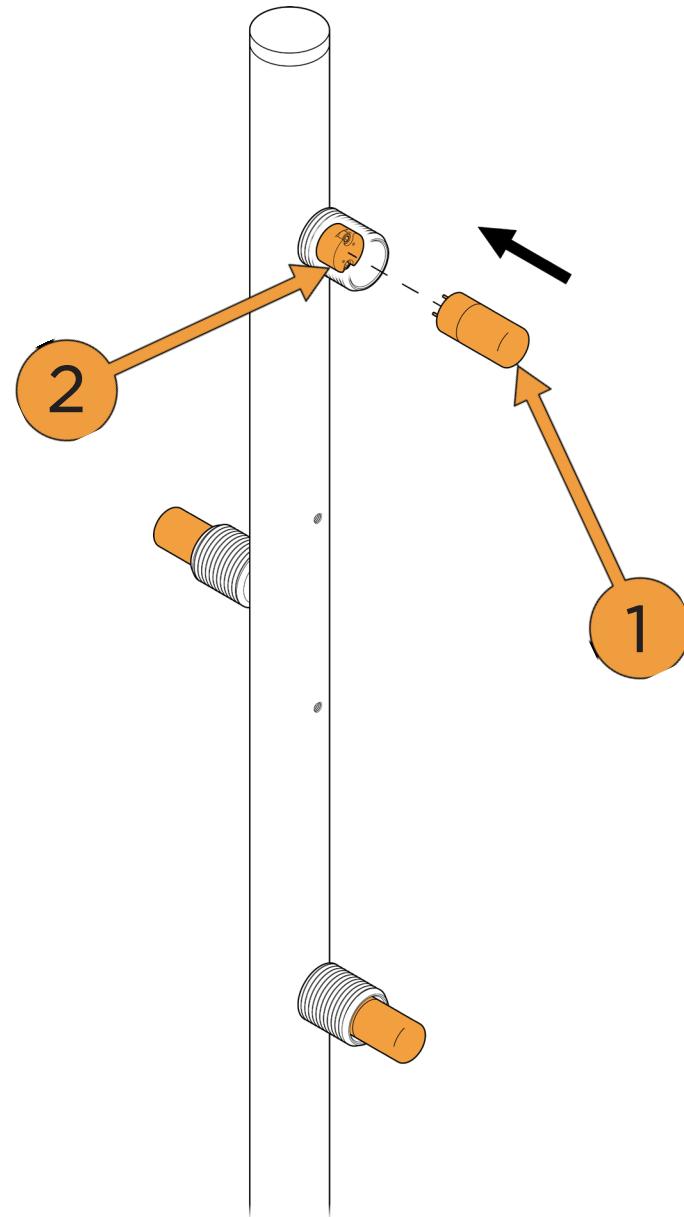


# 4

Screw the glass ①  
onto the socket covers ②


**CAUTION:** Align threads properly  
for a smooth rotation before  
twisting to avoid jamming.

Do not overtighten the glass.

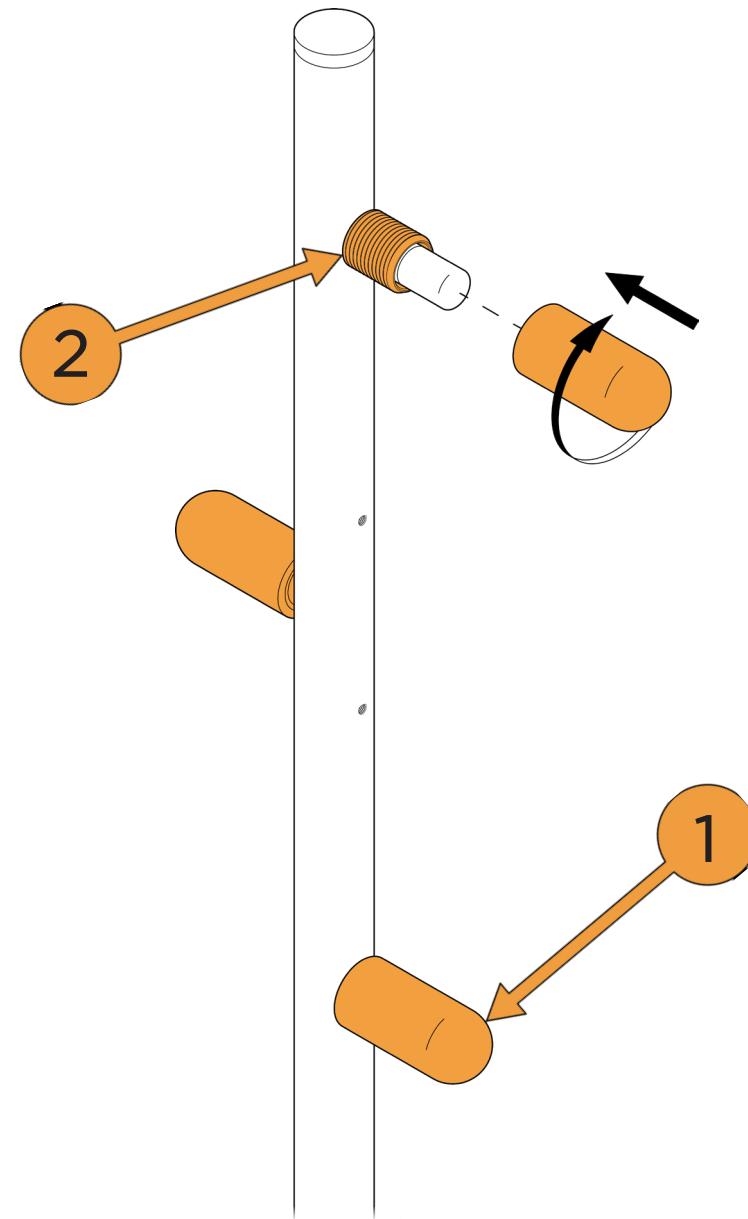

# 5

Mount the shades ①  
onto lighting fixtures A & B ②  
using the provided shade screws ③

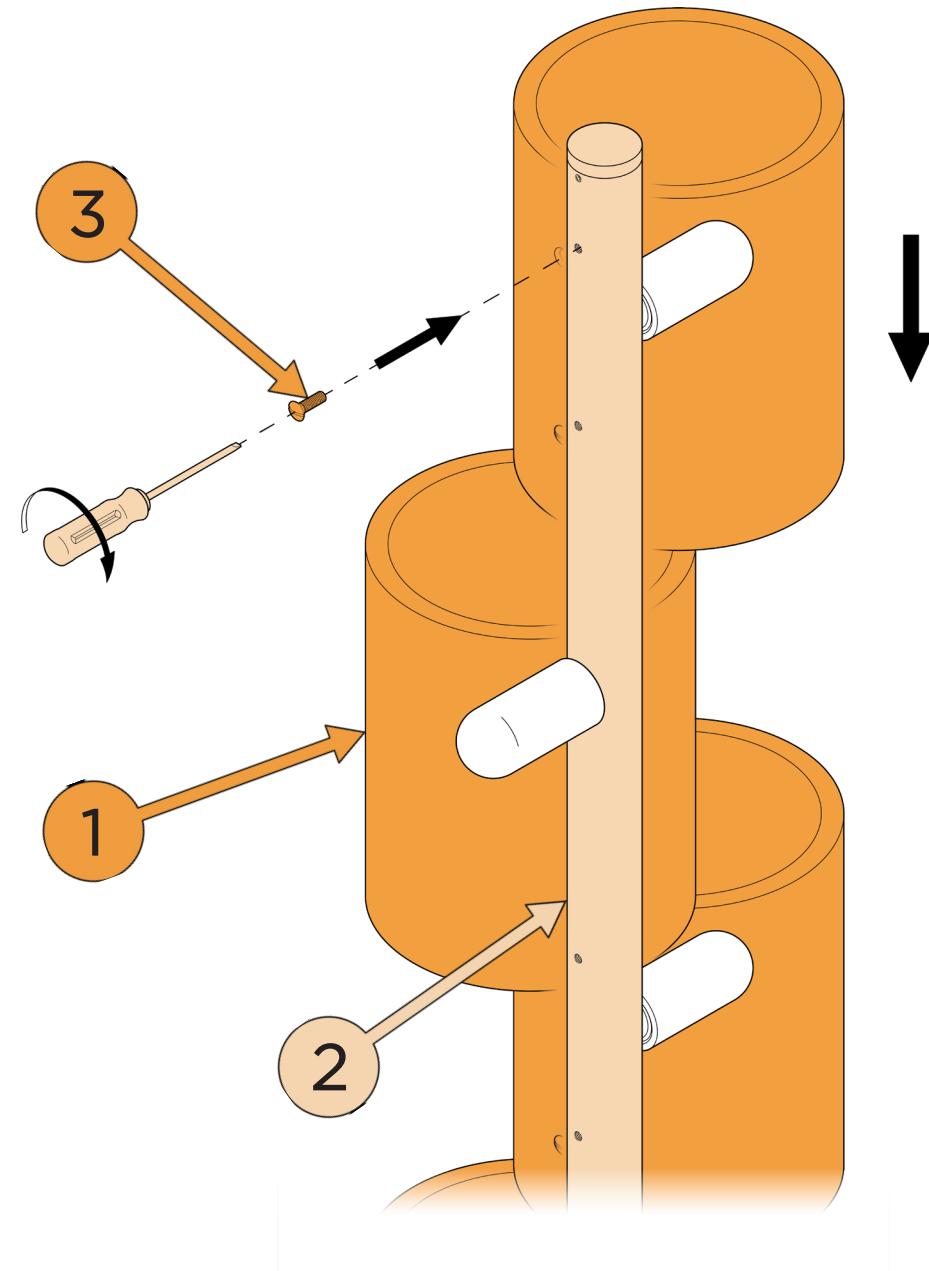

# 6

Insert the plug ①  
into the outlet ②

