



## Wood Cylinder Pendant

### INSTALLATION GUIDE



HANDMADE  
IN U.S.A.



WEAR GLOVES  
DURING INSTALL

### FRAGILE FINISHES

**DANGER:** ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.



+1 212 334 7333


[www.alliedmaker.com](http://www.alliedmaker.com) • [sales@alliedmaker.com](mailto:sales@alliedmaker.com)




1

---

Inspect Contents

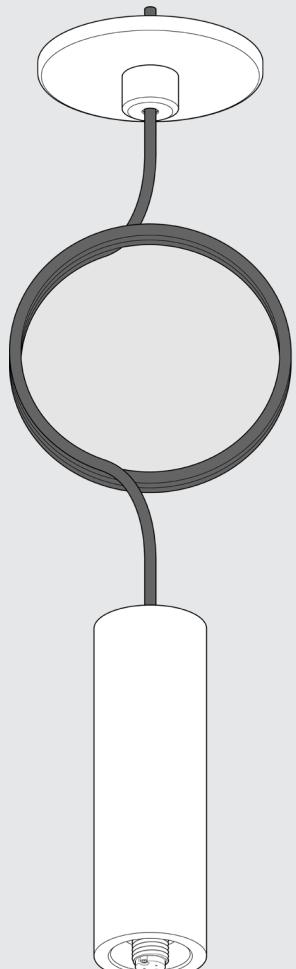


Fixture



2x Machine Screws



Light Bulb

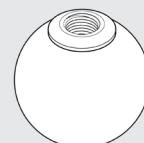

Glass

---


## Terminology



Universal  
Backplate



Strain Relief Adapter  
&  
3x Set Screw

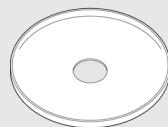

Canopy




Fixture Socket  
&  
Socket Cover



Phillips Screwdriver  
(Not Included)



Brass Mesh Chain

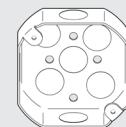

Junction Box  
(Not Included)




1/8 Hex key

3

---


Preparation

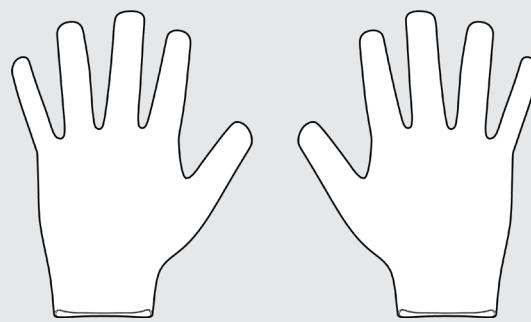

Nitrile Gloves

4

---

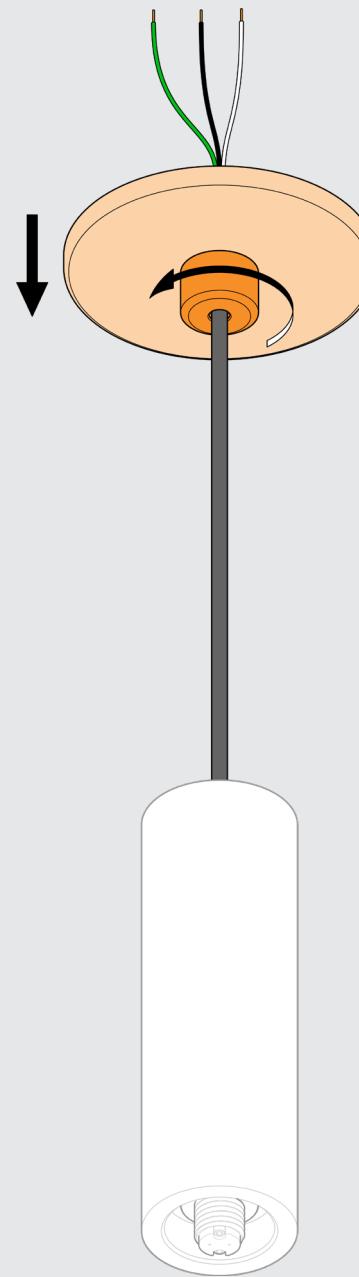


Unscrew the strain relief lock ring from the strain relief adapter and then carry the lock ring and canopy down.

## 5

---

Using a 1/8" hex key, loosen the three set screws on the strain relief adapter and adjust to the desired position. Then, tighten the three set screws to secure the brass mesh chain into place.

**CAUTION:** Do not overtighten the set screws. Tighten until the set screws are flush with the outside face of the strain relief adapter. Overtightening can lead to pinched wires.

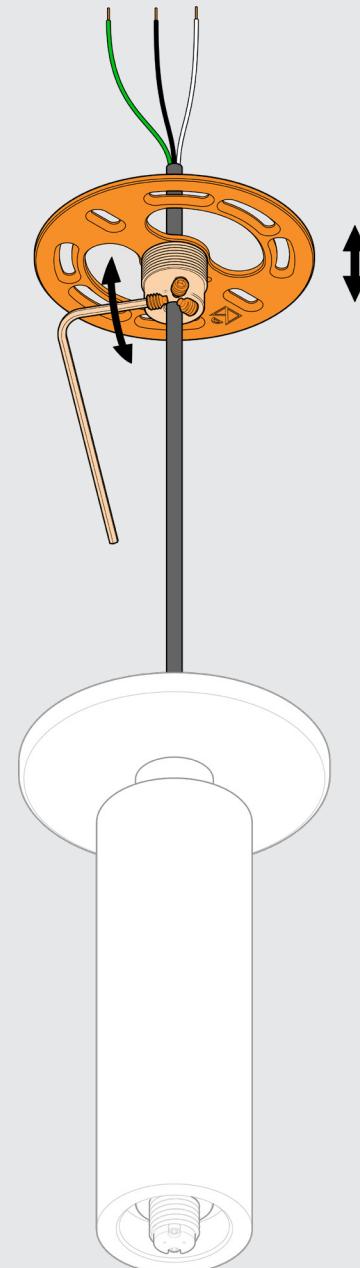

---


How to trim Allied Maker's Brass Mesh Pendant Cord



# 6


---

Mount the universal backplate onto the junction box using the provided machine screws.

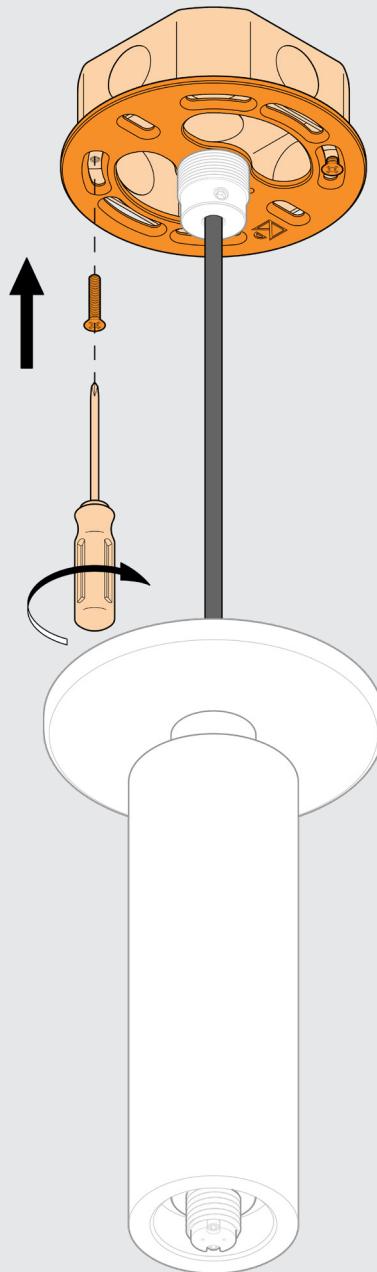

7

---

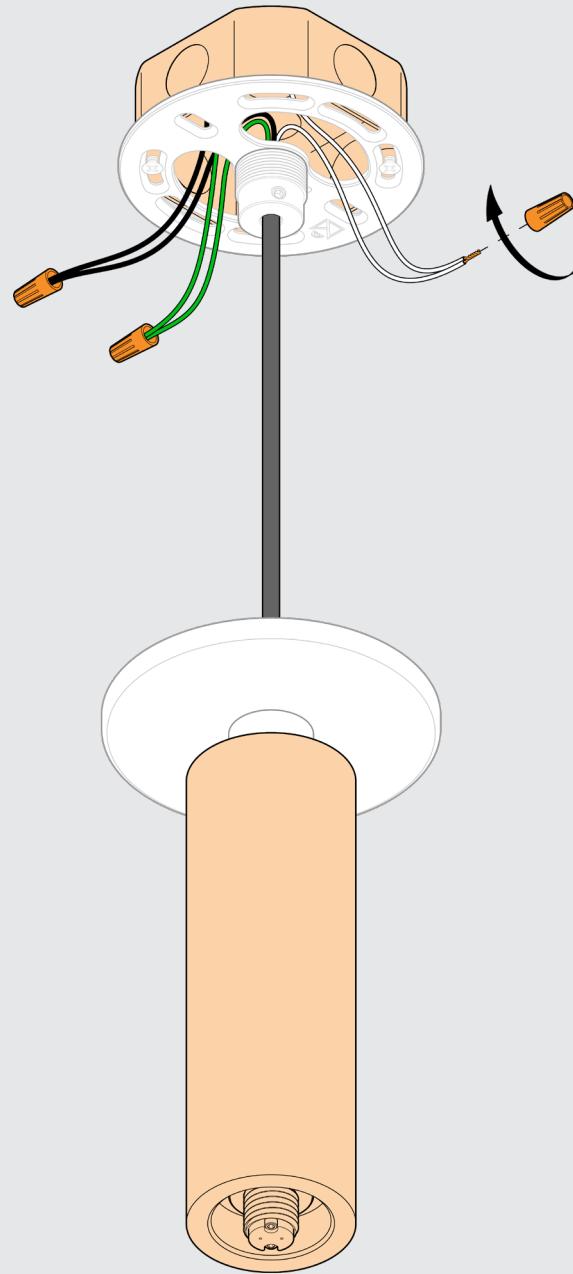


Connect the ground wire from the fixture to the ground wire from the junction box using a wire nut. Then, connect the wires from the fixture to the wires from the junction box using wire nuts.

# 8

---


Carry the canopy back up and over the strain relief adapter and hold in place. Then, carry the strain relief lock ring up and screw onto the strain relief adapter to secure the canopy into place.

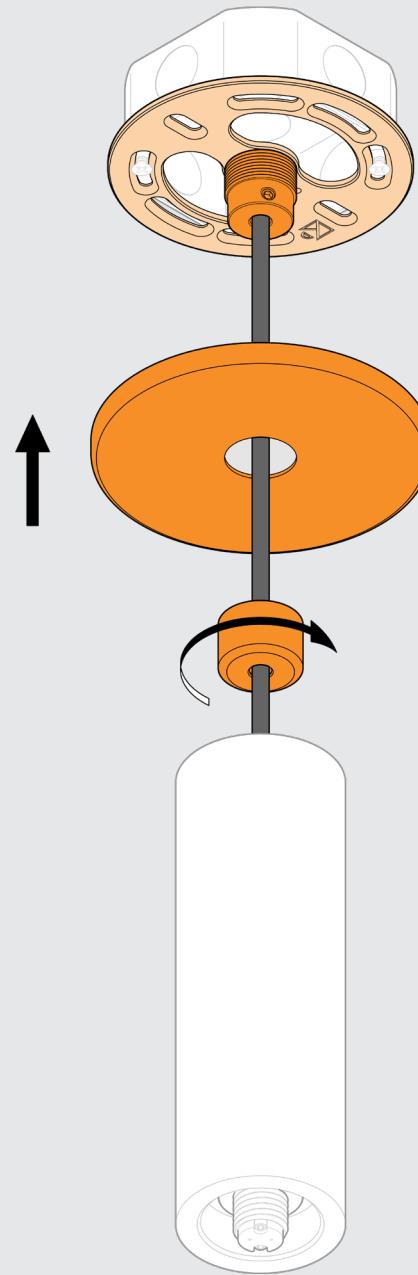

9

---

Insert the light bulb  
into the fixture socket.

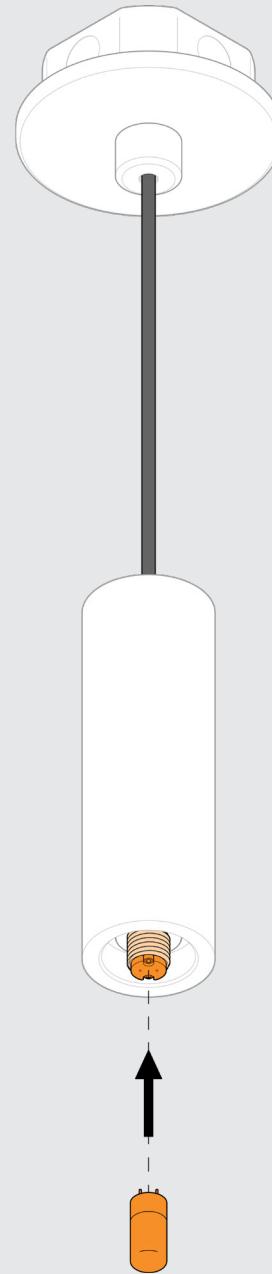

10

---

Screw the glass onto  
the socket cover.

