



Poise Pendant

INSTALLATION GUIDE



HANDMADE
IN U.S.A.



WEAR GLOVES
DURING INSTALL

FRAGILE FINISHES

DANGER: ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.



+1 212 334 7333


www.alliedmaker.com • sales@alliedmaker.com



1



Hang Rod




Canopy Assembly



2x Machine Screws




Inspect Contents

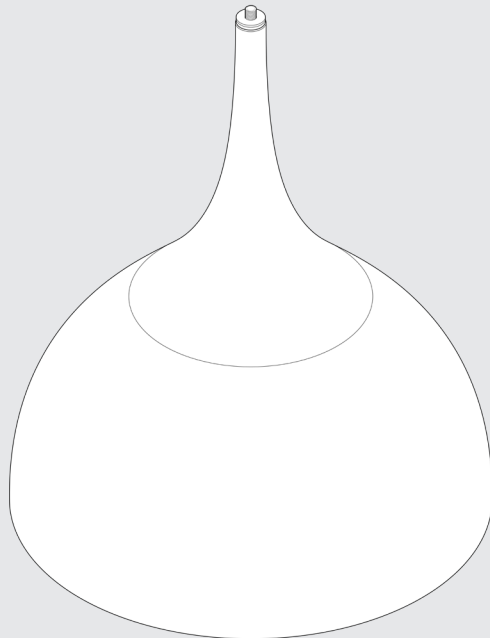

Fixture




Light Bulb

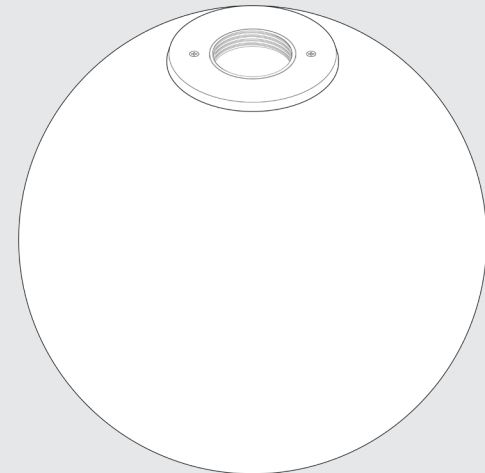


Glass




Terminology

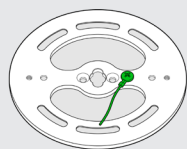

Universal Backplate

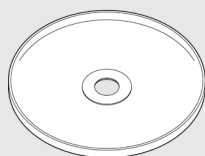


Canopy




Adapter




Hang Straight
&
Knurled Ring

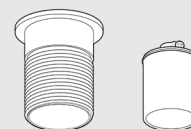

Fixture Socket
&
Socket Cover




Phillips Screwdriver
(Not Included)

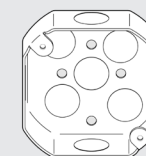

Junction Box
(Not Included)

3


Preparation

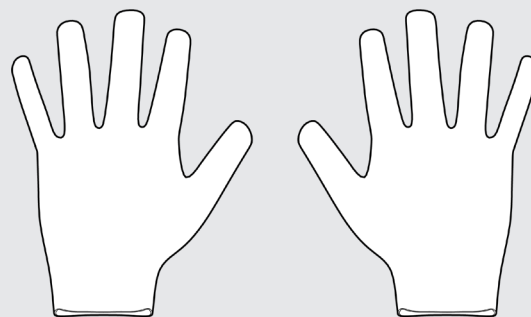

Nitrile Gloves


4

Travel the wires from the fixture through the hang rod. Then, screw the hang rod onto the nipple on the fixture to secure the hang rod into place.

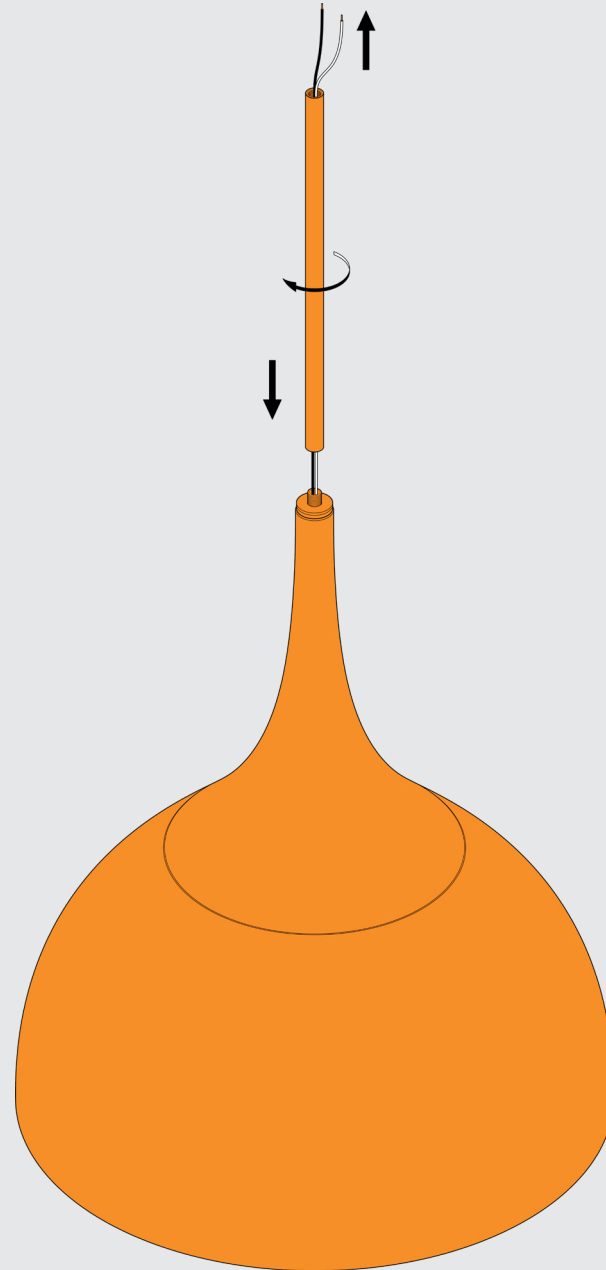


5

Travel the wires from the fixture through the hang straight on the canopy assembly. Then, screw the hang straight onto the hang rod.

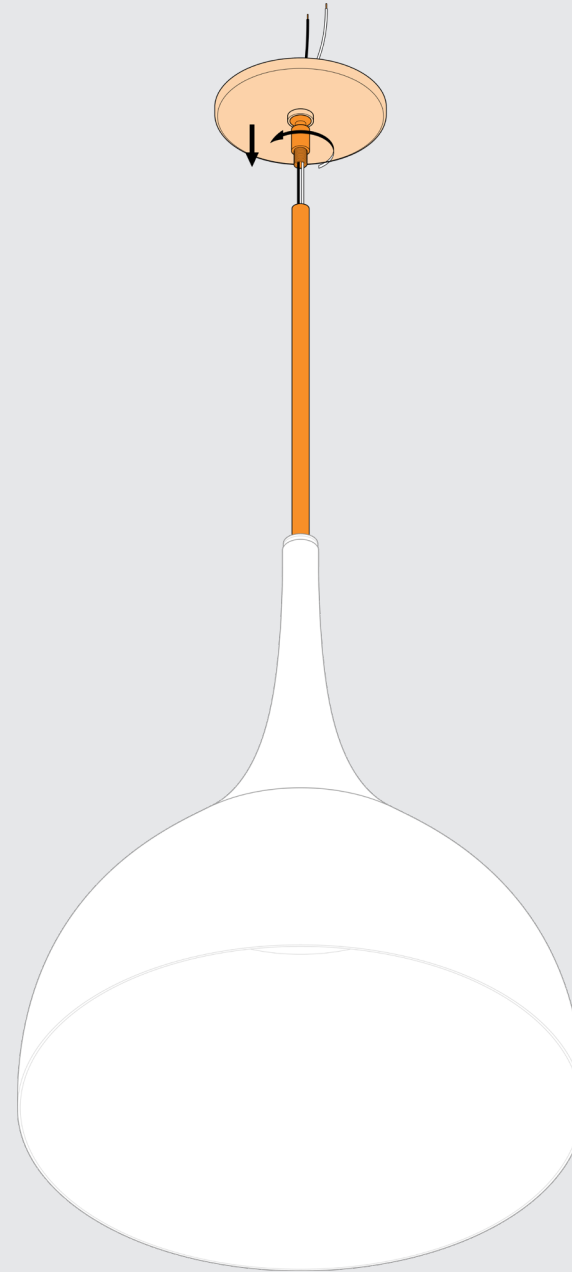


6

Unscrew the knurled ring from the
hang straight and then carry the
canopy and knurled ring down.

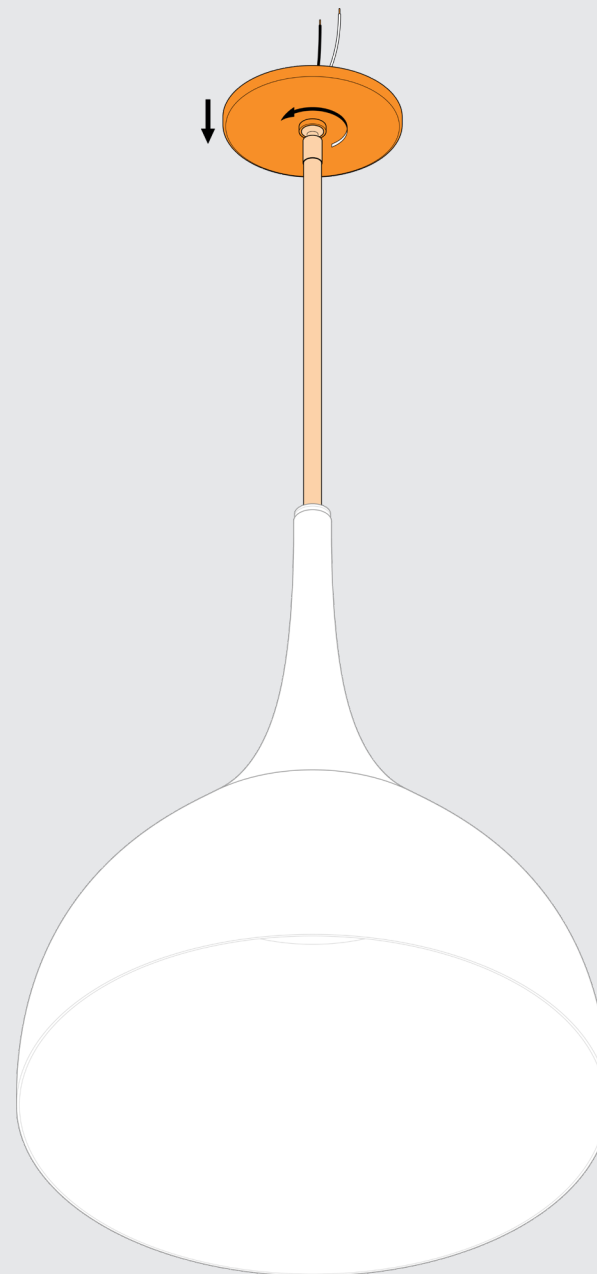


7

Mount the universal backplate onto the junction box using the provided machine screws.

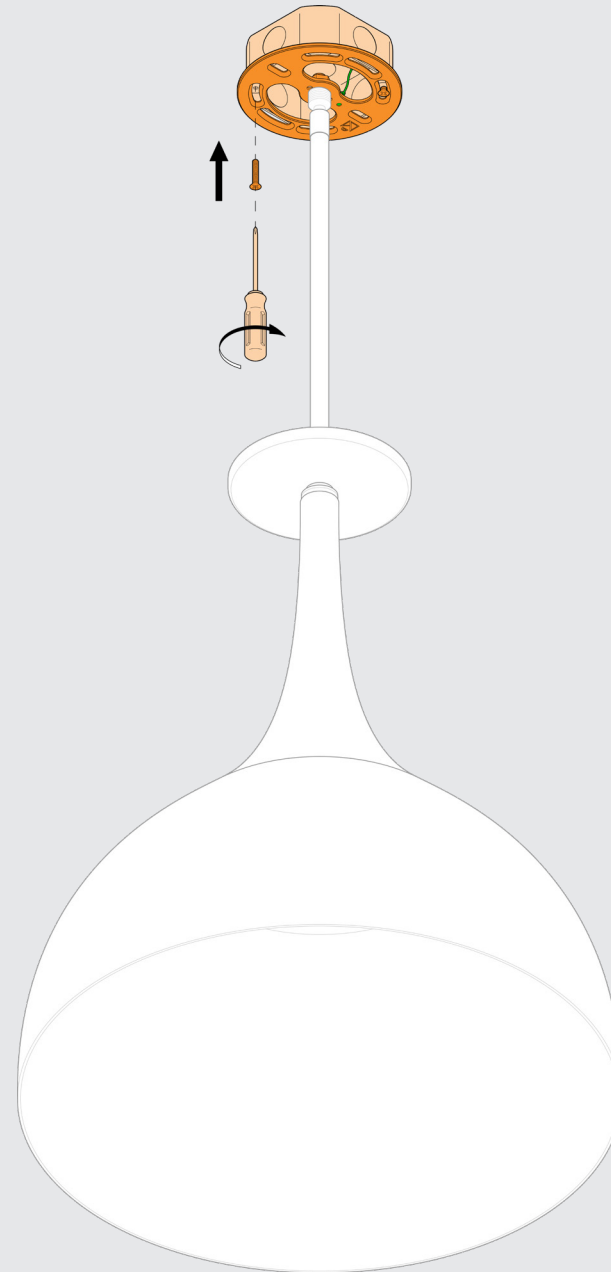

8

Connect the ground wire from the universal backplate with the ground wire from the junction box using a wire nut. Then, connect the wires from the fixture to the wires from the junction box using wire nuts.

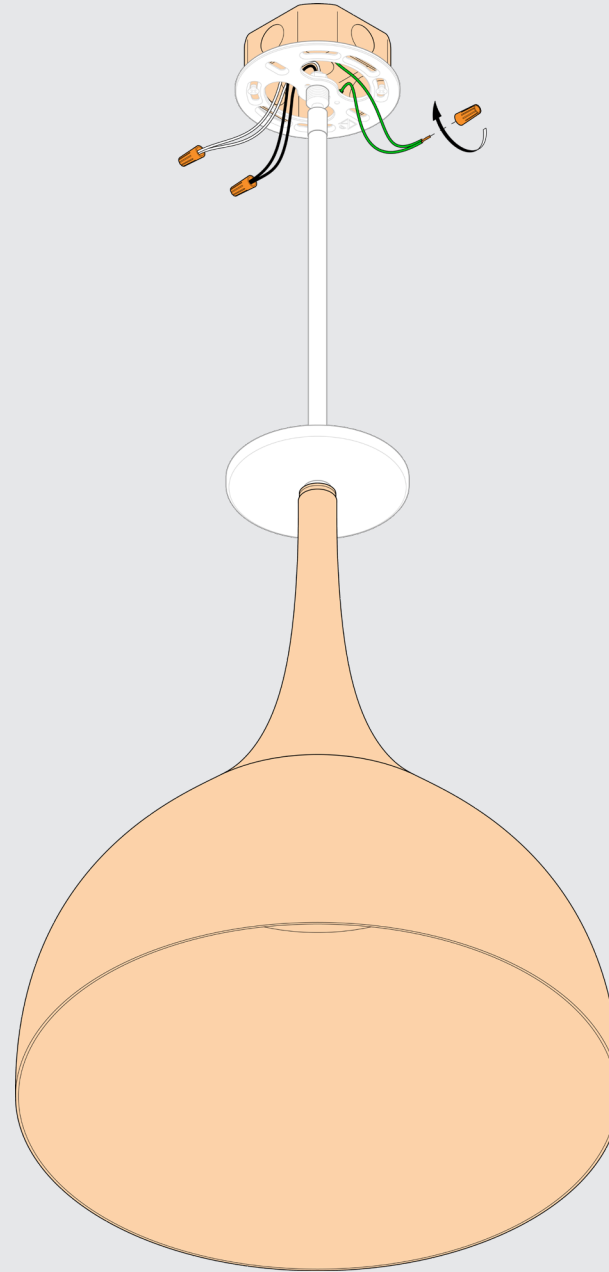


9

Carry the canopy back up and over the hang straight and hold in place. Then, carry the knurled ring back up and screw onto the hang straight to secure the canopy into place.



10

—
Screw the light bulb
into the fixture socket.

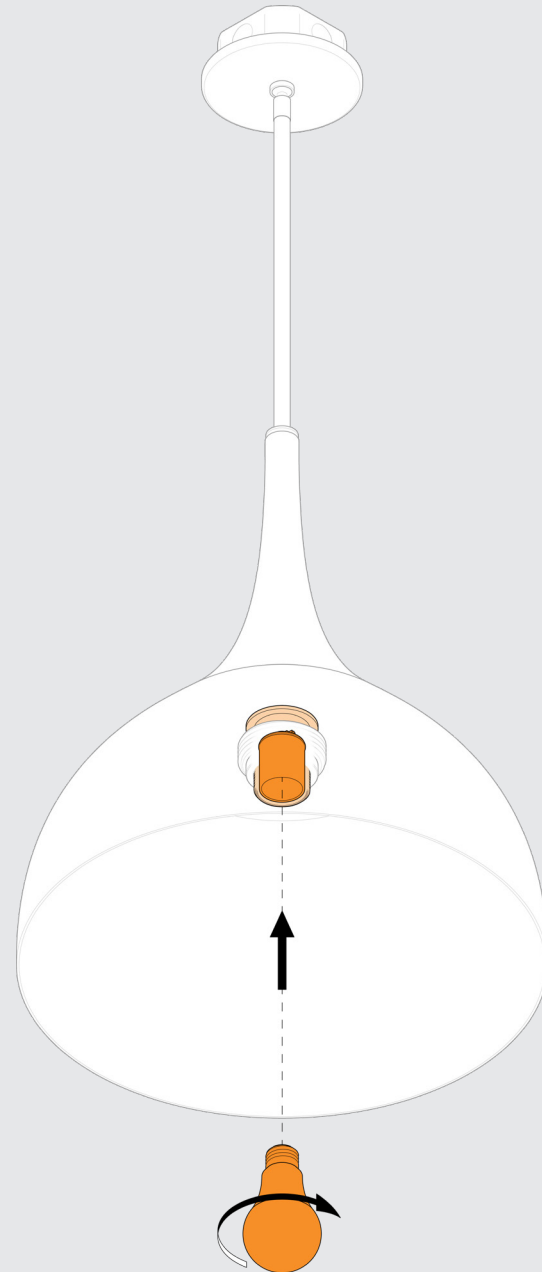

Screw the glass
onto the adapter.

CAUTION: Align threads
properly for a smooth
rotation before twisting
to avoid jamming. **Do not
overtighten the glass.**

