



Wood Eclipse

INSTALLATION GUIDE



HANDMADE
IN U.S.A.



WEAR GLOVES
DURING INSTALL

FRAGILE FINISHES

DANGER: ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.




+1 212 334 7333

www.alliedmaker.com • sales@alliedmaker.com



1


Inspect Contents

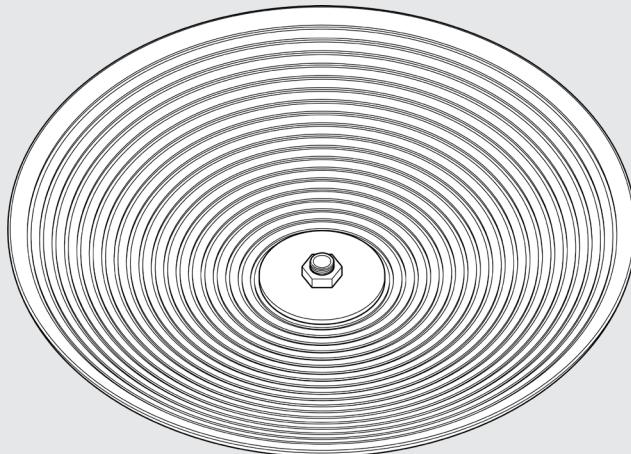

Wood Dome



2x Machine Screws

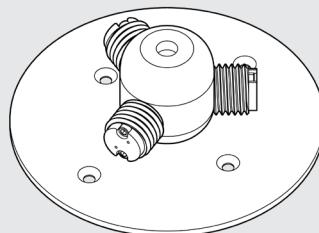


Fixture




3x Light Bulb

2


Terminology

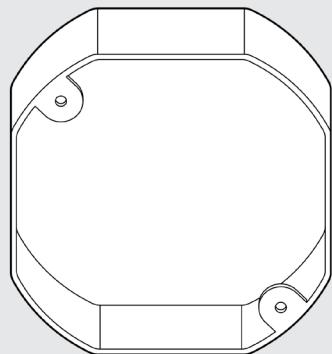

Junction Box

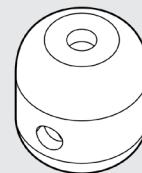

Fixture Body

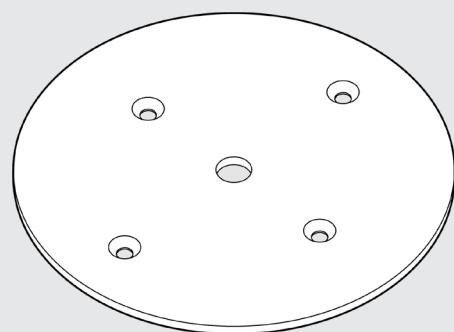


Backplate



3x Fixture Socket


3

Connect the wires from the fixture to the wires from the junction box using wire nuts.

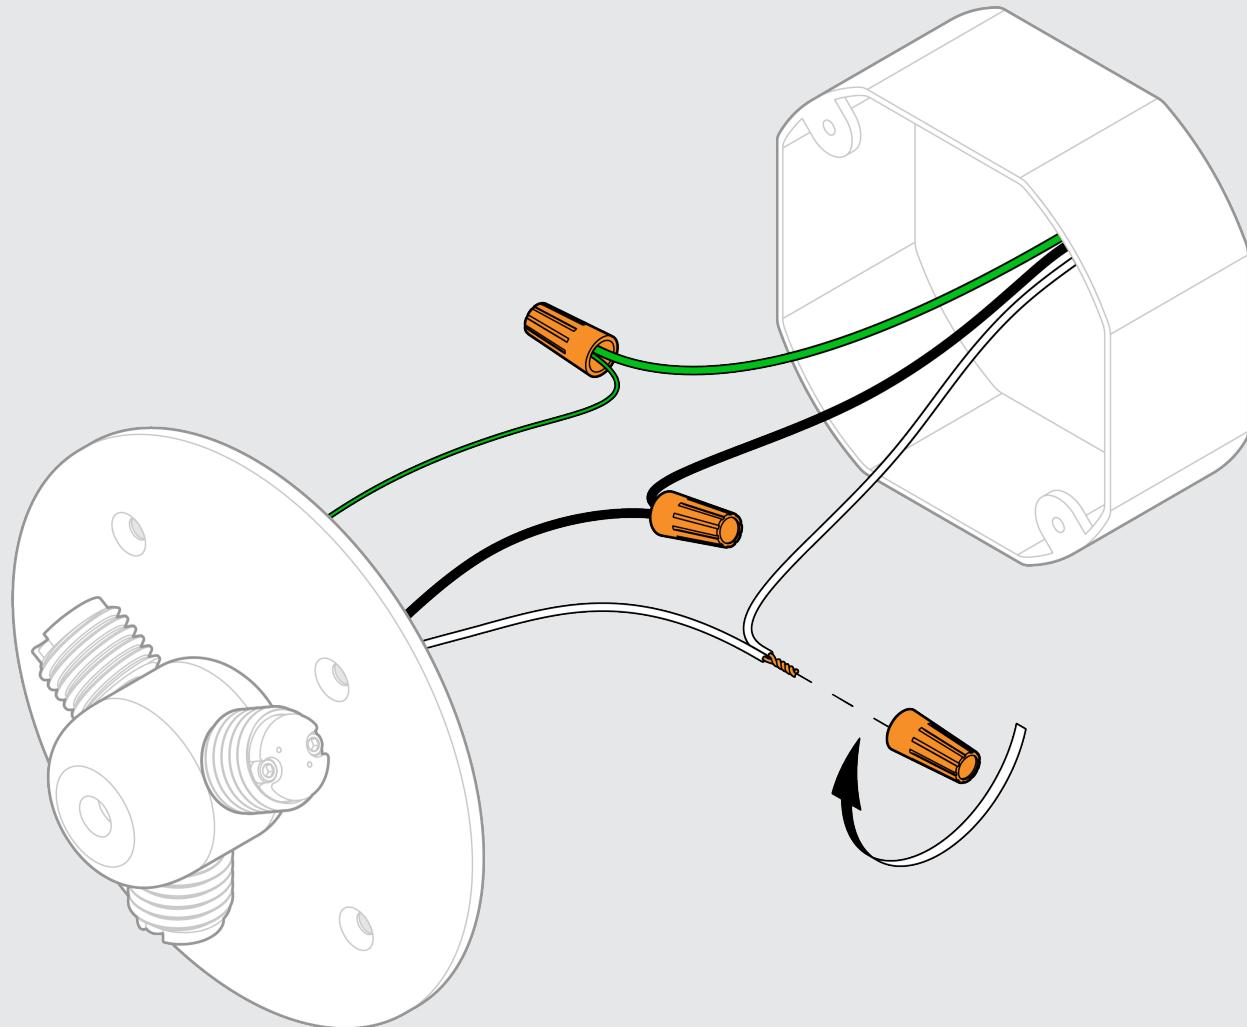


4

Mount the fixture backplate to the junction box using the provided machine screws.

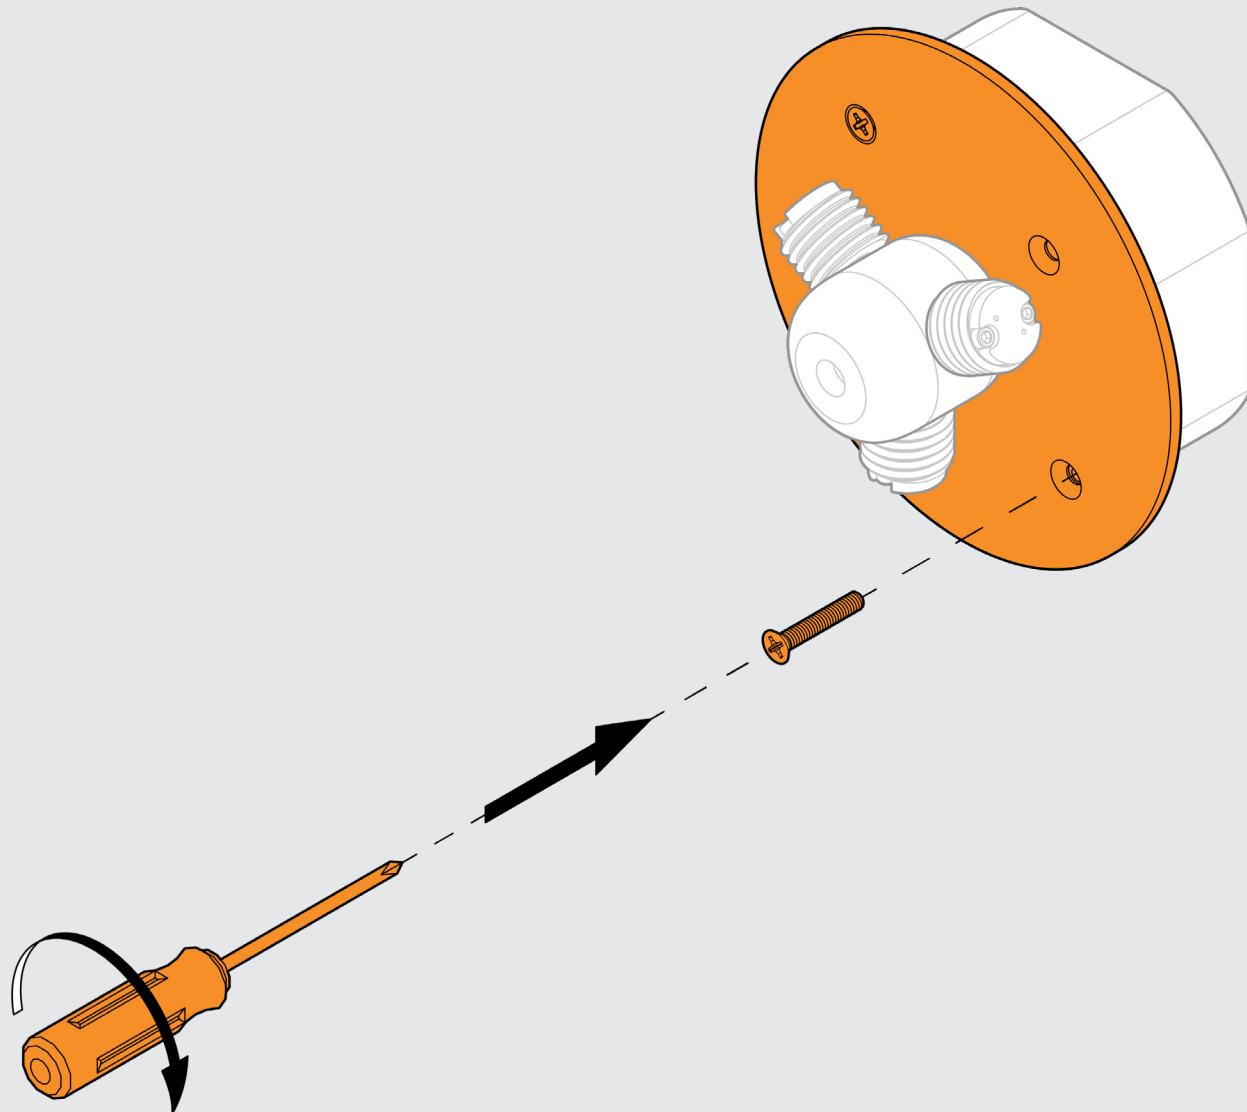

5

Insert the light bulbs into the fixture sockets.

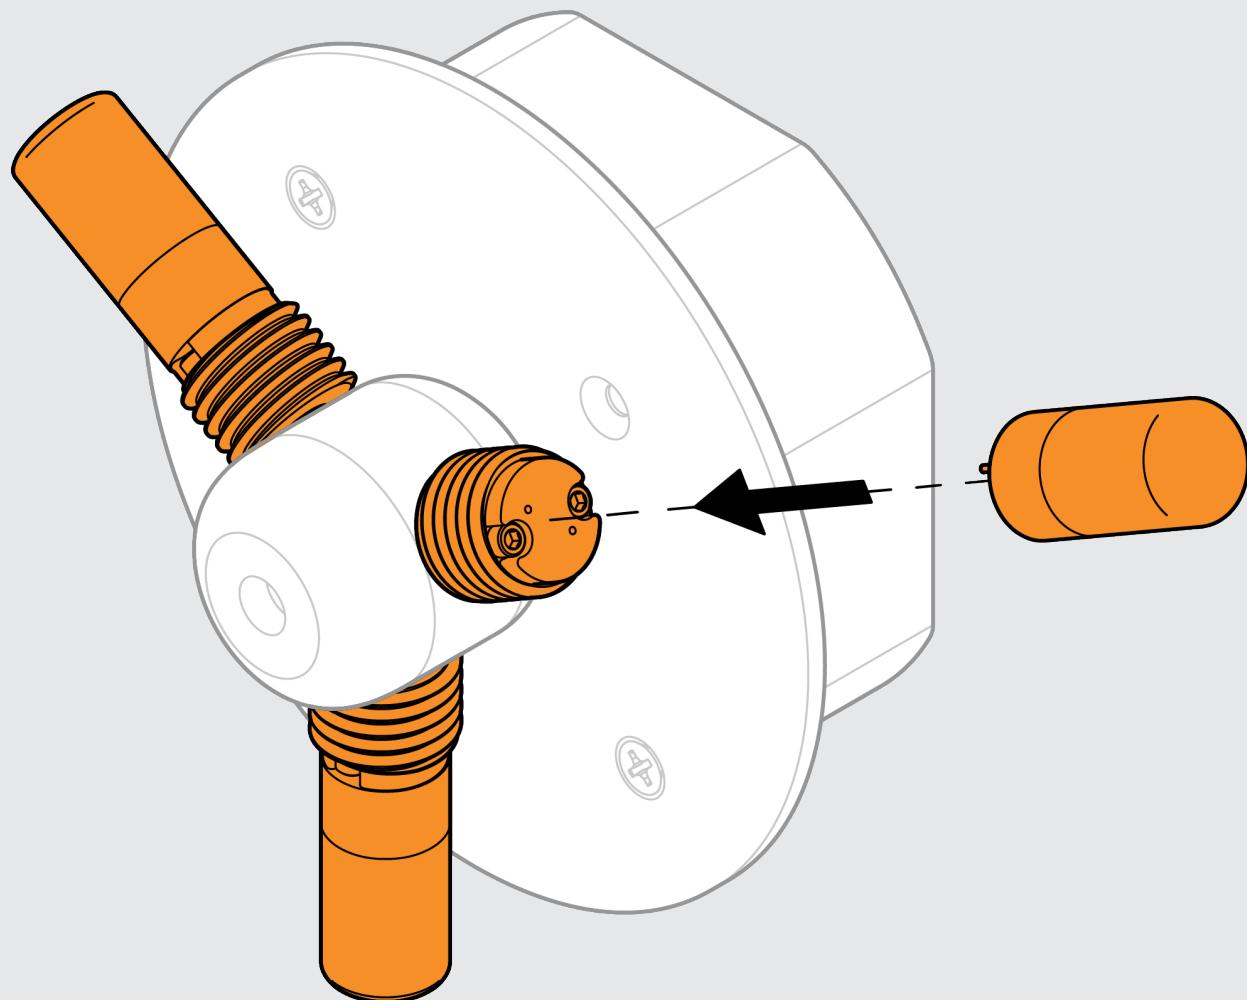

6

Screw the wood dome onto the fixture body to secure the wood dome into place.

