



Wood Minimalist

INSTALLATION GUIDE



HANDMADE
IN U.S.A.



WEAR GLOVES
DURING INSTALL

FRAGILE FINISHES

DANGER: ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.



+1 212 334 7333


www.alliedmaker.com • sales@alliedmaker.com



1




Inspect Contents

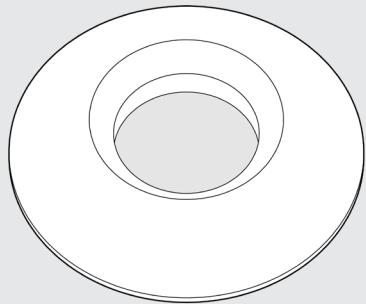


Wood Doughnut



Socket Cover Sleeve

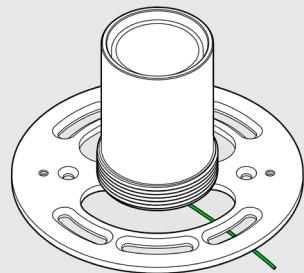


Fixture

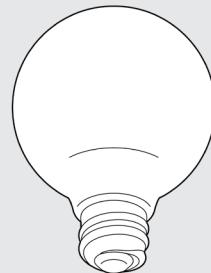

Light Bulb



2x Machine Screw

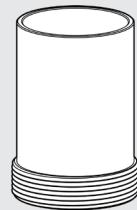


Socket Cover




Fixture Socket

Terminology

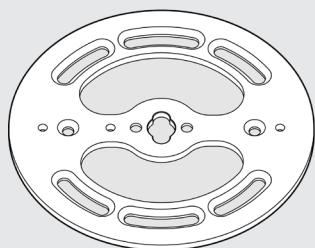


Backplate

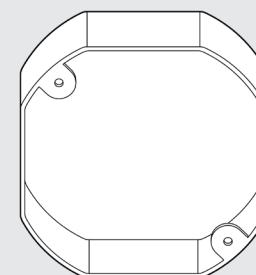

Junction Box


3

Unscrew the socket cover sleeve and then remove the wood doughnut.

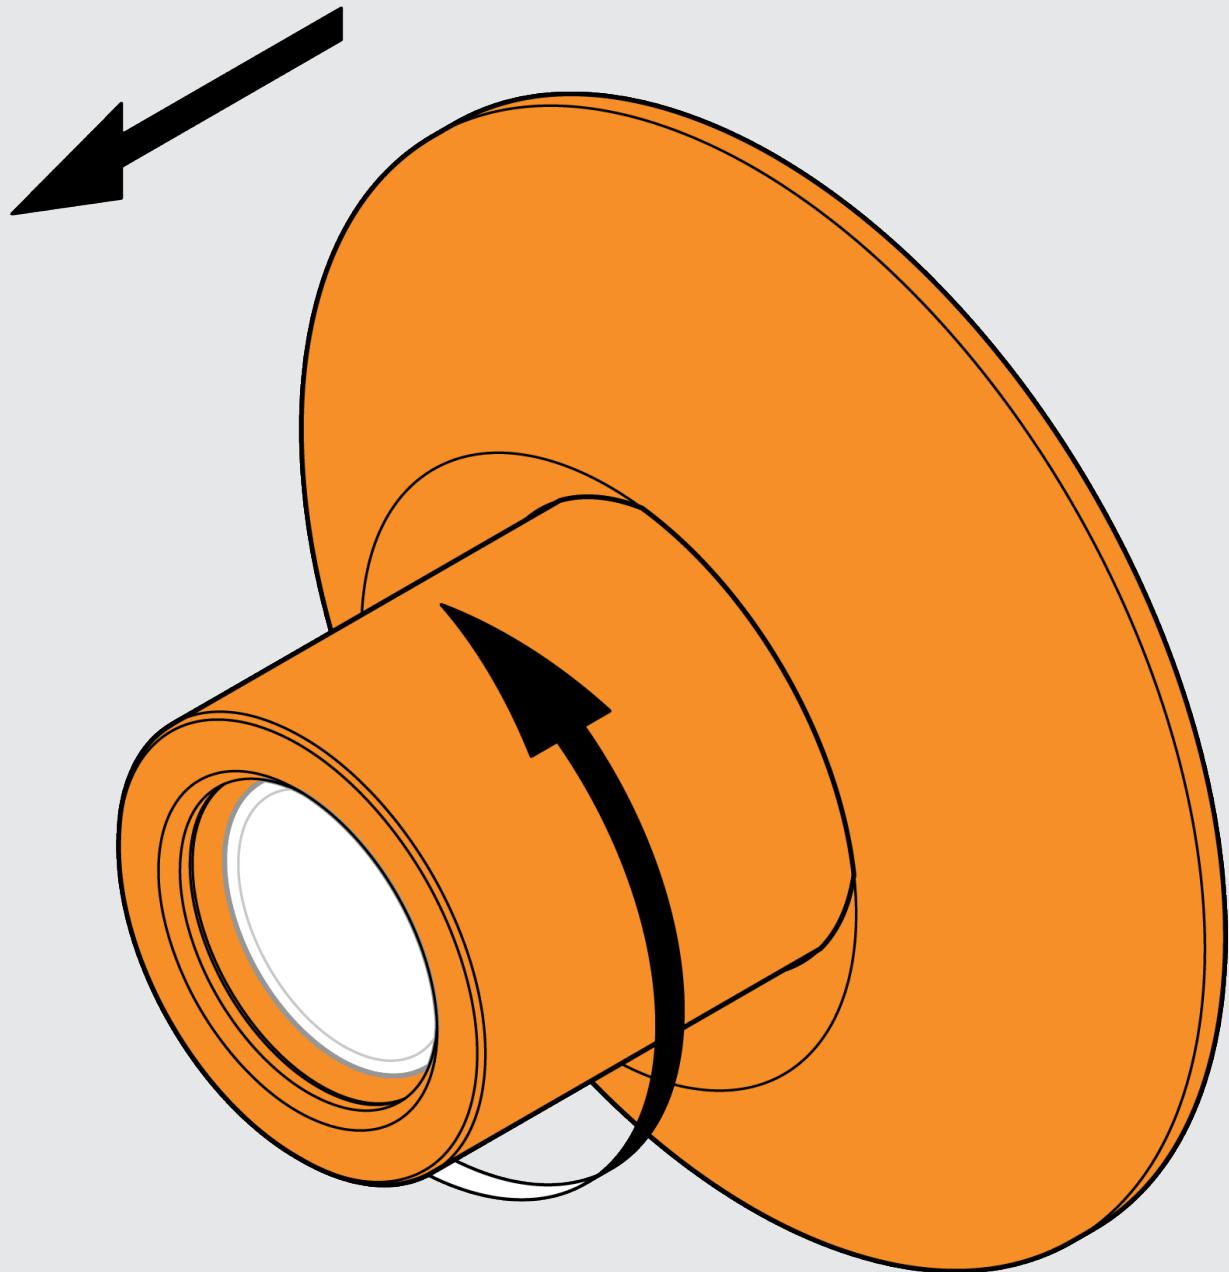


4

Mount the fixture backplate to the junction box using the provided machine screws.

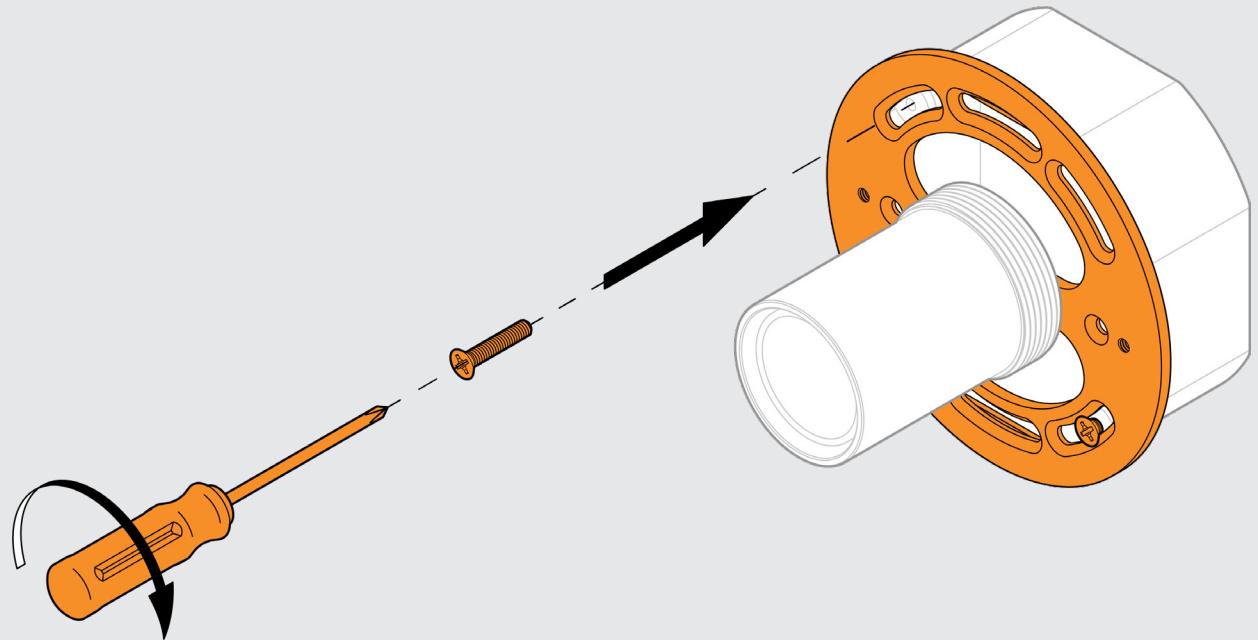


5

Connect the wires from the fixture to the wires from the junction box using the provided machine screws.

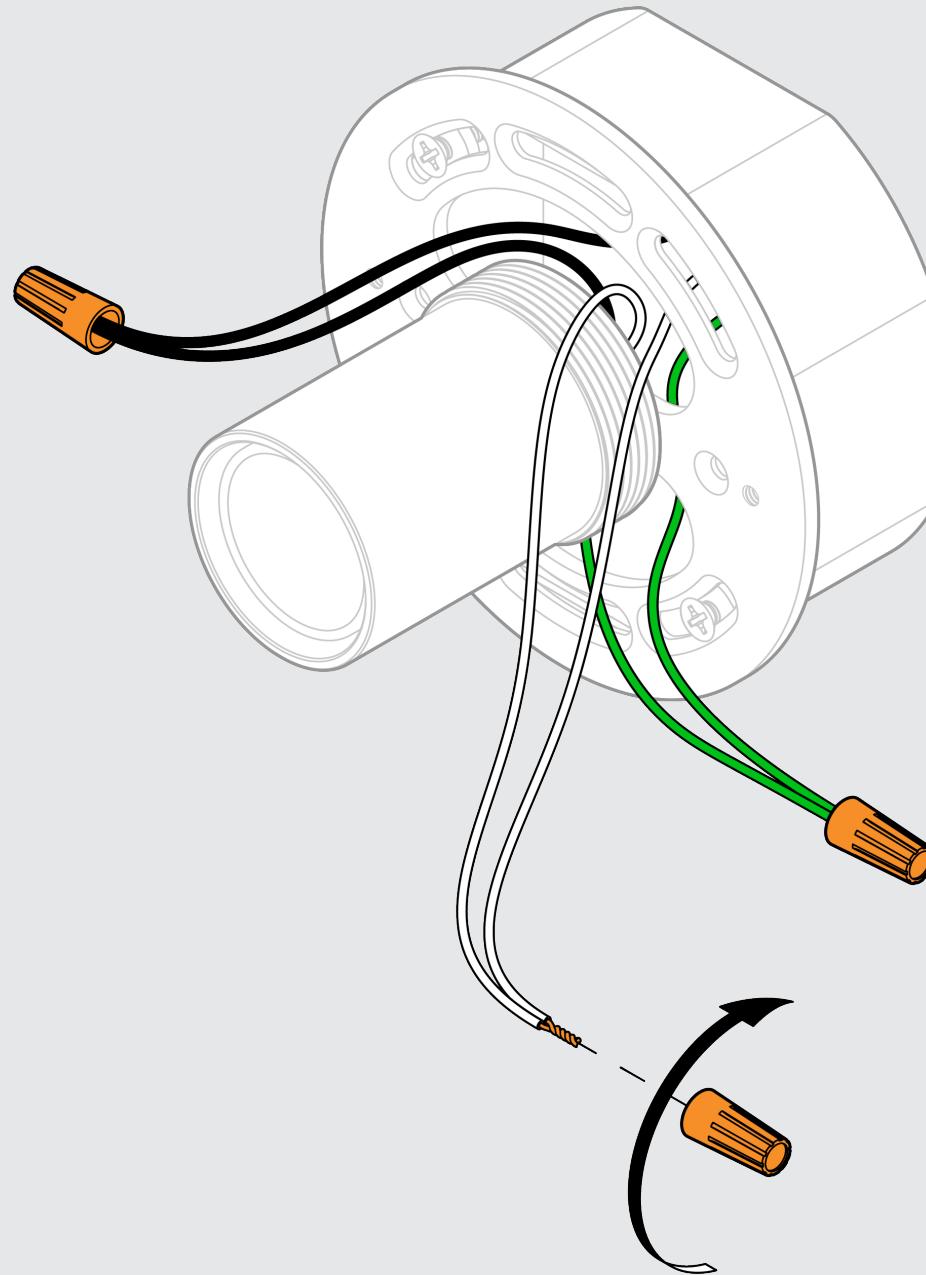


6

Screw the Socket Cover Sleeve
onto the socket cover.

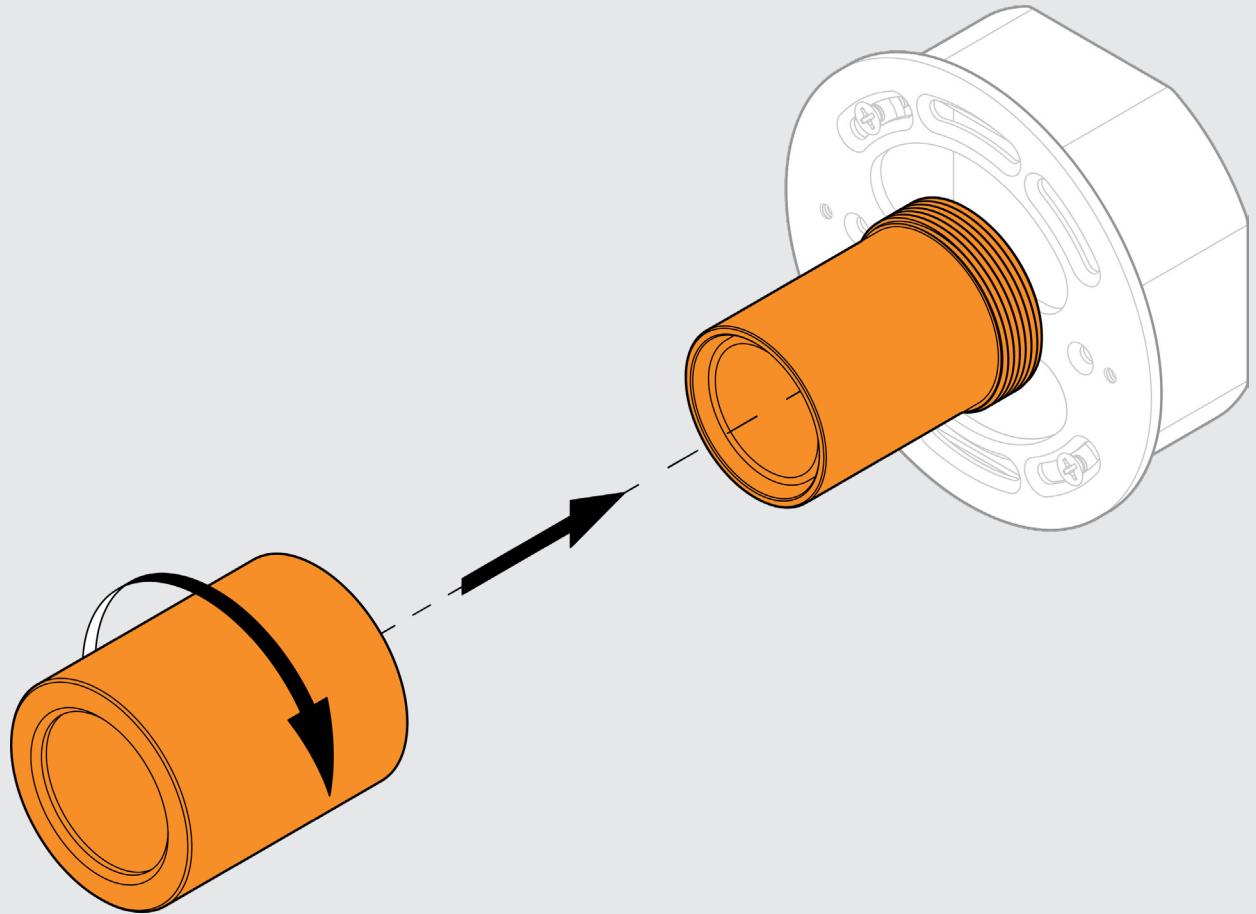

7

Place the wood doughnut over the socket cover sleeve and onto the backplate. It will magnetically attach to the backplate.

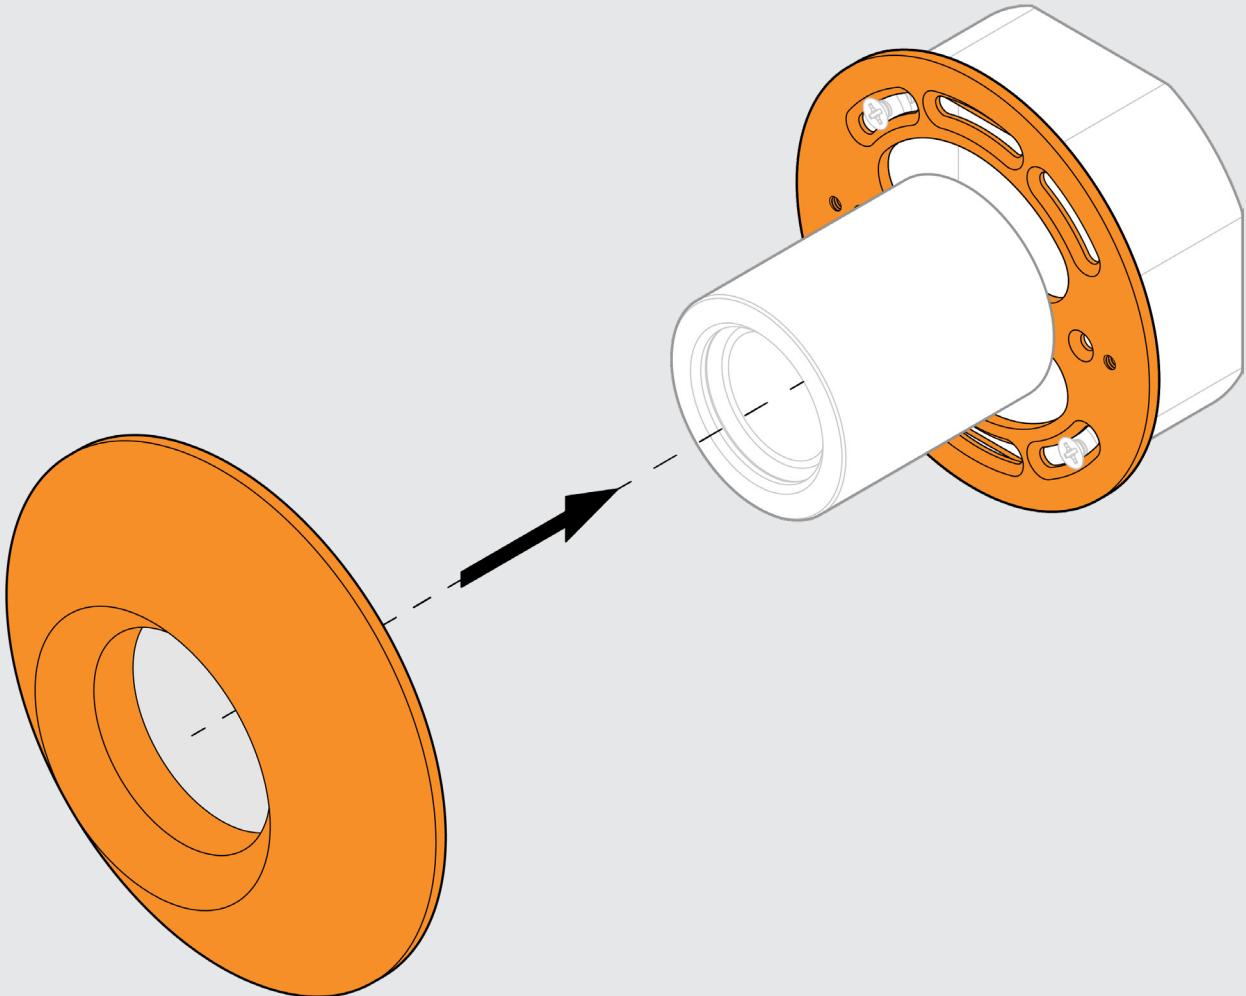

8

Screw the light bulb into the fixture socket.

