



ALLIED MAKER

MADE IN NEW YORK

# Bloom

Installation Guide

212-334-7333

[help@alliedmaker.com](mailto:help@alliedmaker.com)

**LIVING FINISHES**







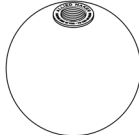
Wear Gloves!



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE  
INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND  
OPERATION OF THE PRODUCT AND HAZARDS INVOLVED



# Contents Included

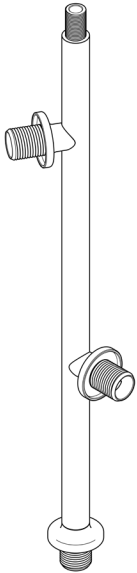
 <p>A vertical lighting fixture with a central rod, a mounting bracket at the top, and a base at the bottom.</p>	 <p>Two Phillips screws.</p>	 <p>A hex driver with a long handle.</p>
	 <p>A circular canopy with a central screw hole and a mounting bracket.</p>	 <p>Three cylindrical light bulbs.</p>
	 <p>A long, thin cylindrical hang tube.</p>	 <p>Three circular shades with a central mounting hole.</p>
<p>Lighting Fixture</p>	<p>2x Phillips Screw</p>	<p>1/16 Hex Driver</p>
	<p>Canopy</p>	<p>3x Light Bulb</p>
	<p>Hang Tube</p>	<p>3x Shade</p>

# 1

Using the provided hex driver ①  
loosen the set screw ②  
from the canopy ③

Remove the backplate ④

Remove the lock ring ⑤  
and ball stop ⑥

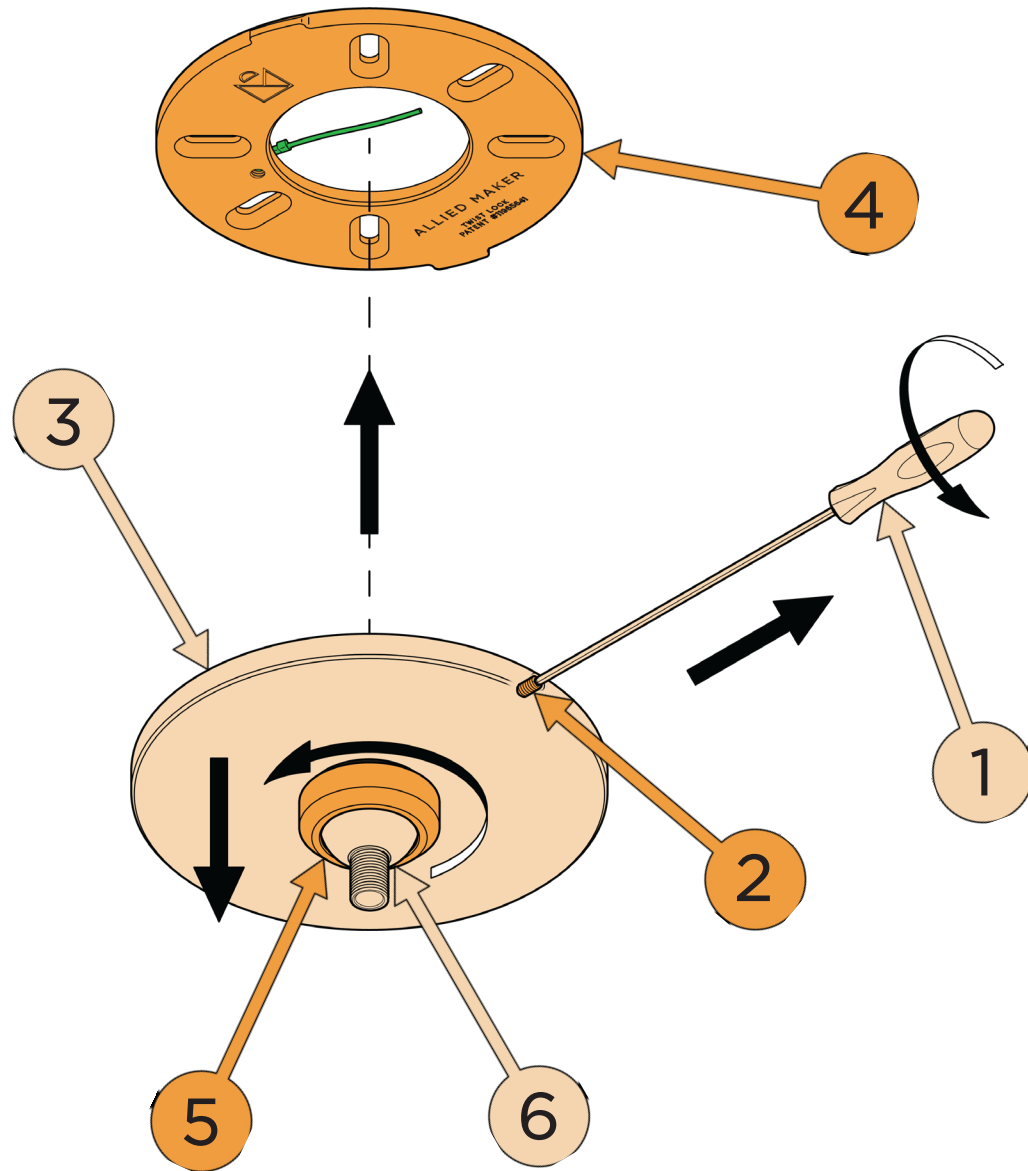


# 2

Mount the backplate ① onto the junction box ② using the provided phillips screws ③

**NOTE:** Make sure the two tabs on the backplate are rotated to a minimum of 20° from the intended mounting alignment. This will ensure the set screw has enough space to fully secure the canopy and backplate into place.

**CAUTION:** Do not overtighten the phillips screws. Overtightening will prevent the two tabs on the backplate from engaging with the channel inside the canopy.

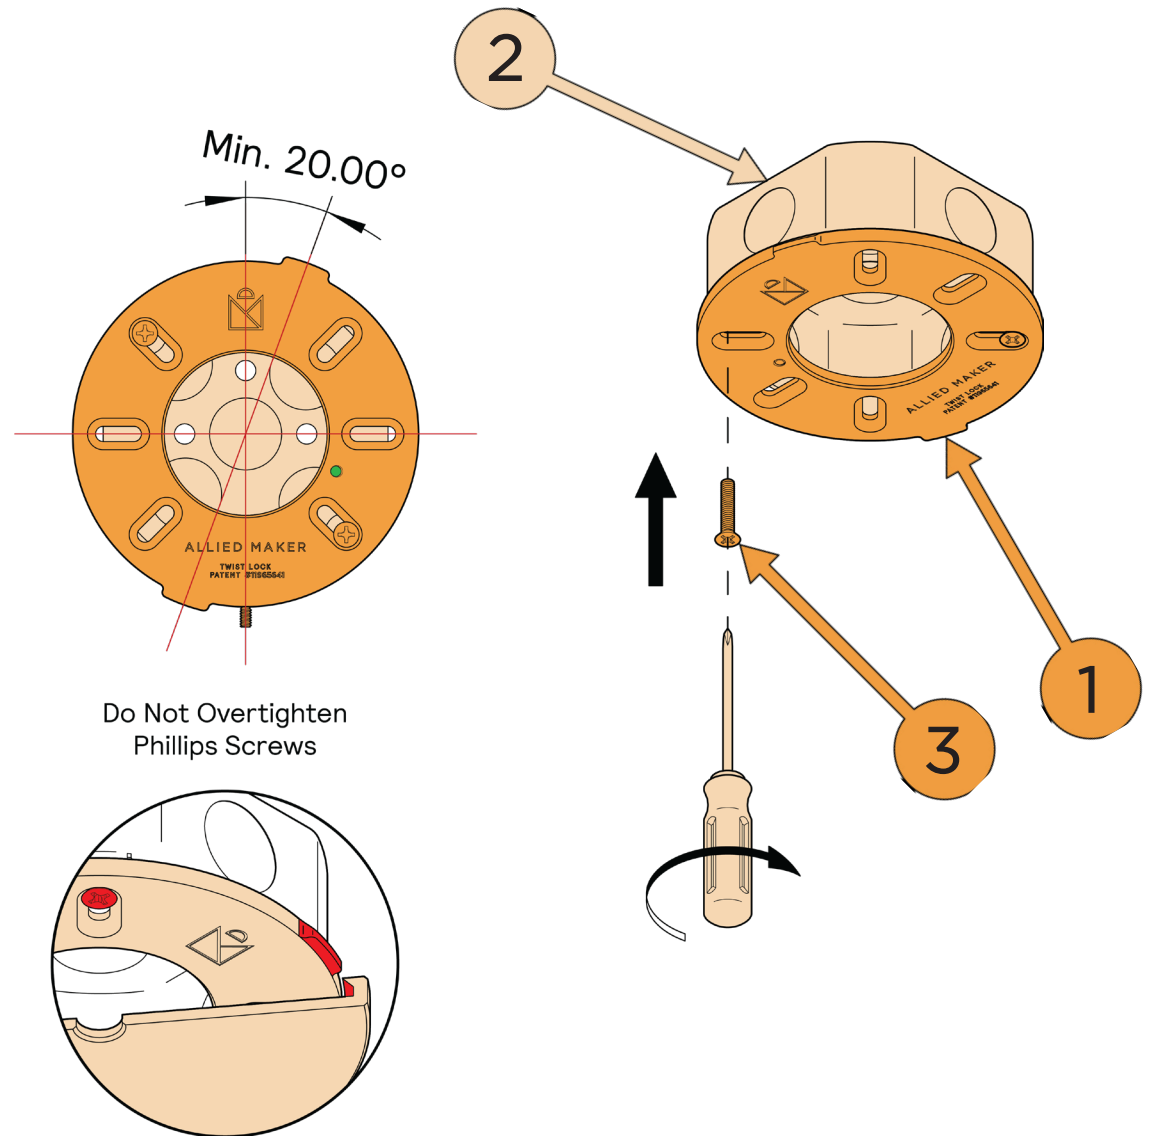


# 3

Connect the ground wire from the junction box ① with the ground wire from the backplate ② using a wire nut ③

Travel the wires from the junction box ① through the canopy ④


Align the tabs on the backplate ② with the tab openings on the canopy ④

Place the canopy ④ over the backplate ② and rotate the canopy ④ to the desired position.

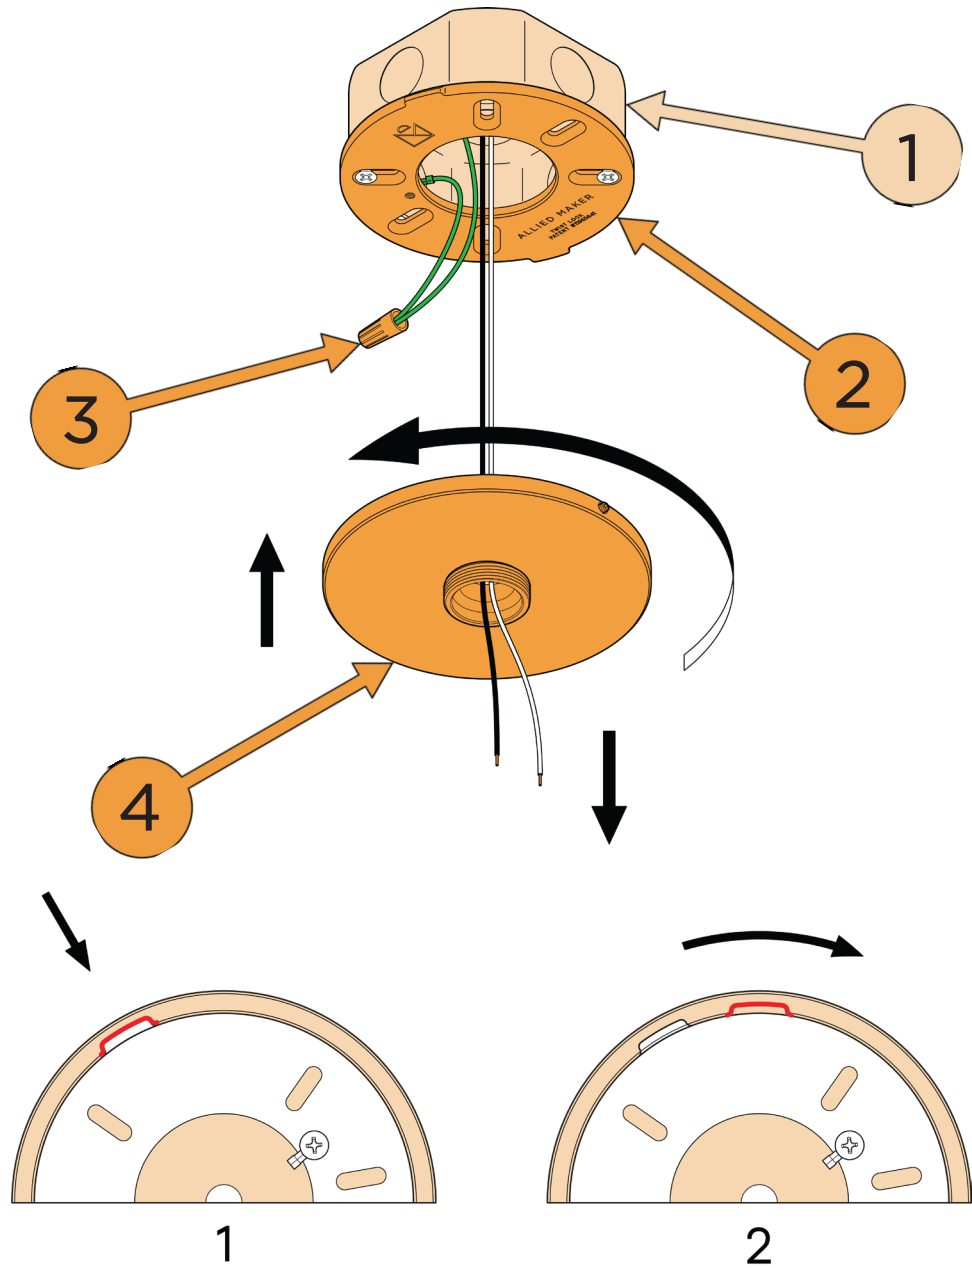

# 4

Using the hex driver ① tighten the set screw ② in the canopy ③ to secure the canopy ③ into place.

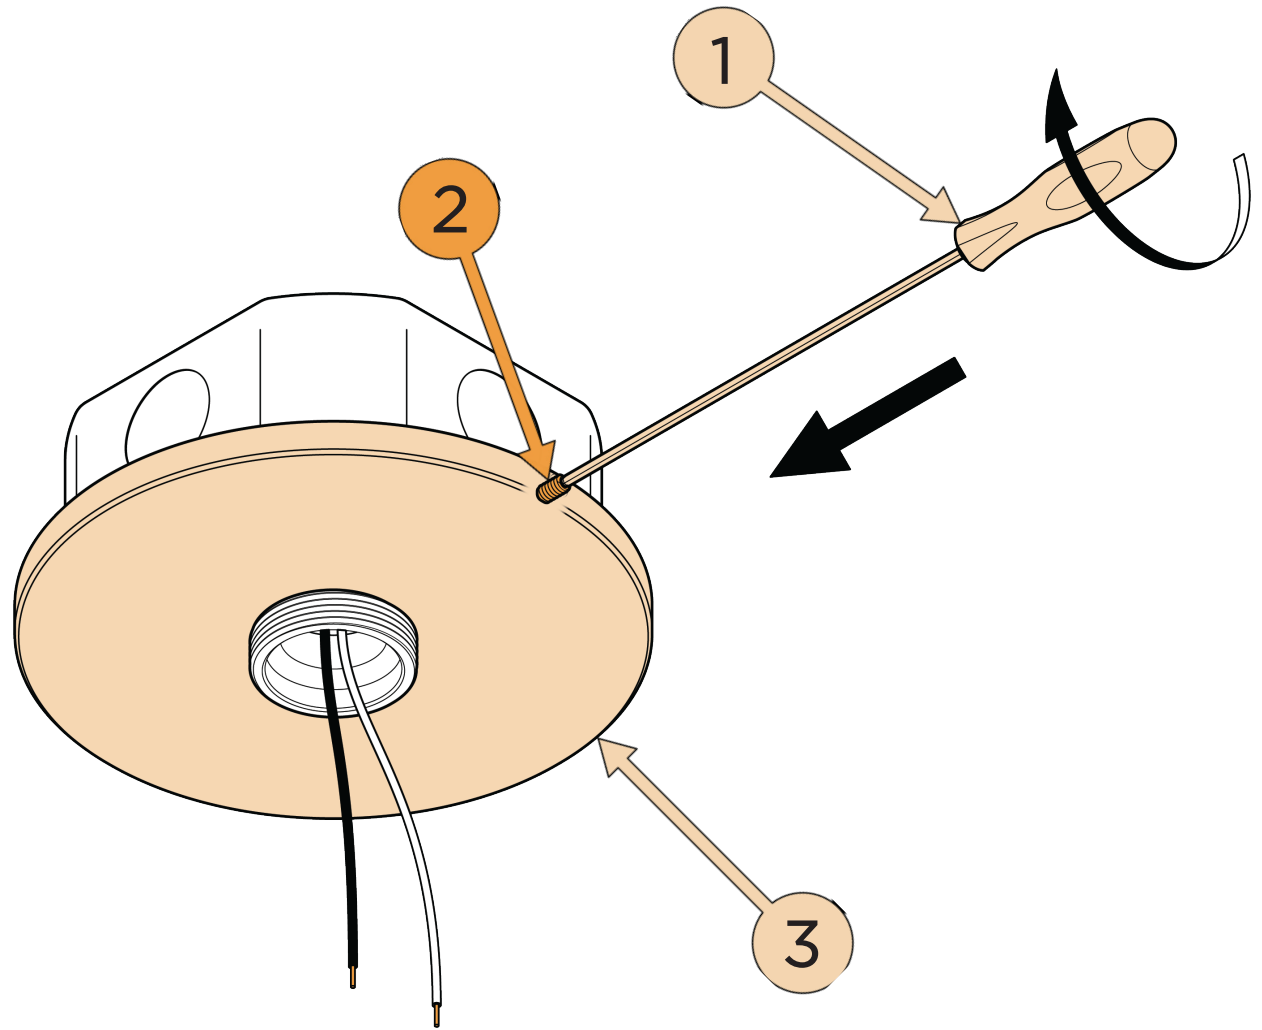


# 5

Travel the wires from the lighting fixture ① through the hang tube ②

Screw the hang tube ② onto the lighting fixture ①

Continue to travel the wires through the lock ring ③ and then the ball stop ④

Screw the ball stop ④ onto the hang tube ②

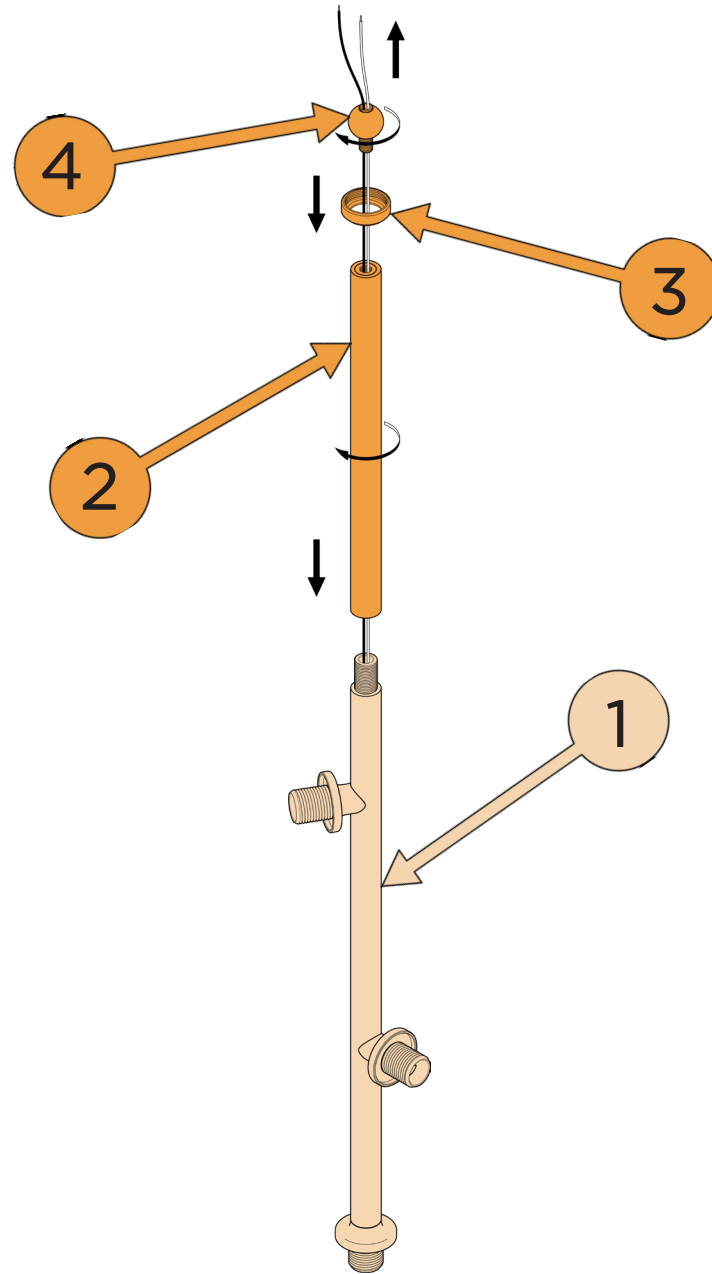


# 6

Connect the wires from the lighting fixture with the wires from the junction box ① using wire nuts ②


Insert the ball stop ③ into the adapter ④ and hold in place.

Carry the lock ring ⑤ up the hang tube ⑥ and screw the lock ring ⑤ onto the adapter ④ to secure the lighting fixture into place.

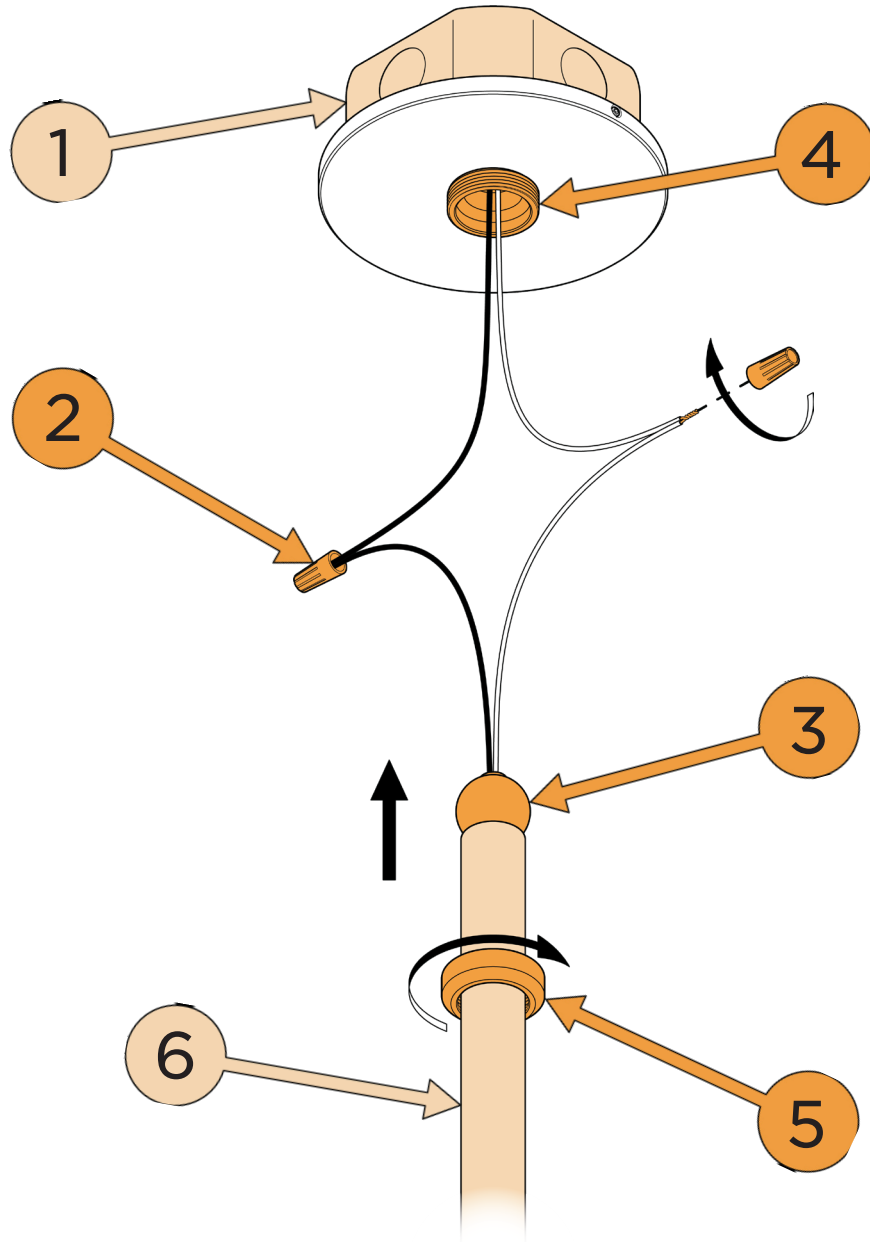

# 7

Insert the light bulbs ①  
into the fixture sockets ②

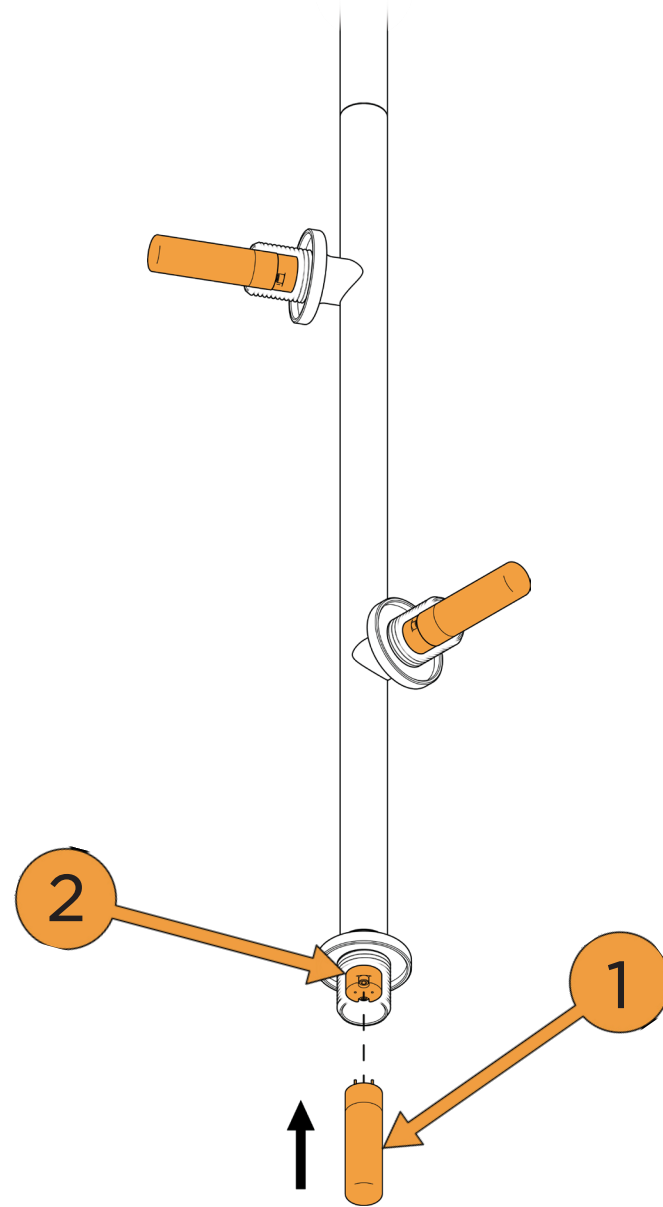

# 8

Screw the glass ①  
onto the socket covers ②

