



ALLIED MAKER

MADE IN NEW YORK

# Buoy Pendant 09”

Installation Guide

212-334-7333

[help@alliedmaker.com](mailto:help@alliedmaker.com)

**LIVING FINISHES**












Wear Gloves!



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE  
INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND  
OPERATION OF THE PRODUCT AND HAZARDS INVOLVED


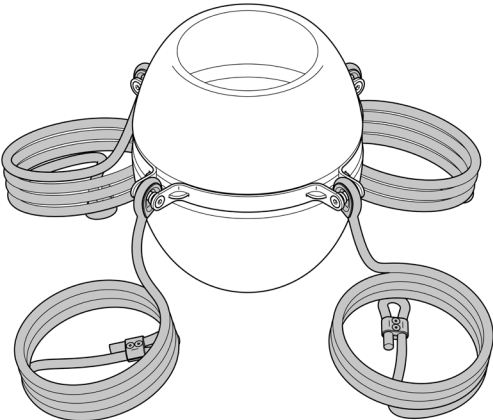
# Contents Included

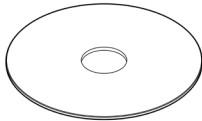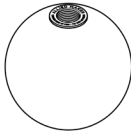
 <p>Canopy</p>	 <p>Lighting Fixture</p>	 <p>Hooks</p>	 <p>Hang Tube</p>
 <p>Shade</p>	 <p>Plate Ring</p>	 <p>Light Bulb</p>	 <p>2x Phillips Screw</p>
	 <p>Acrylic Plate</p>	 <p>Glass</p>	 <p>1/16 Hex Driver</p>

# 1

Using the provided hex driver ①  
loosen the set screw ②  
from the canopy ③

Remove the backplate ④

Remove the lock ring ⑤  
and ball stop ⑥

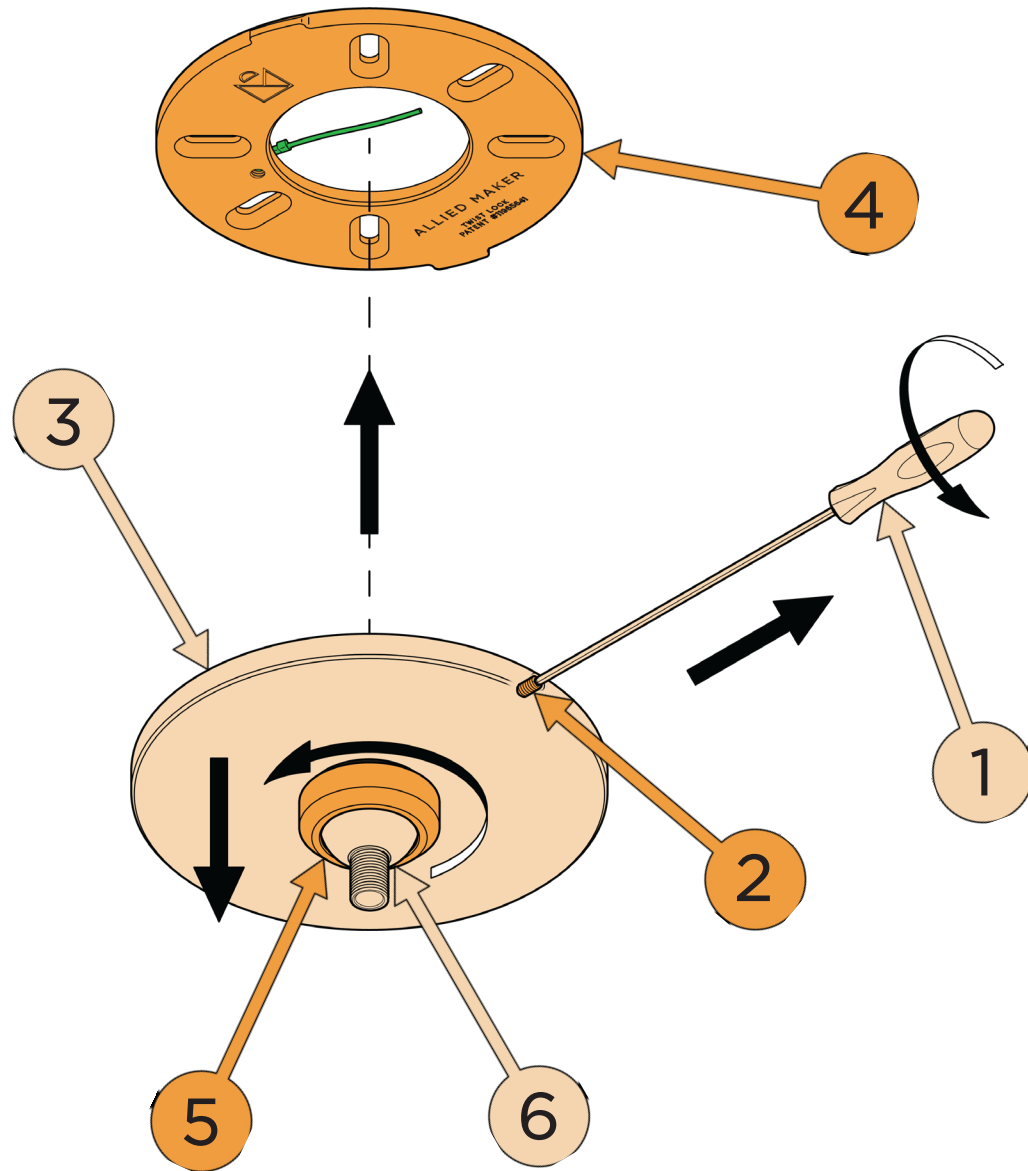


# 2

Mount the backplate ① onto the junction box ② using the provided phillips screws ③

**NOTE:** Make sure the two tabs on the backplate are rotated to a minimum of 20° from the intended mounting alignment. This will ensure the set screw has enough space to fully secure the canopy and backplate into place.

**CAUTION:** Do not overtighten the phillips screws. Overtightening will prevent the two tabs on the backplate from engaging with the channel inside the canopy.

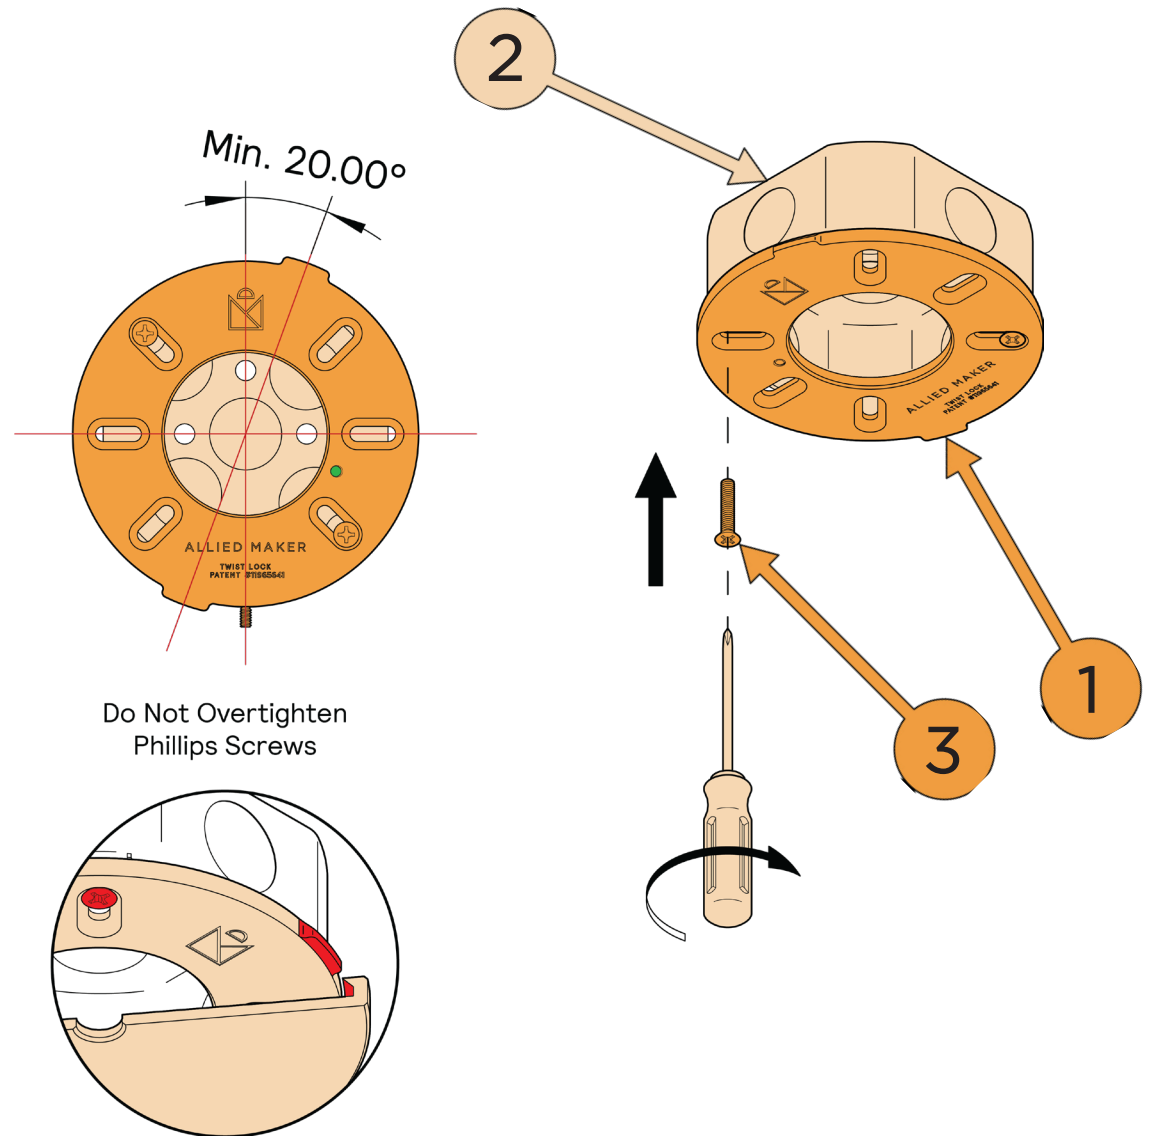


# 3

Connect the ground wire from the junction box ① with the ground wire from the backplate ② using a wire nut ③

Travel the wires from the junction box ① through the canopy ④


Align the tabs on the backplate ② with the tab openings on the canopy ④

Place the canopy ④ over the backplate ② and rotate the canopy ④ to the desired position.

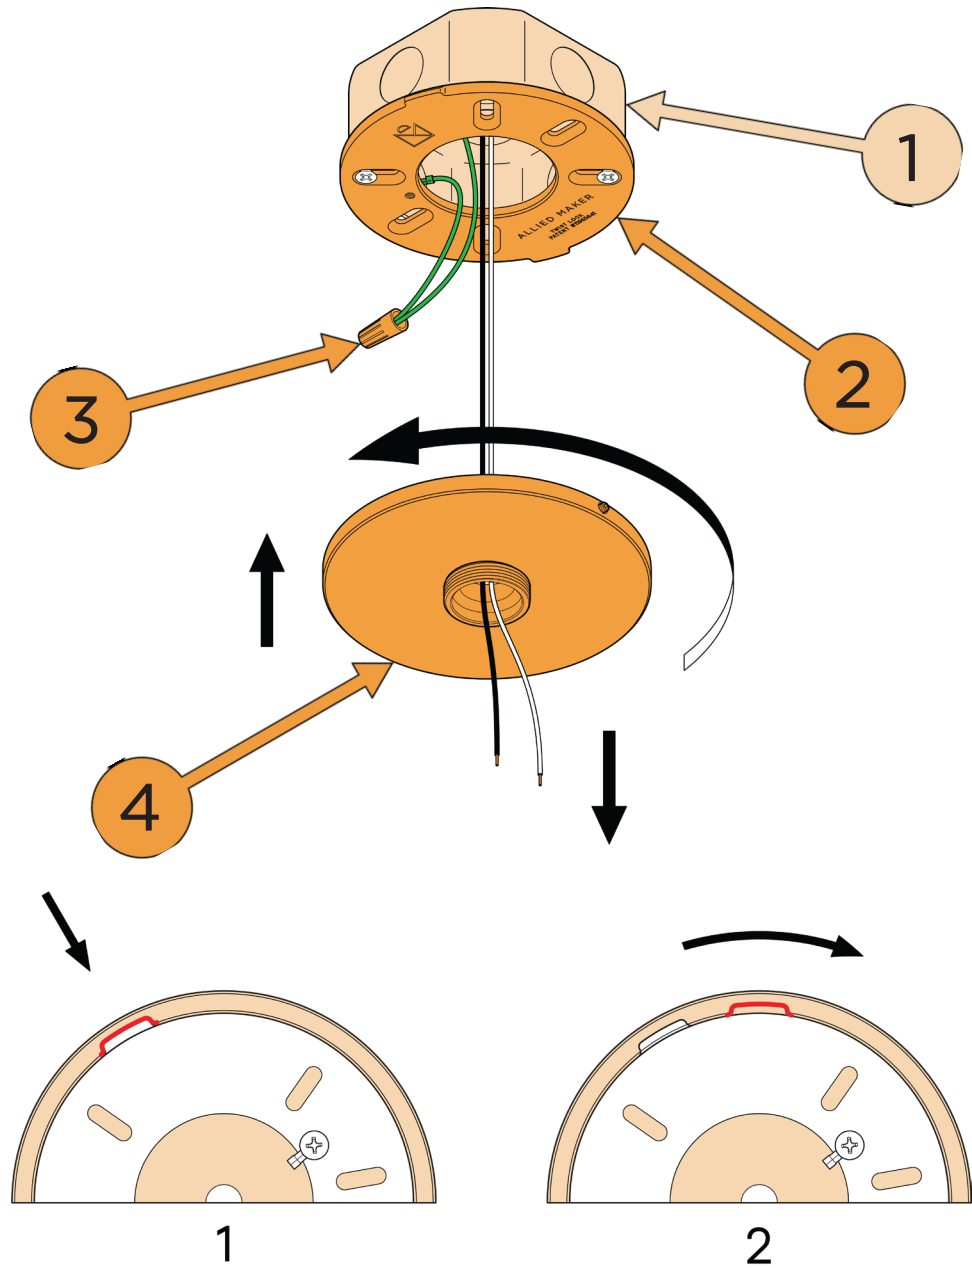


# 4

Using the hex driver ① tighten the set screw ② in the canopy ③ to secure the canopy ③ into place.

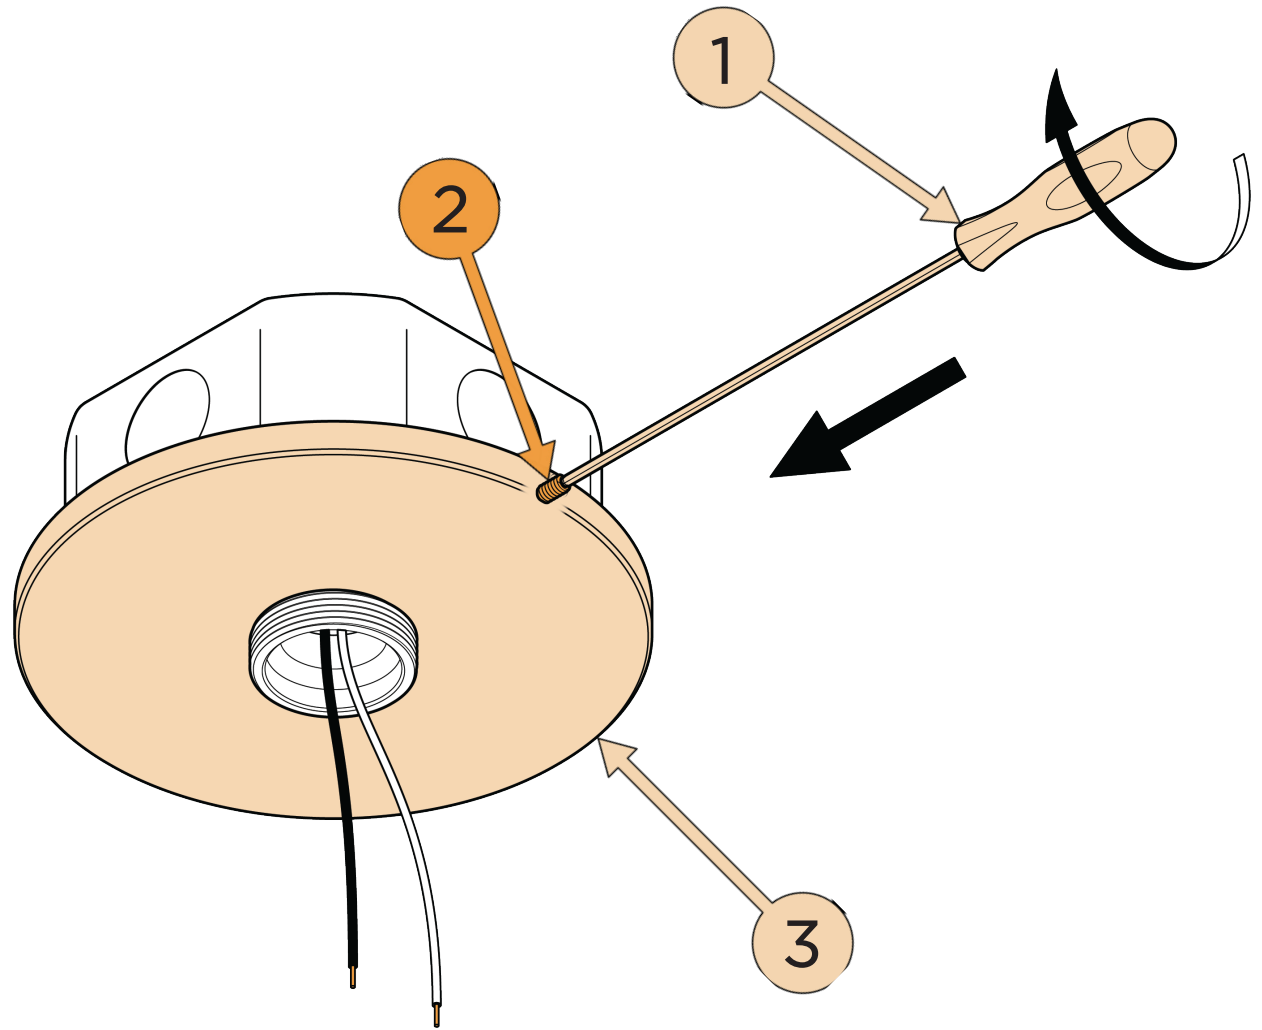

# 5


Travel the acrylic plate ①  
and then the plate ring ②  
down the hang tube ③

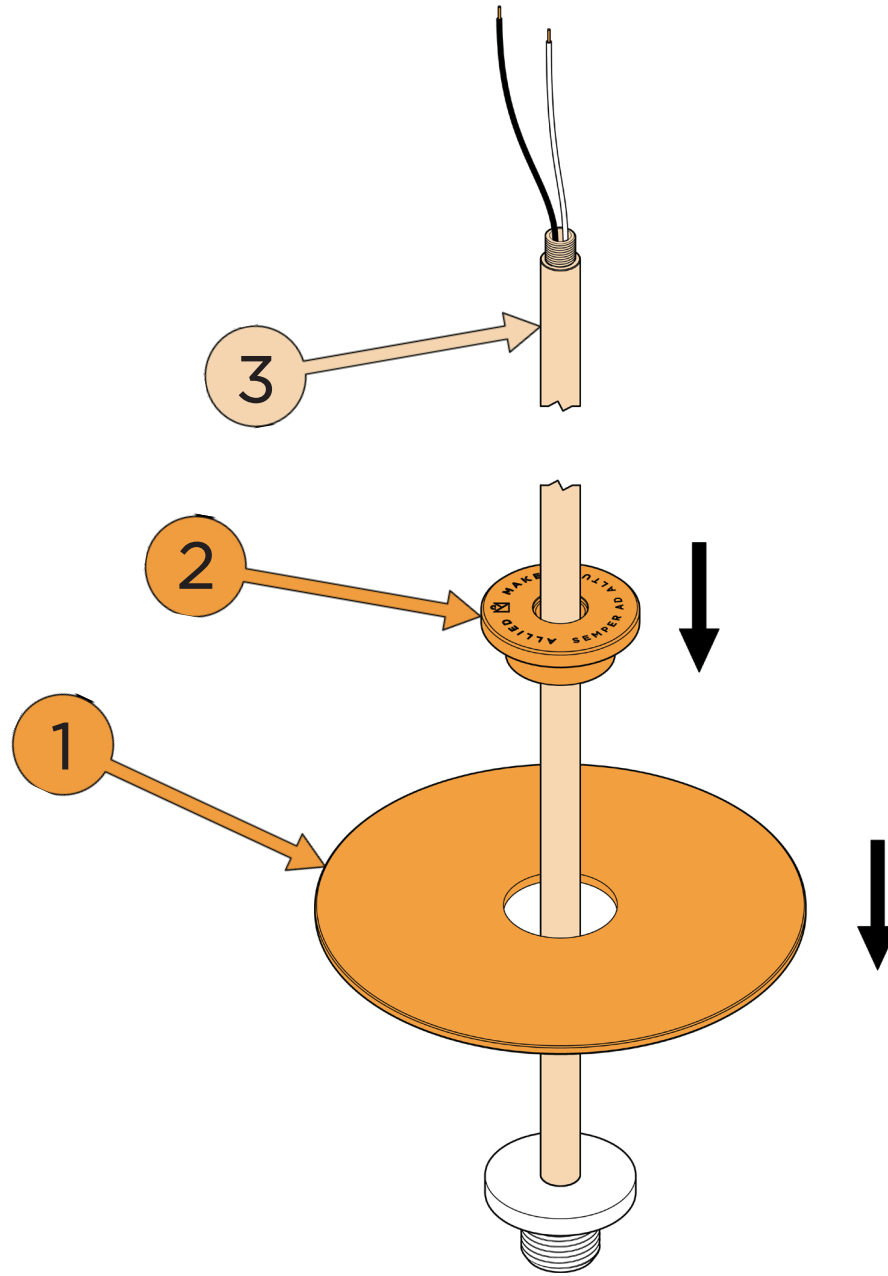

# 6

Travel the wires through the hooks ①  
and then the hang tube ②

Screw the hang tube ②  
onto the lighting fixture ③  
to secure the hooks ①  
into place.

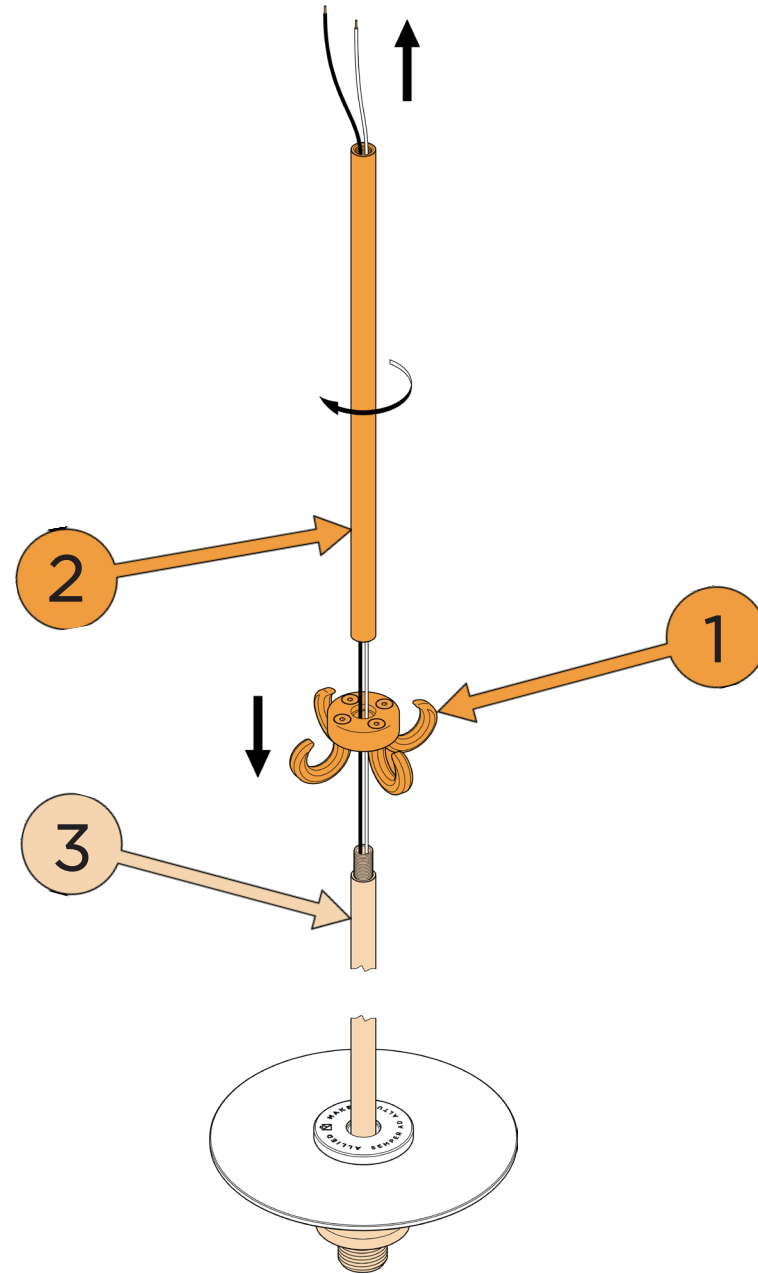


# 7

Continue to travel the wires through the lock ring ① and the ball stop ②

Carry the lock ring ① down the hang tube ③

Screw the ball stop ② onto the hang tube ③

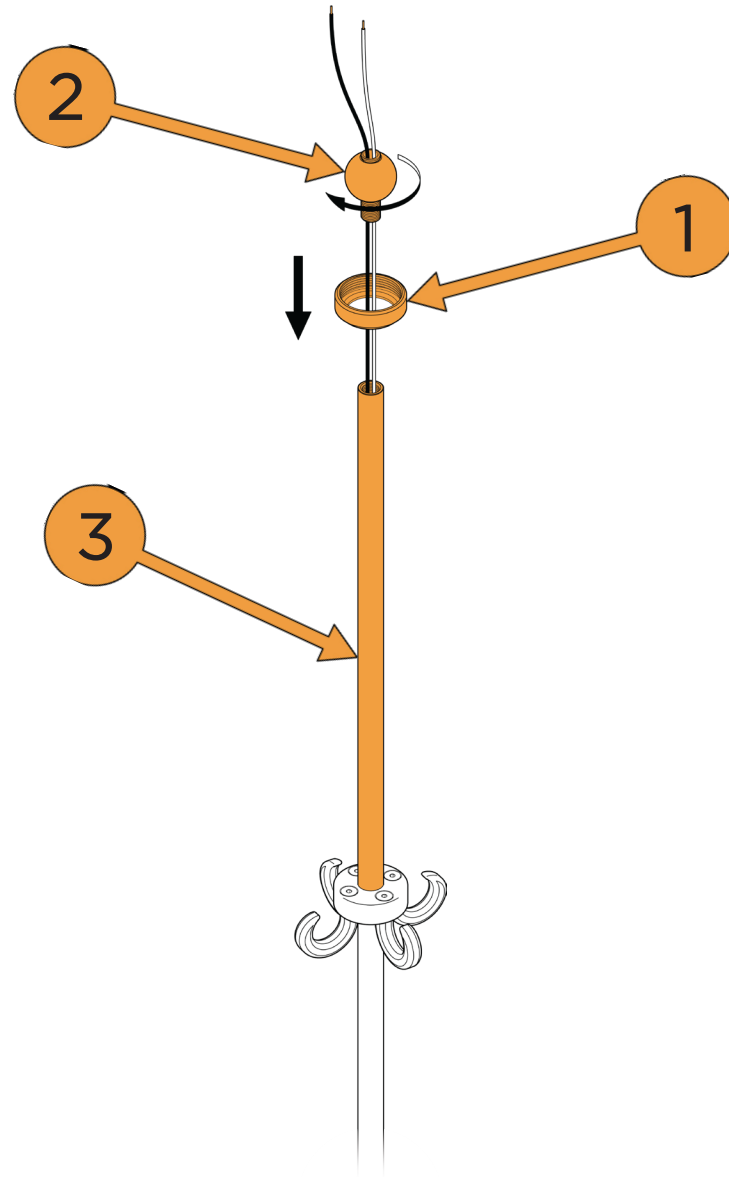


# 8

Connect the wires from the **lighting fixture** ① with the wires from the **junction box** ② using **wire nuts** ③


Insert the wires and then the **ball stop** ④ inside the **adapter** ⑤ and hold in place.

Screw the **lock ring** ⑥ onto the **adapter** ⑤ to secure the **ball stop** ④ into place.

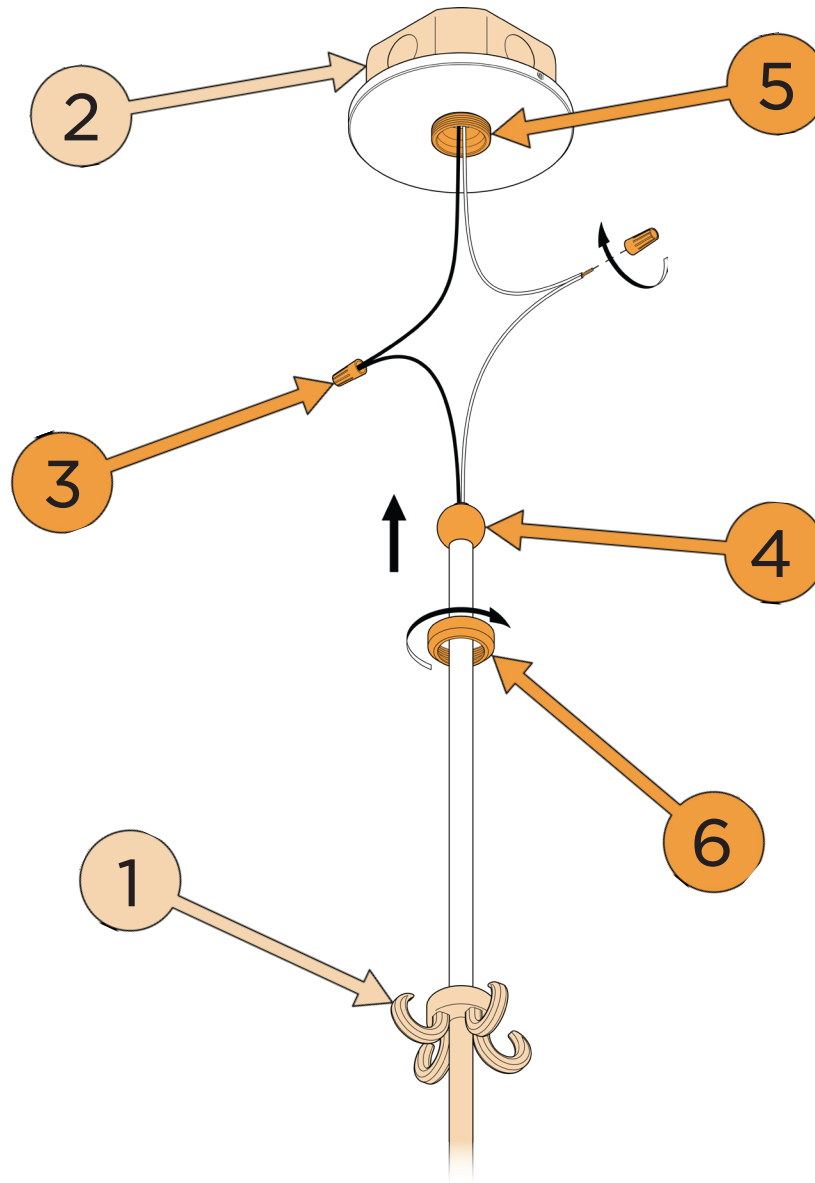

# 9


Insert the light bulb ①  
into the fixture socket ②

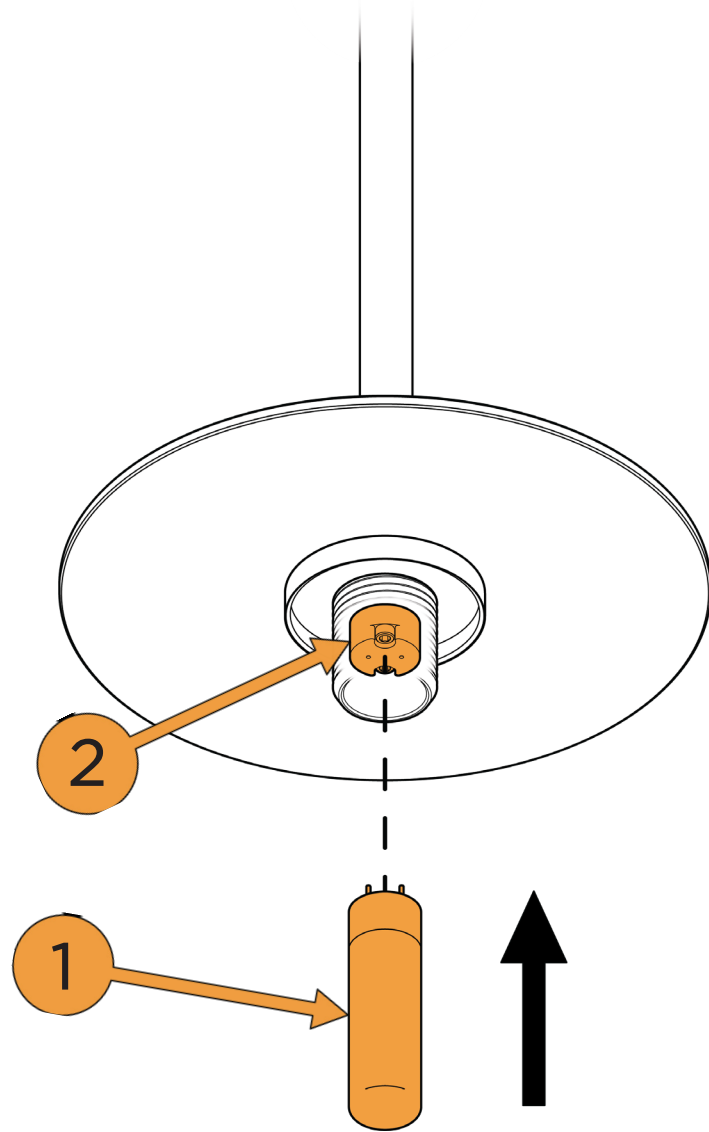

# 9

Screw the glass ①  
onto the socket cover ②

**CAUTION:** Align threads properly  
for a smooth rotation before  
twisting to avoid jamming.  
**Do not overtighten the glass.**

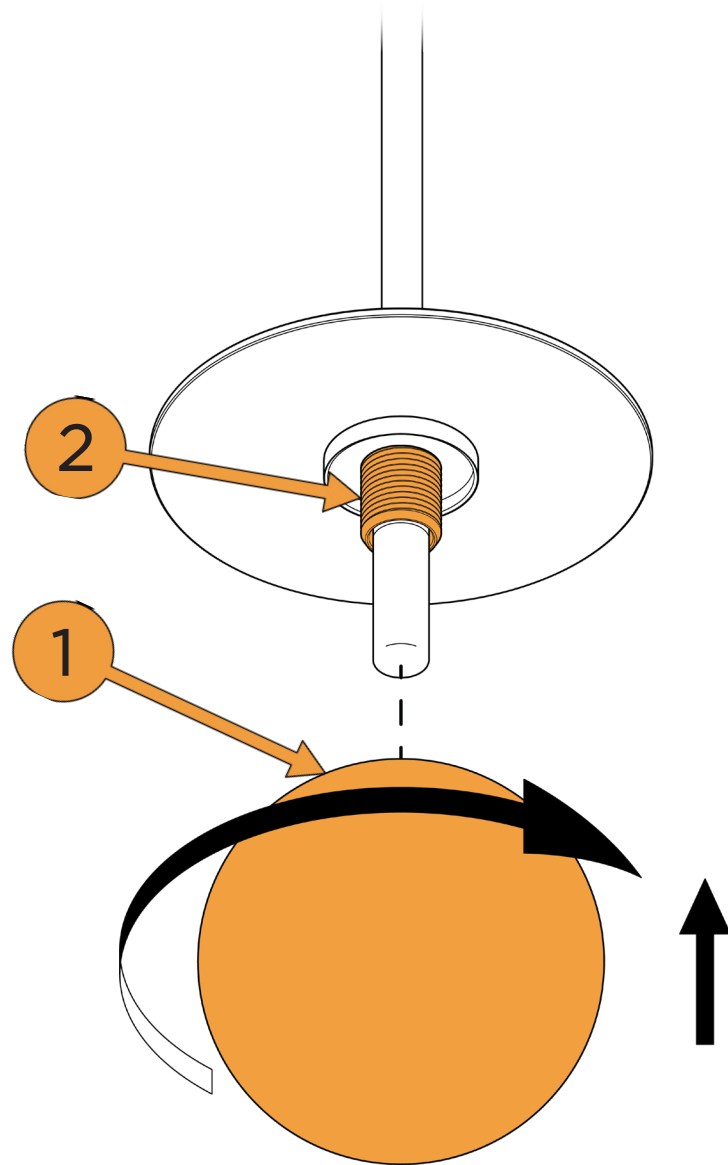

# 10

Align the shade ① over the glass and carefully lift the shade ① to give each rope ② slack.

Place each rope ② onto the hooks ③

Release the shade ① to secure the shade ① into place.

\*Lift the shade approximately 2-3" at most. Lifting more than 3" will hit the glass inside.

**NOTE: 2 Person Install.**

