Bastion 5” Pendant

INSTALLATION GUIDE

HANDMADE
IN U.S.A.

WEAR GLOVES
DURING INSTALL

FRAGILE FINISHES

DANGER: ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.

+1 212 334 7333

www.alliedmaker.com • sales@alliedmaker.com

1

Inspect Contents

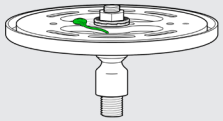

Canopy Assembly

2x Machine Screw

Light Bulb

Fixture



Hang Rod

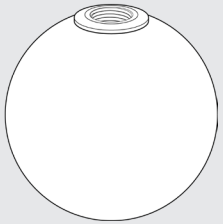

Glass

Terminology

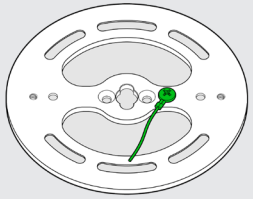

Universal Backplate

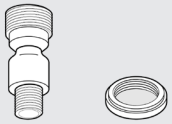

Hang Straight
&
Knurled Ring



Phillips Screwdriver
(Not Included)

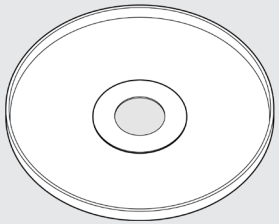

Canopy

Socket Cover
&
Fixture Socket

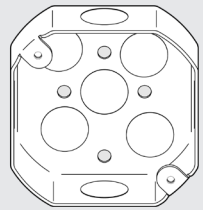

Junction Box
(Not Included)

3

Preparation

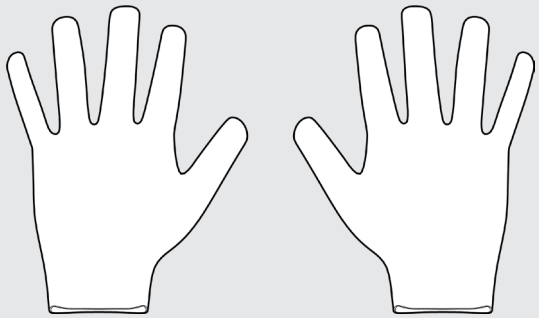

Nitrile Gloves

4

Travel the wires from the fixture through the hang rod.

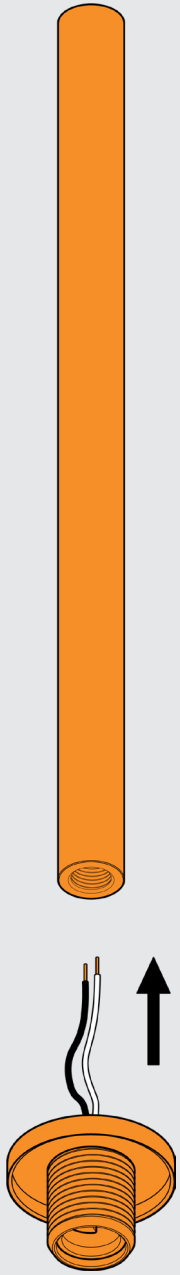

5

Screw the hang rod
onto the fixture.

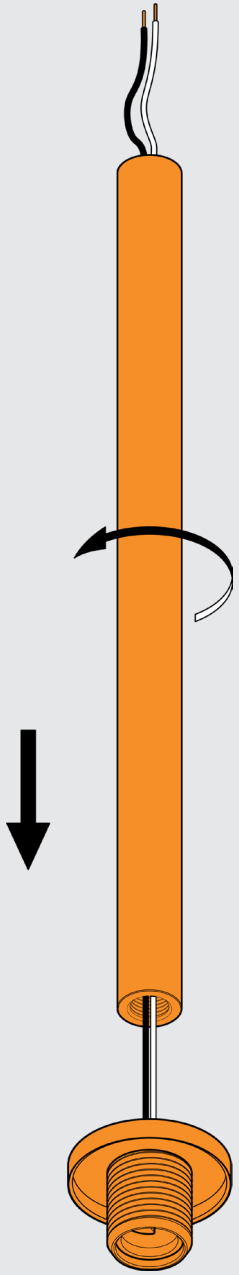

6

Travel the wires through the hang straight on the canopy assembly. Then, screw the hang straight onto the hang rod.

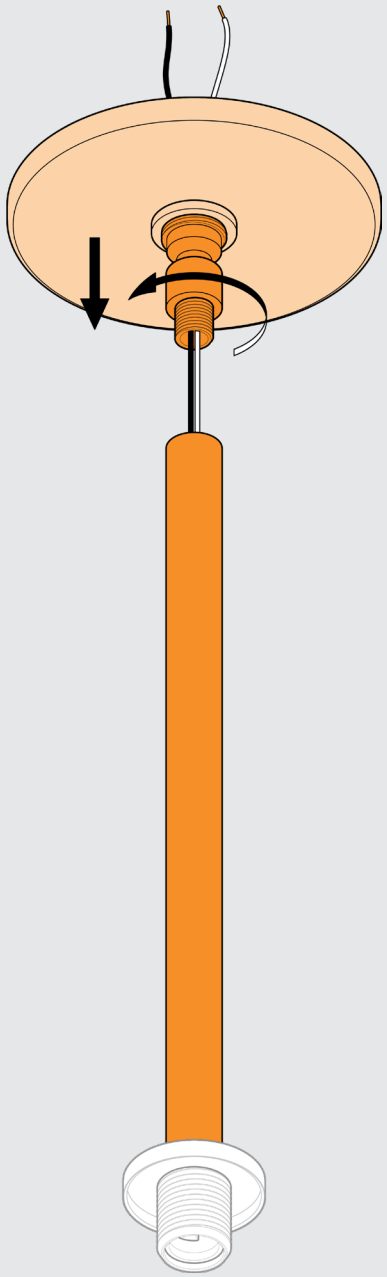

7

Unscrew the knurled ring from the hang straight and then carry the canopy and knurled ring down.

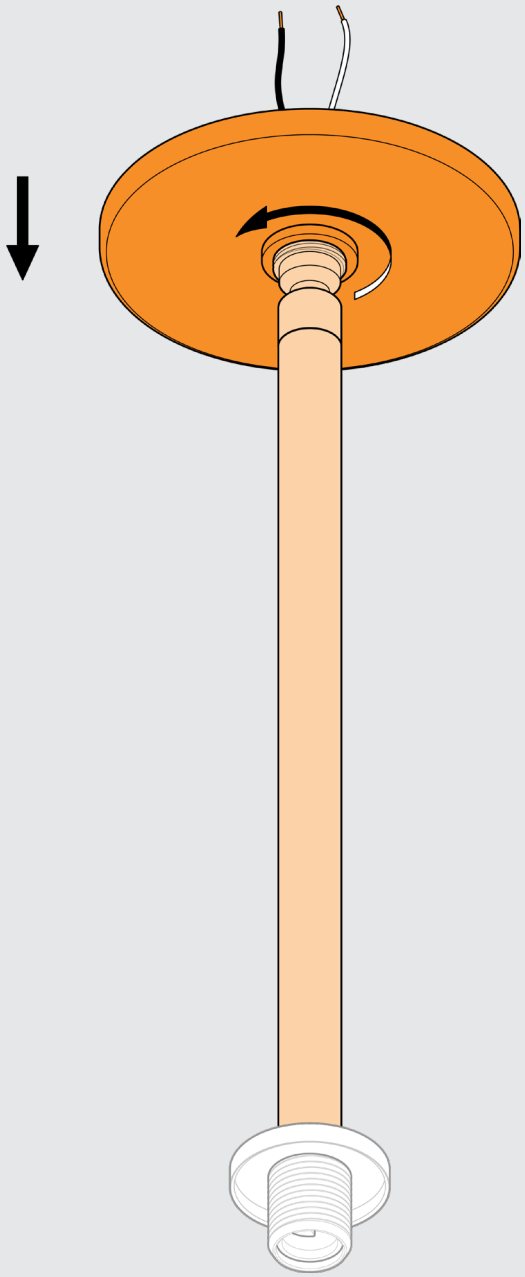

8

Mount the universal backplate onto the junction box using the provided machine screws.

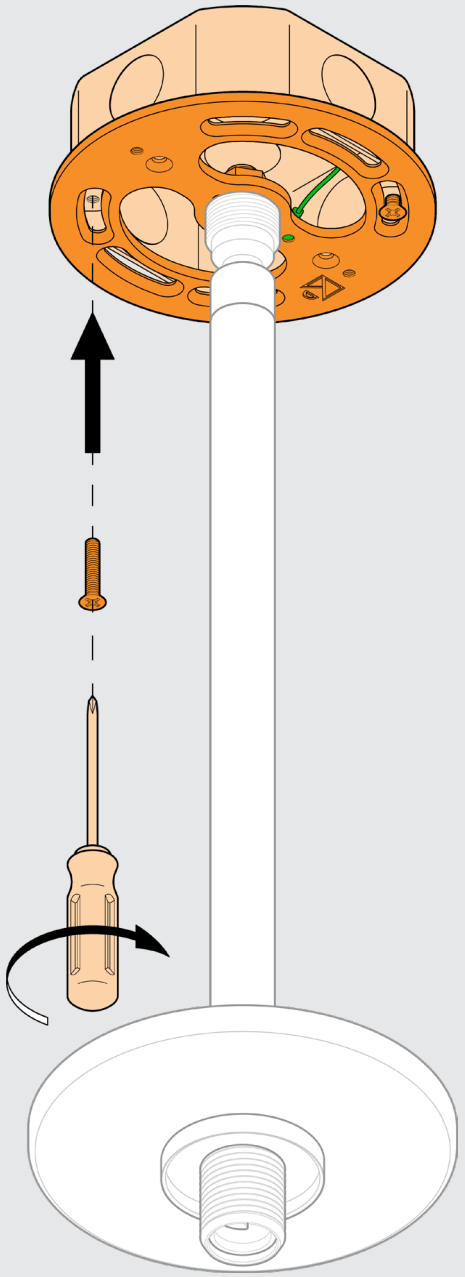

9

Connect the ground wire from the universal backplate with the ground wire from the junction box using a wire nut. Then, connect the wires from the fixture to the wires from the junction box using wire nuts.

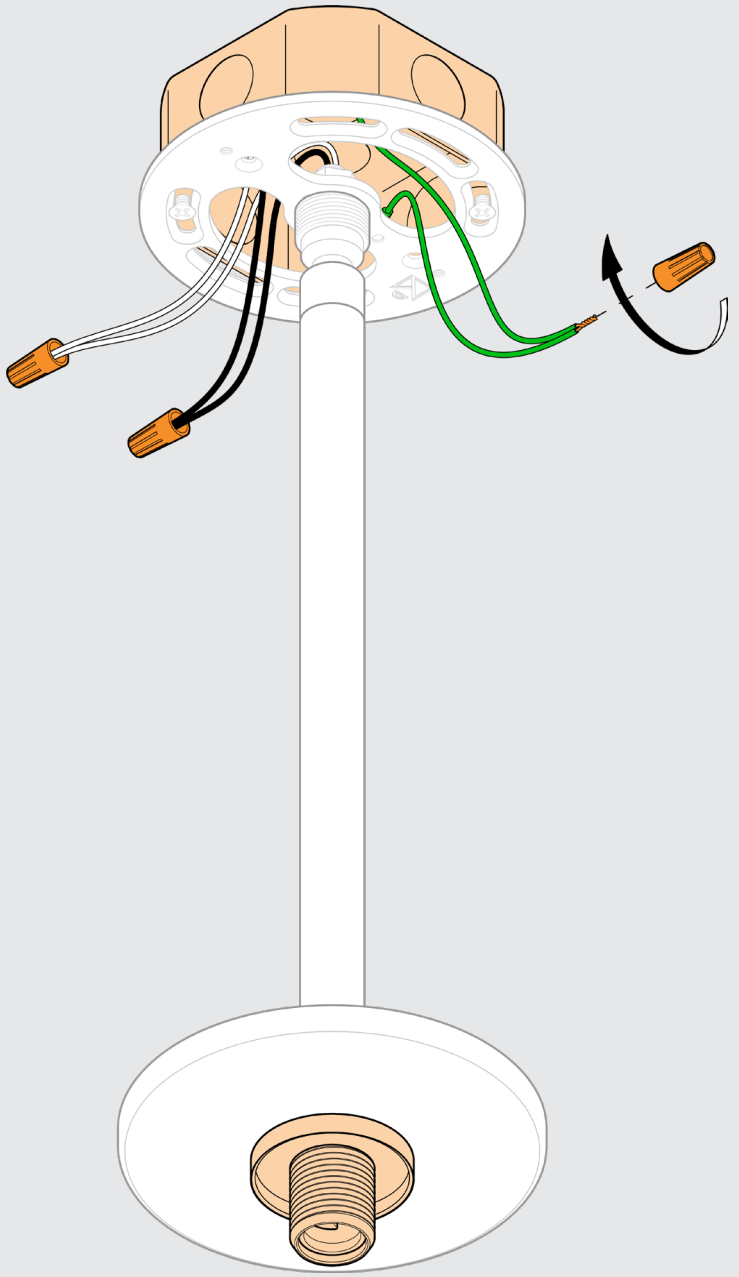

10

Carry the canopy and knurled ring back up and screw the knurled ring back onto the hang straight to secure the canopy into place.

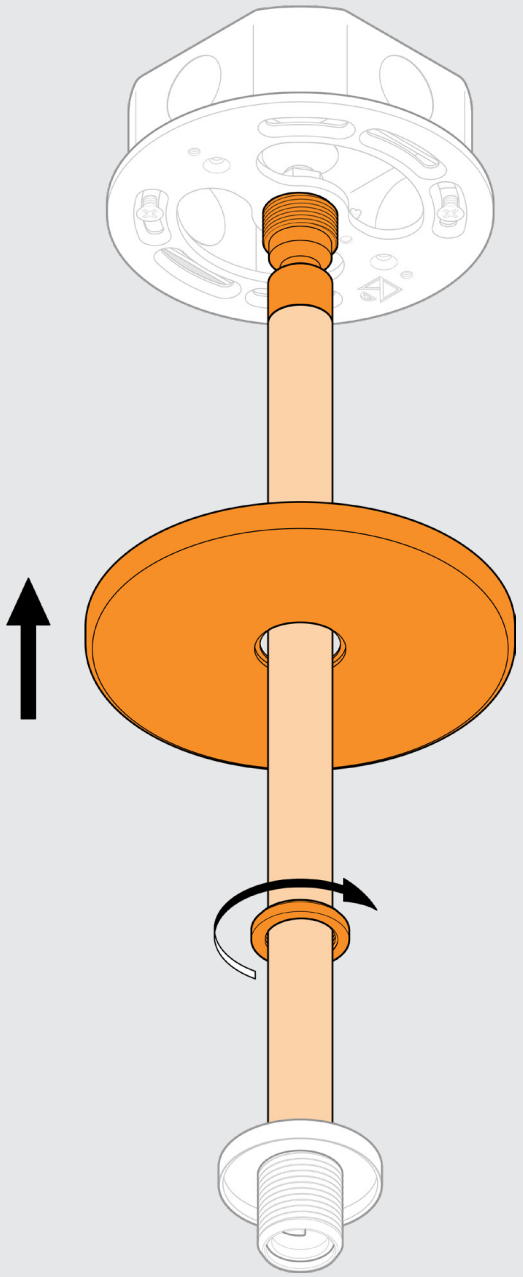

11

Insert the light bulb into the fixture socket.

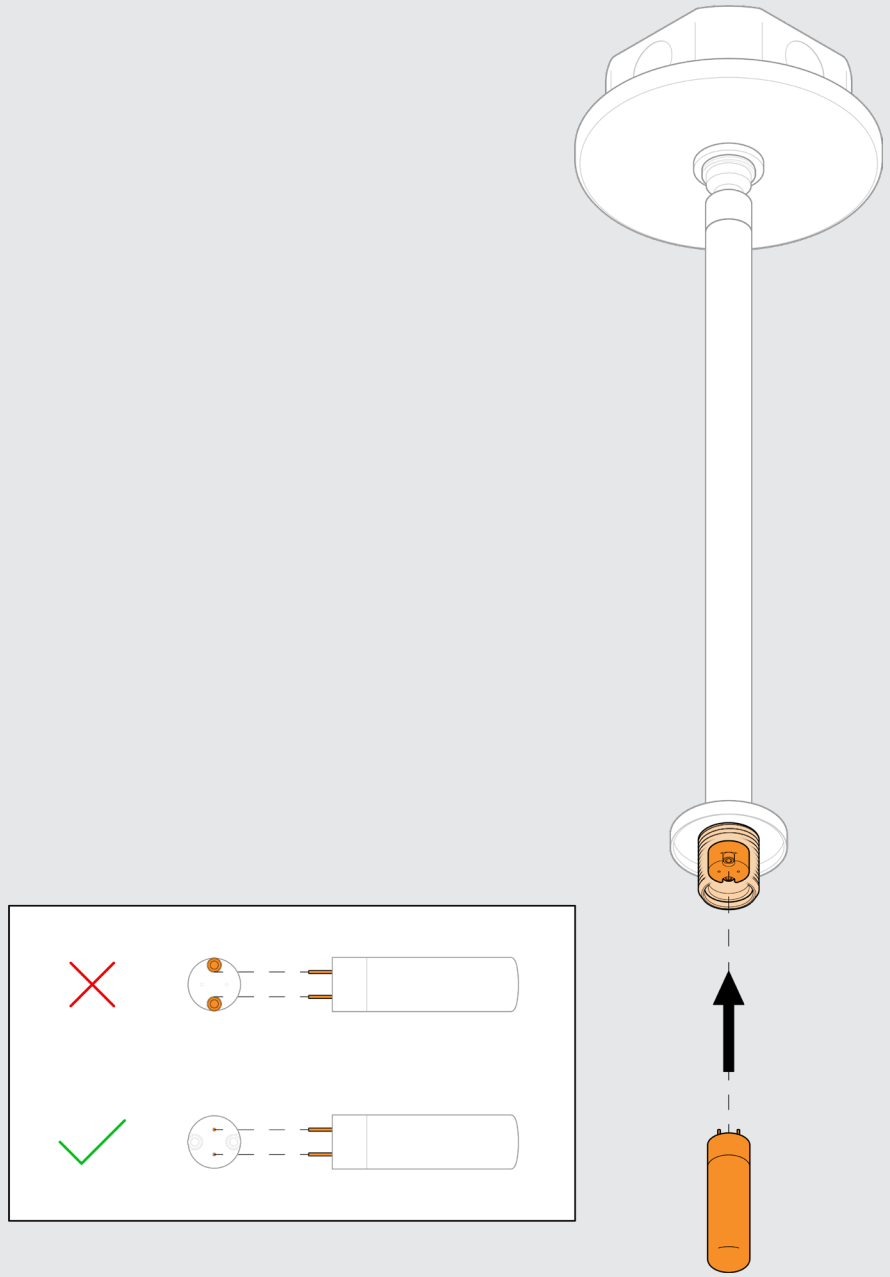

12
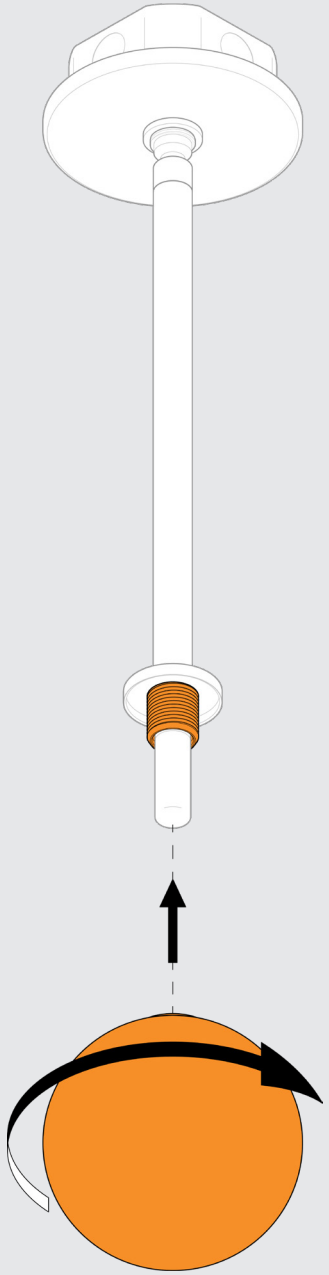
Screw the glass onto the socket cover to secure the glass into place.
CAUTION: Align threads properly for a smooth rotation before twisting to avoid jamming. **Do not overtighten the glass.**