Array 9 Chandelier

INSTALLATION GUIDE

HANDMADE
IN U.S.A.

WEAR GLOVES
DURING INSTALL

FRAGILE FINISHES

DANGER: ELECTRIC SHOCK RISK. TURN OFF ELECTRICAL POWER BEFORE BEGINNING INSTALLATION AND USE CAUTION WHEN INSTALLING.

+1 212 334 7333

www.alliedmaker.com • sales@alliedmaker.com

1

Inspect Contents

Ball Joint



4x Wood Screws

2x Machine Screws

Hang Rod

9x Glass

9x Light Bulb

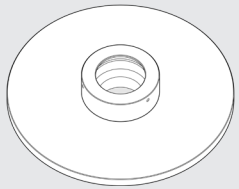

Canopy Assembly

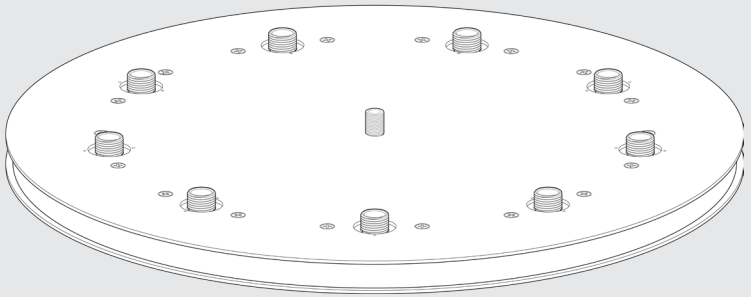

Fixture

Terminology

Adapter

1/16
Hex Screwdriver

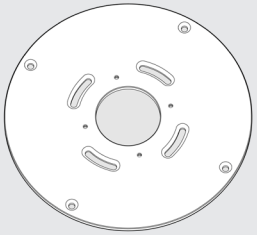

Universal Backplate



Lock Ring
&
3x Set Screw

Phillips Screwdriver
(Not Included)

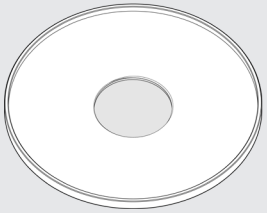

Canopy

9x Socket Cover
&
9x Fixture Socket

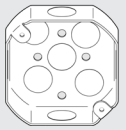

Junction Box
(Not Included)

3

Preparation

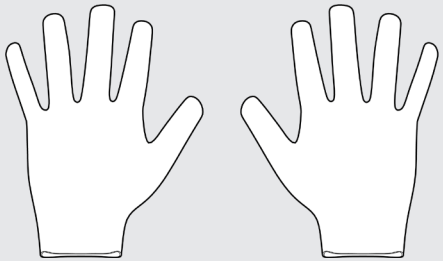

Nitrile Gloves

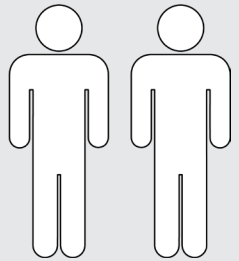

Two Person Install

Minimum two person install recommended.
Gloves Required.

4

Using a hex screwdriver, loosen the three set screws on the lock ring. Then, unscrew and remove the lock ring and canopy from the adapter on the universal backplate.

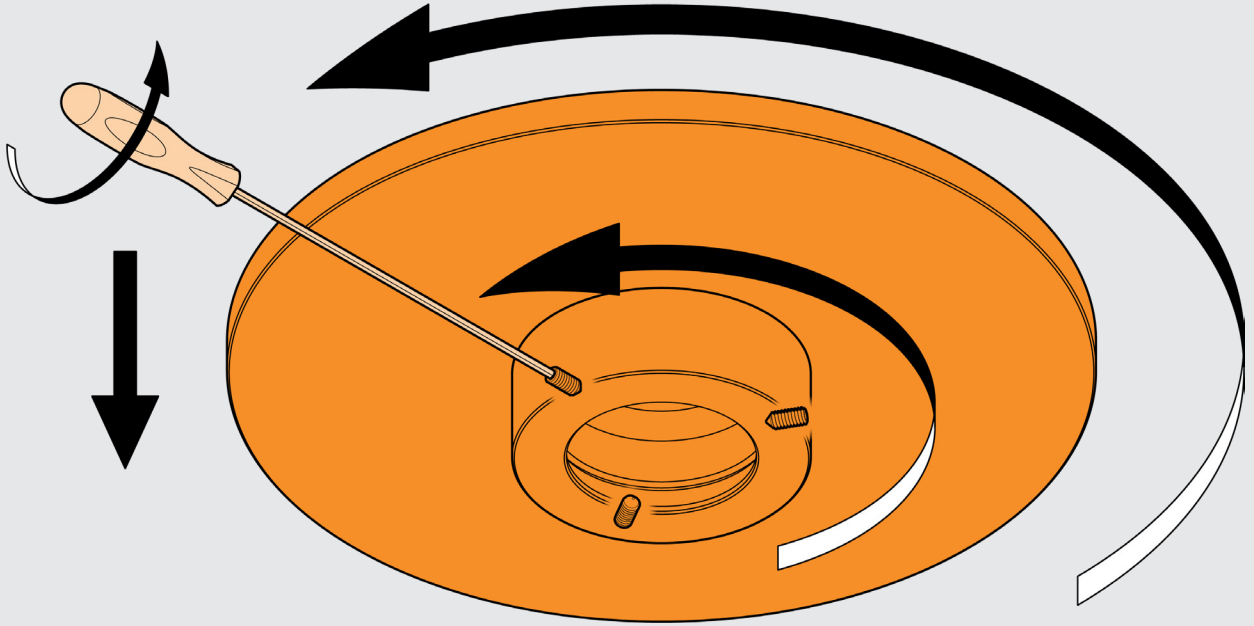

5

Connect the ground wire from the universal backplate with the ground wire from the junction box using a wire nut. Then, travel the wires from the junction box through the adapter on the universal backplate.

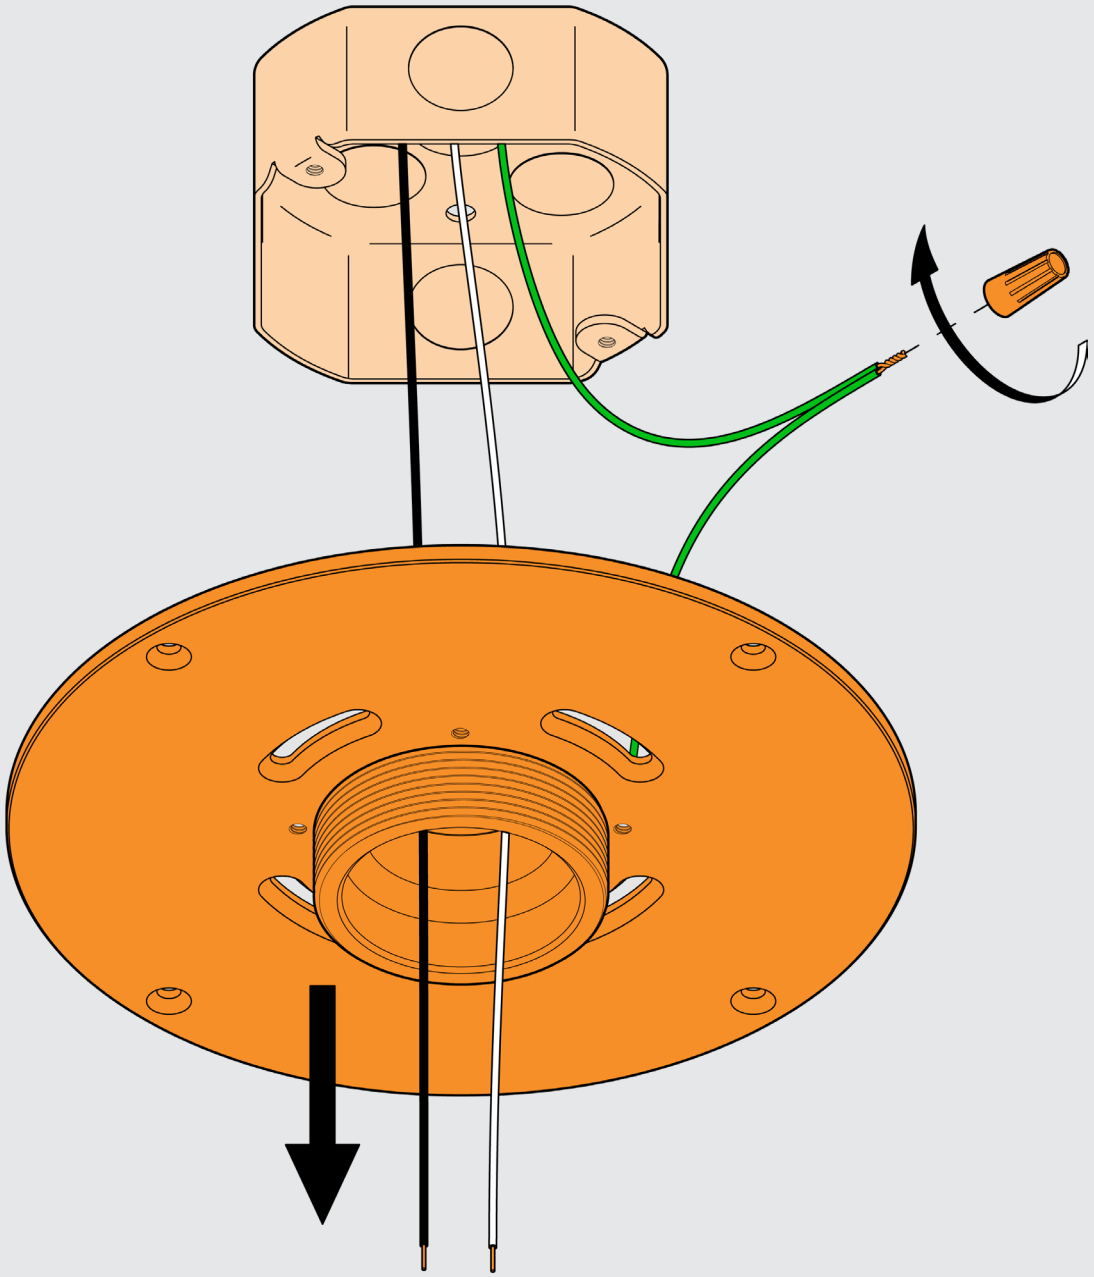

6

Mount the universal backplate onto the junction box using the provided wood screws and machine screws.

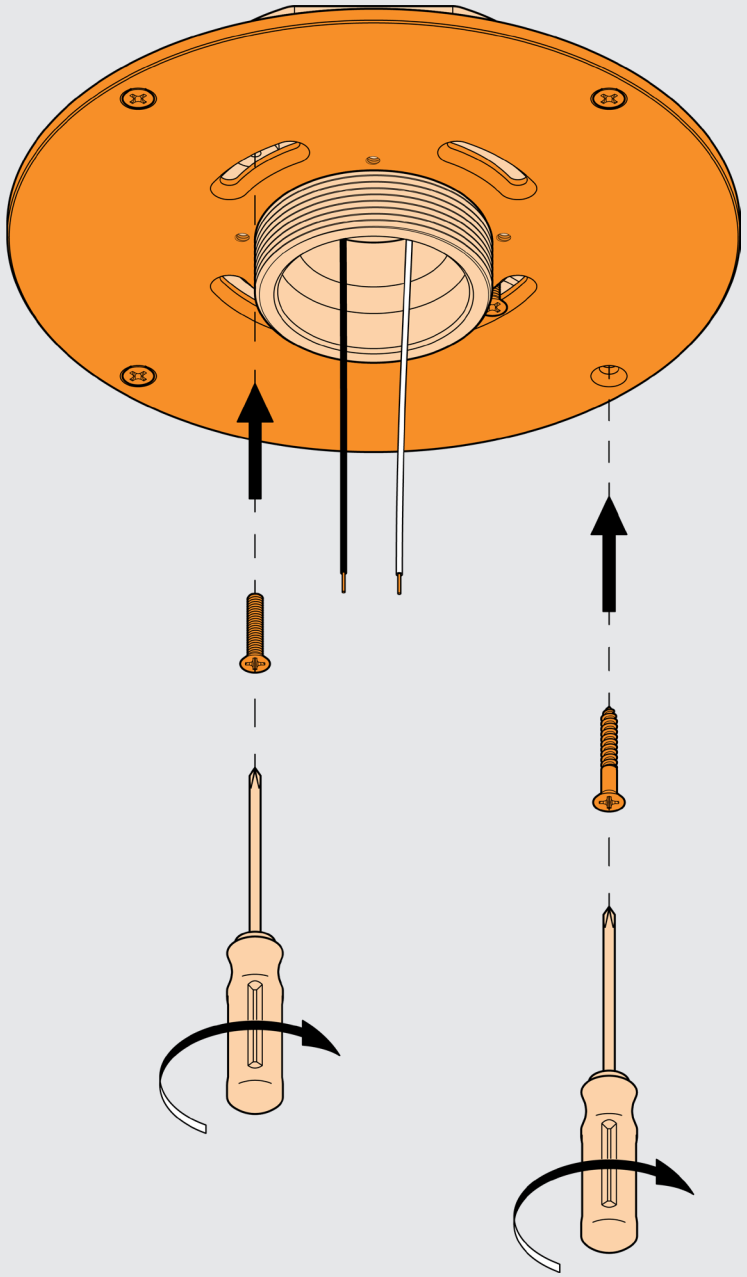

7

—

Screw the canopy
onto the adapter.

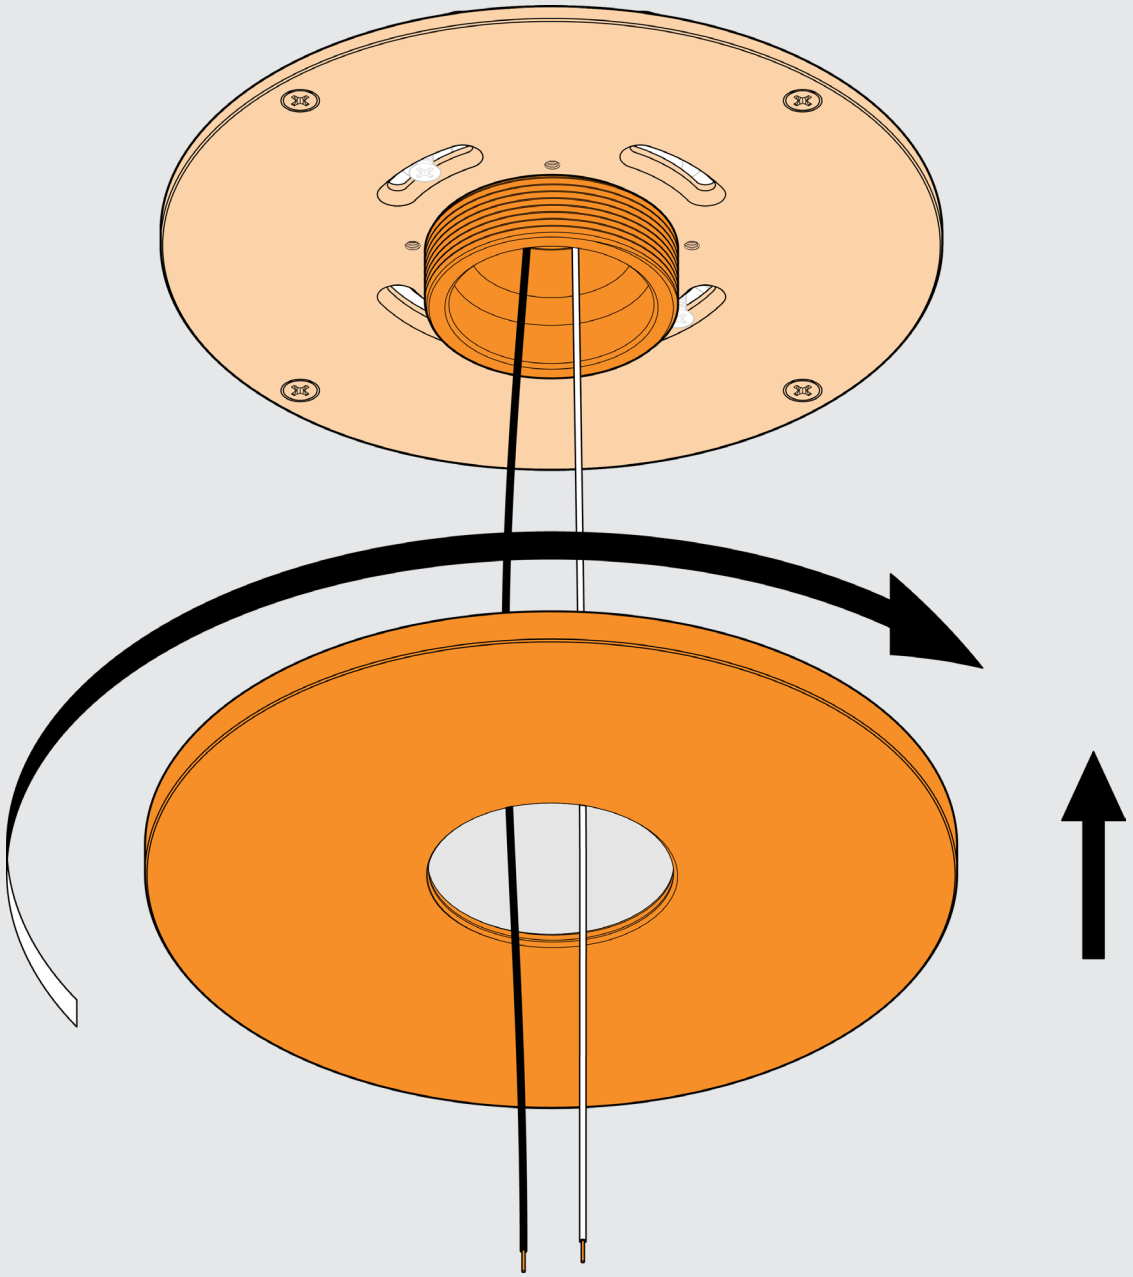

8

Travel the wires from the fixture through the hang rod. Then, screw the hang rod onto the nipple on the fixture to secure the hang rod into place.

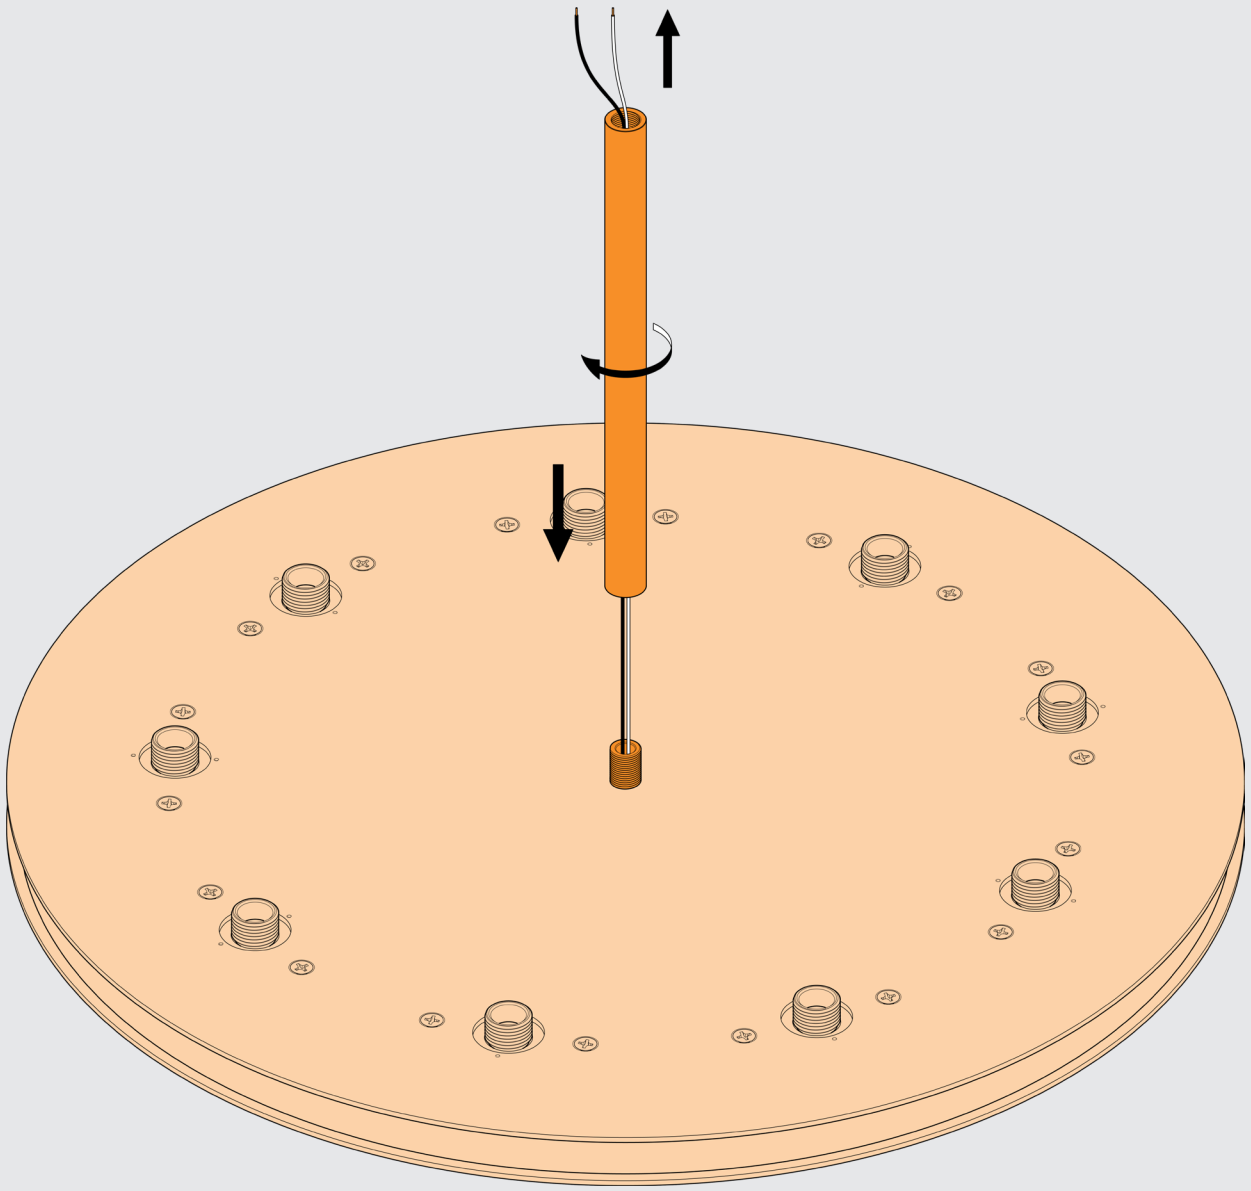

9

Carry the lock ring down the hang rod. Then, travel the wires from the fixture through the ball joint and then screw the ball joint onto the hang rod.

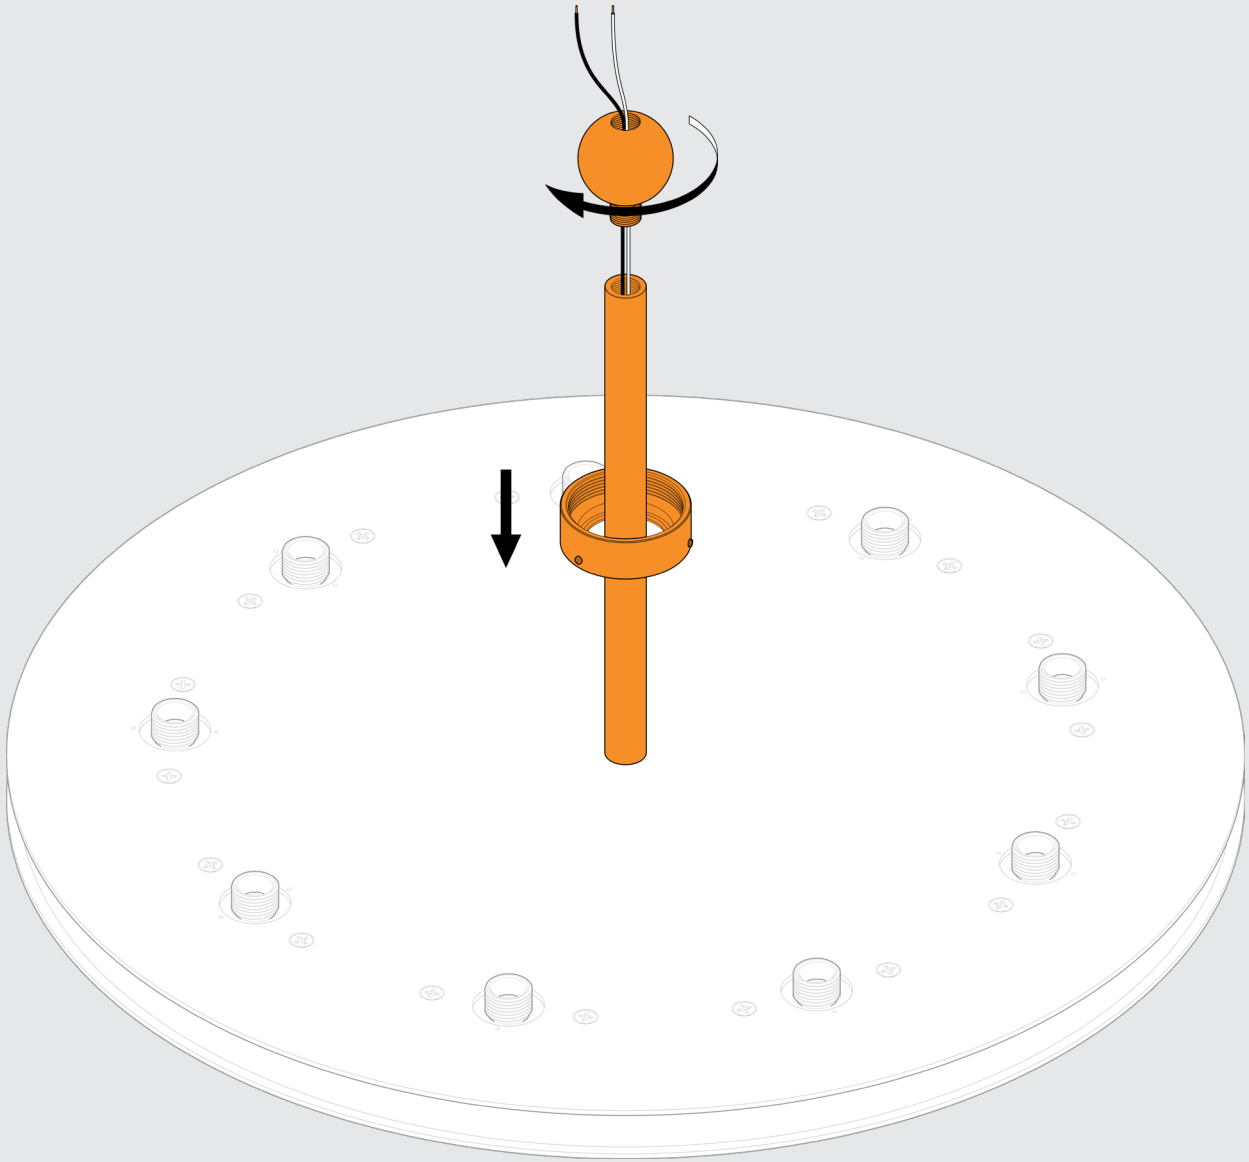

10

Connect the wires from the fixture with the wires from the junction box using wire nuts.

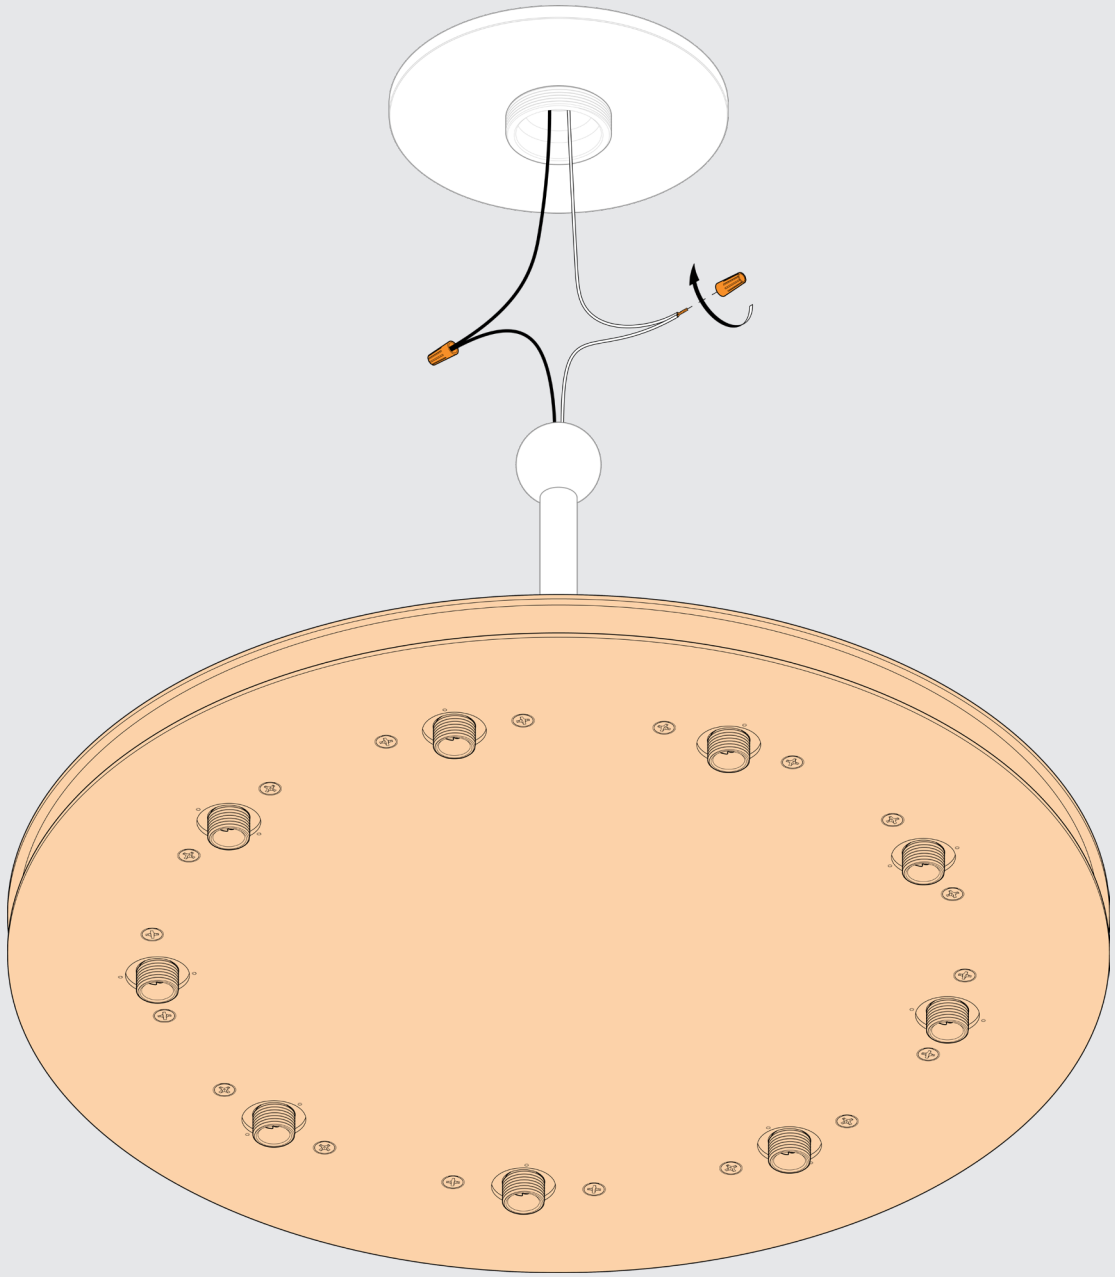

11

Carry the fixture up and insert the wires into the junction box and the ball joint into the adapter and hold in place. Then, carry up and screw the lock ring onto the adapter.

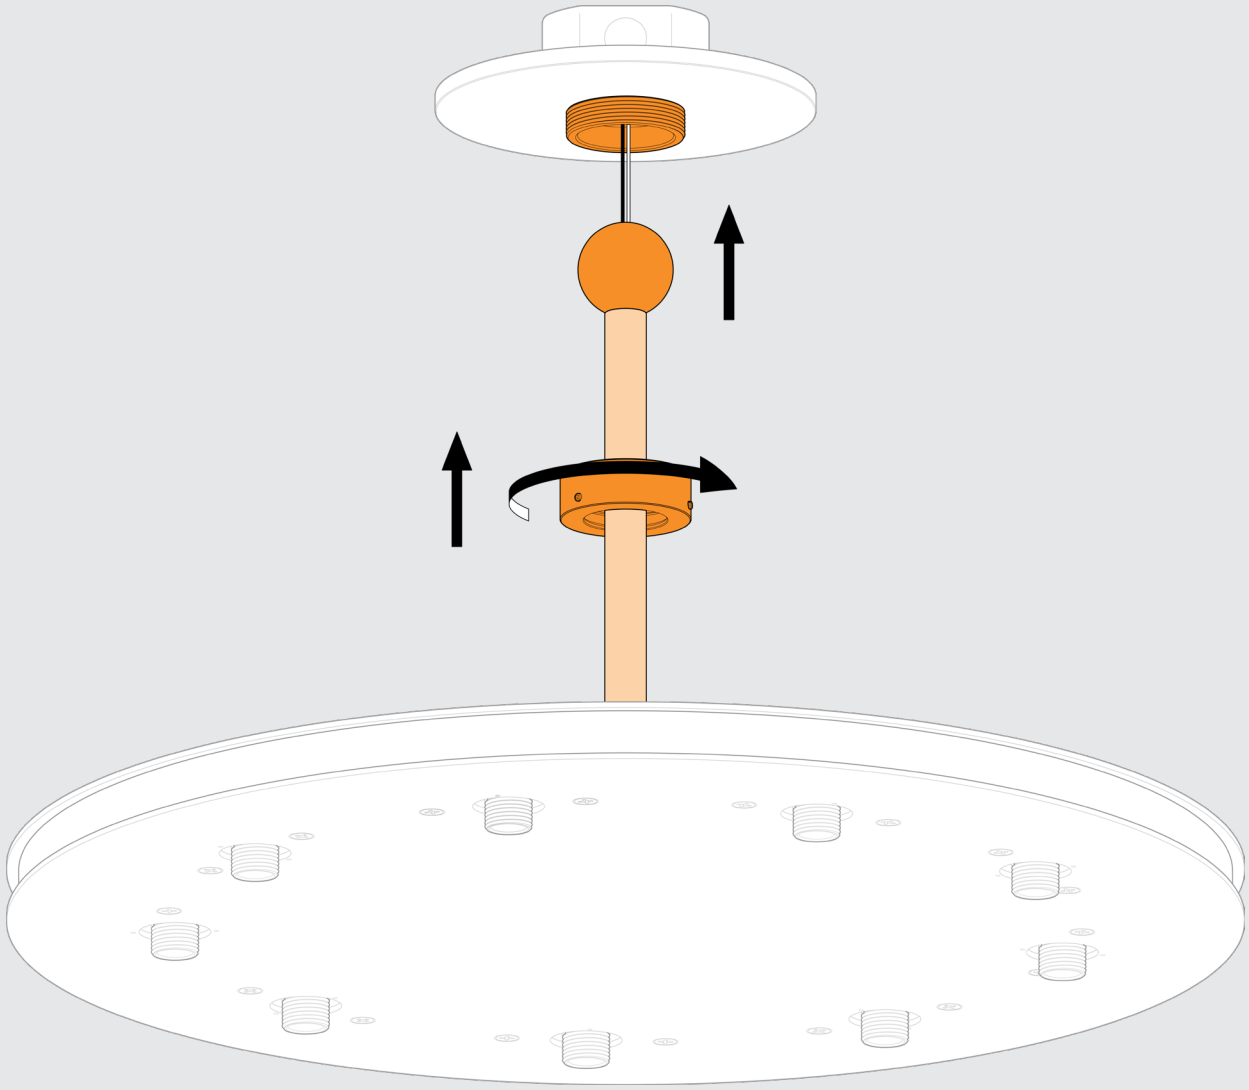

12

Using a hex screwdriver, tighten the three set screws on the lock ring to secure the fixture into place.

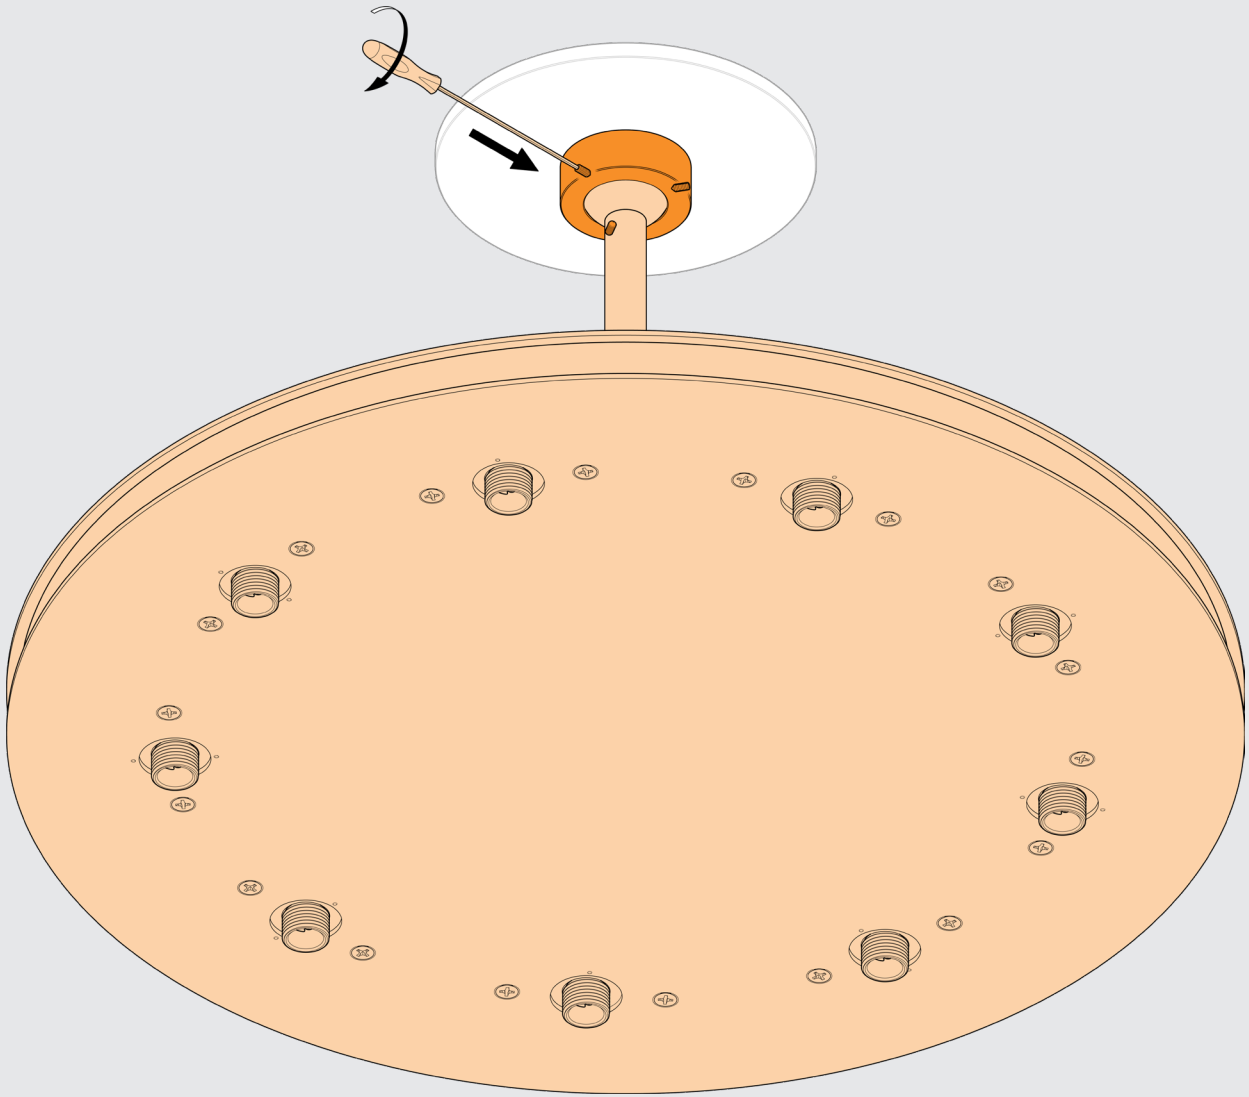

13

Insert the light bulbs
into the fixture sockets.

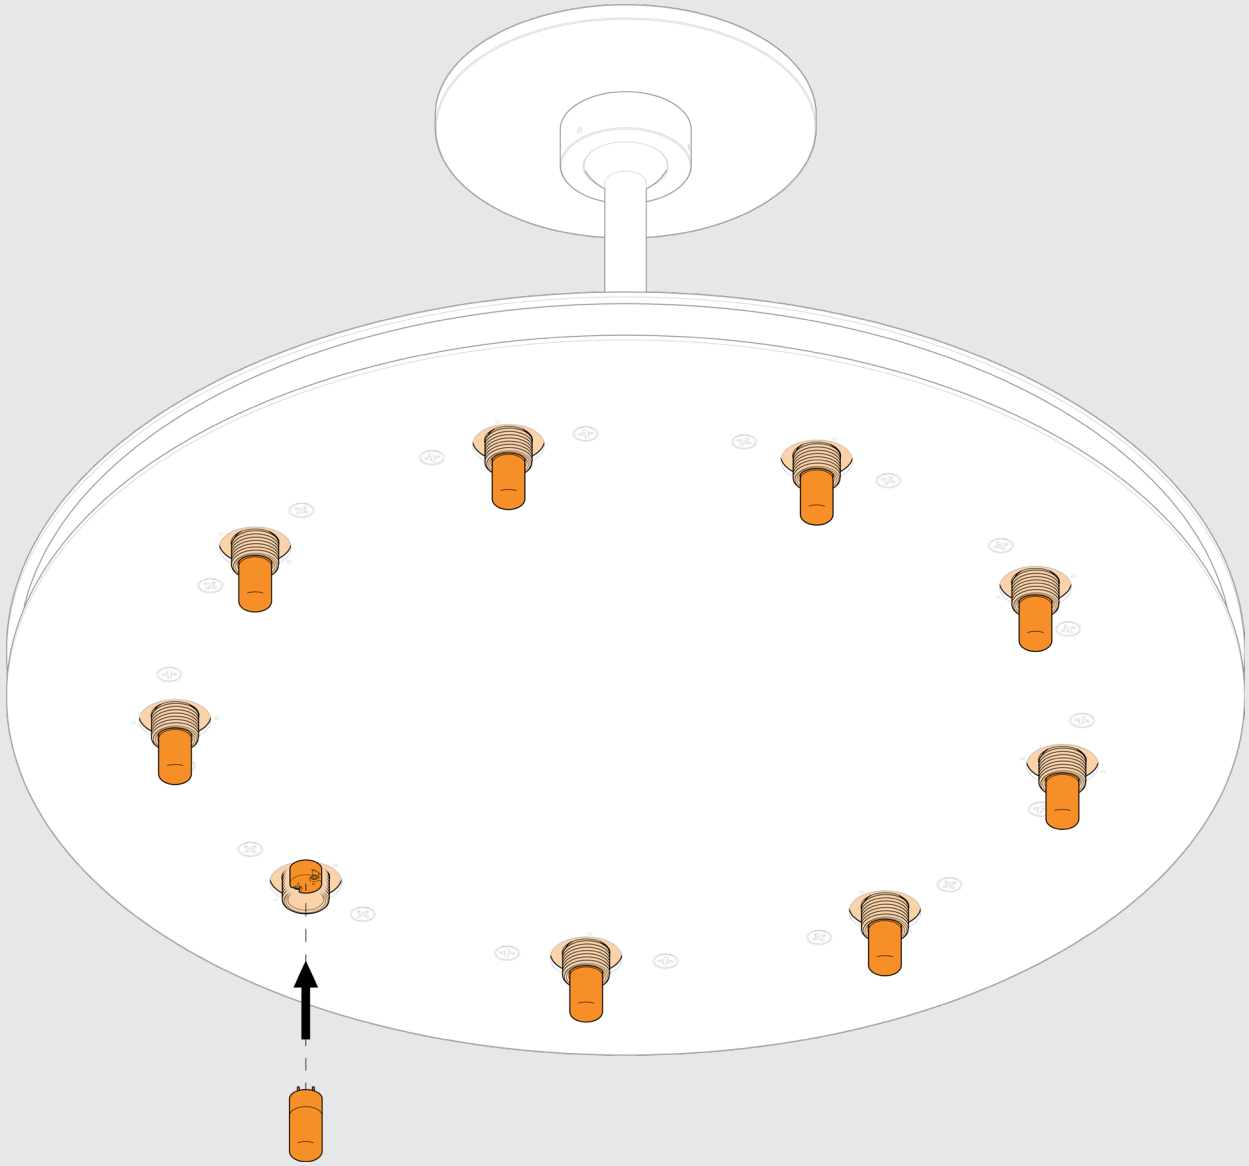

14
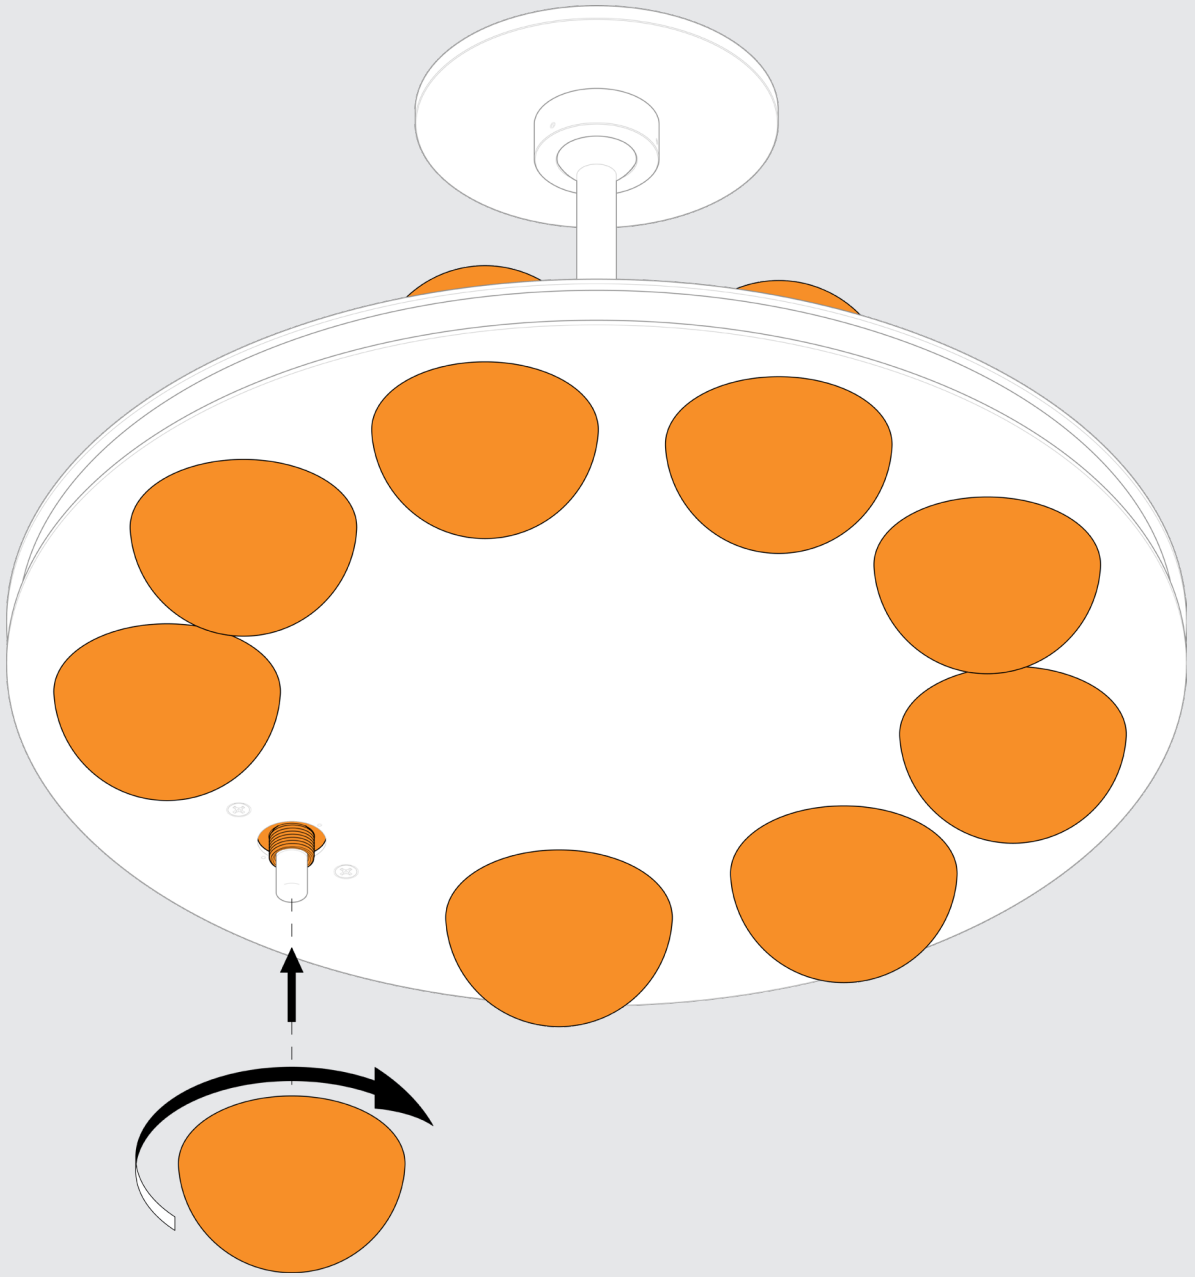
Screw the glass onto the fixture sockets. **CAUTION:** Align threads properly for a smooth rotation before twisting to avoid jamming. **Do not overtighten the glass.**