



ALLIED MAKER

MADE IN NEW YORK

Trimless Stem Mounting Kit

Multi-Surface
Installation Guide

212-334-7333


help@alliedmaker.com

LIVING FINISHES


Wear Gloves!




THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE
INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND
OPERATION OF THE PRODUCT AND HAZARDS INVOLVED

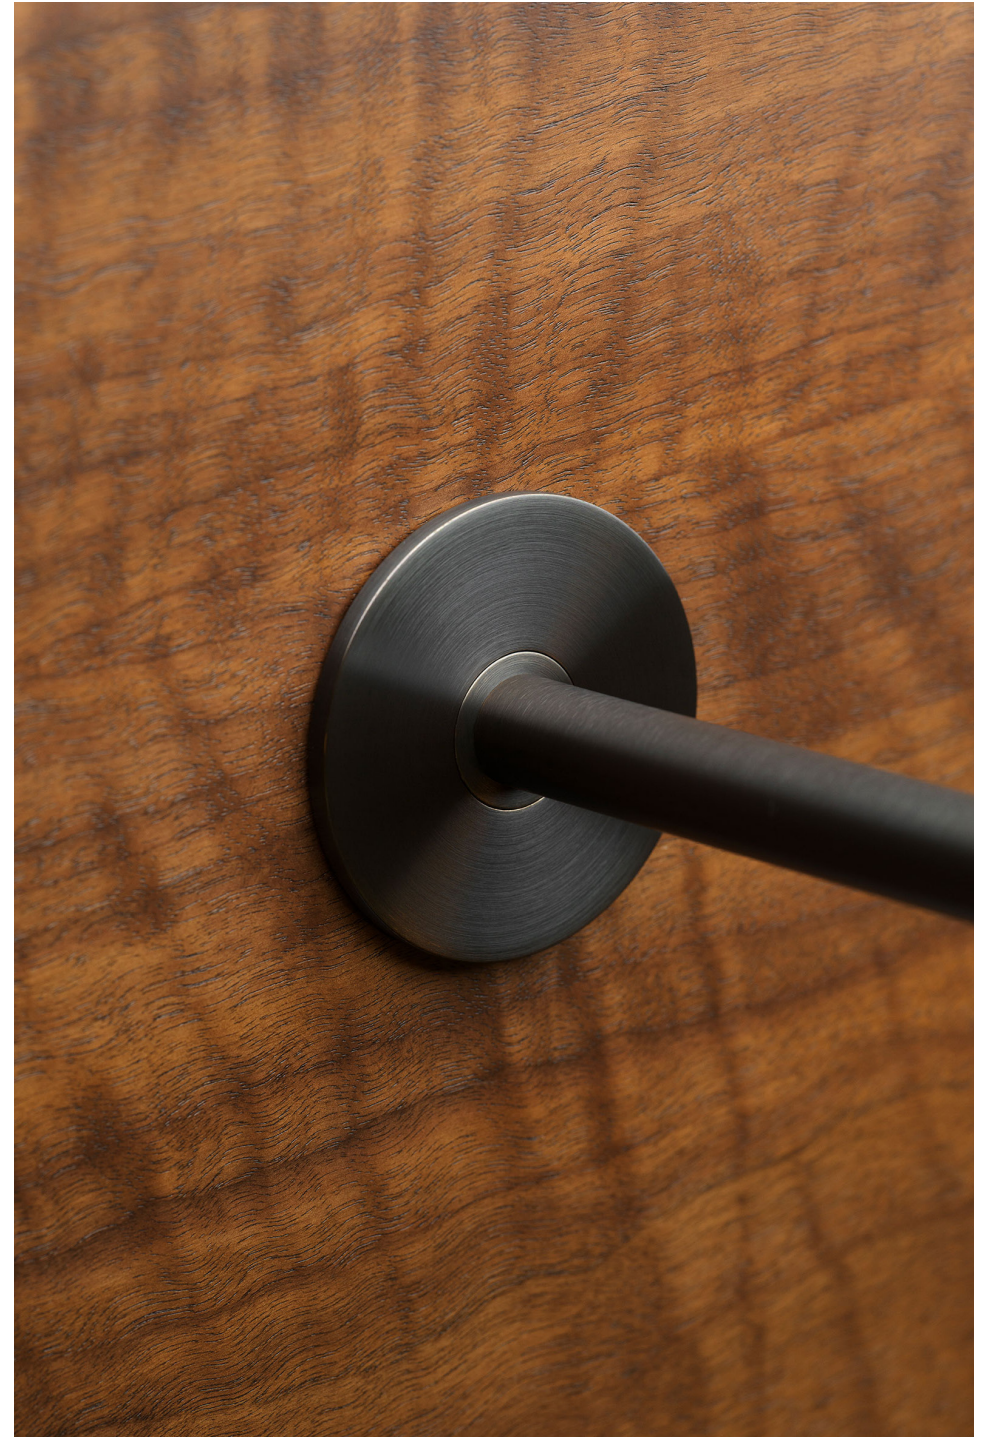


Contents Included

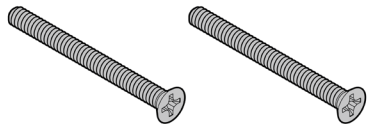


2x 6-32 x 1-½" Screw

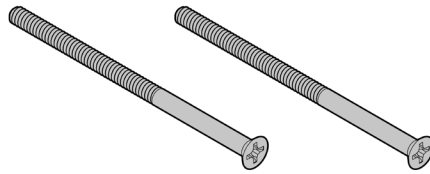


2x 6-32 x 2-½" Screw

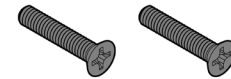


2x 8-32 Screw

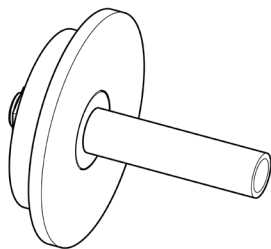

Lighting Fixture

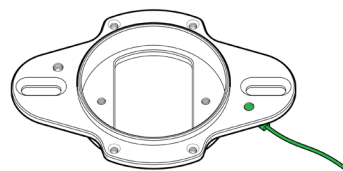

Mounting Plate

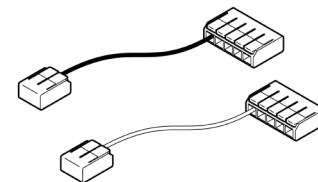


2x Wago Clip Wire Lead

1

Connect the ground wire from the junction box ① with the ground wire from the mounting plate ② using a wire nut ③


Connect the wires from the junction box ① to the five port wago clips ④

Travel the two port wago clip ⑤ wire leads through the mounting plate ②

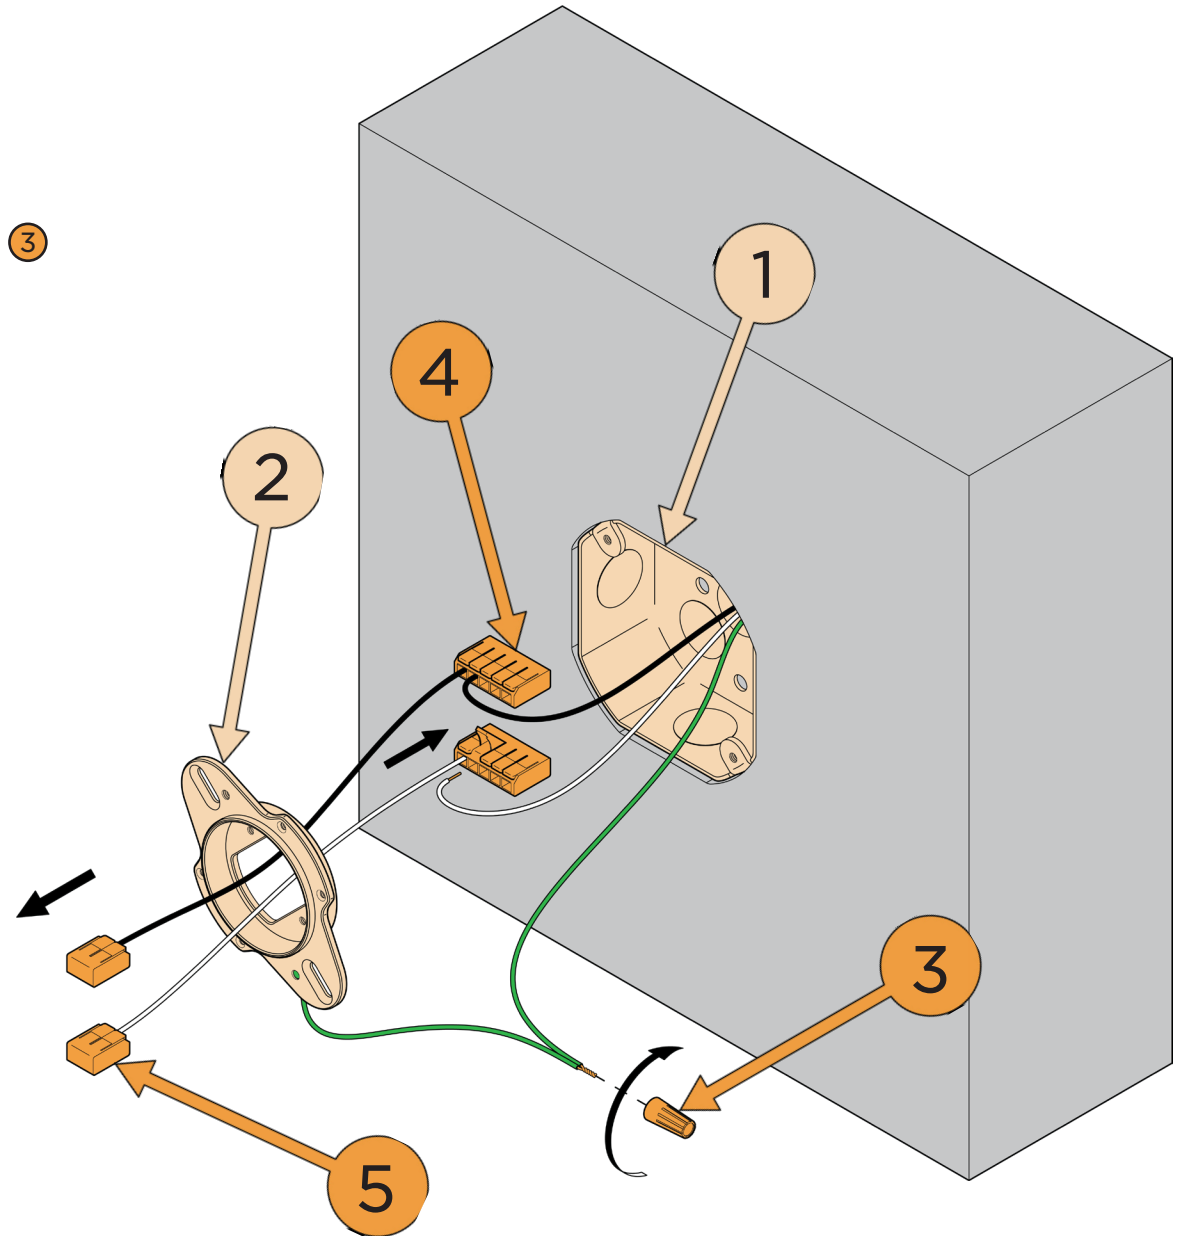

2



Using the provided 8-32 screws **1**
mount the mounting plate **2**
onto the junction box **3**

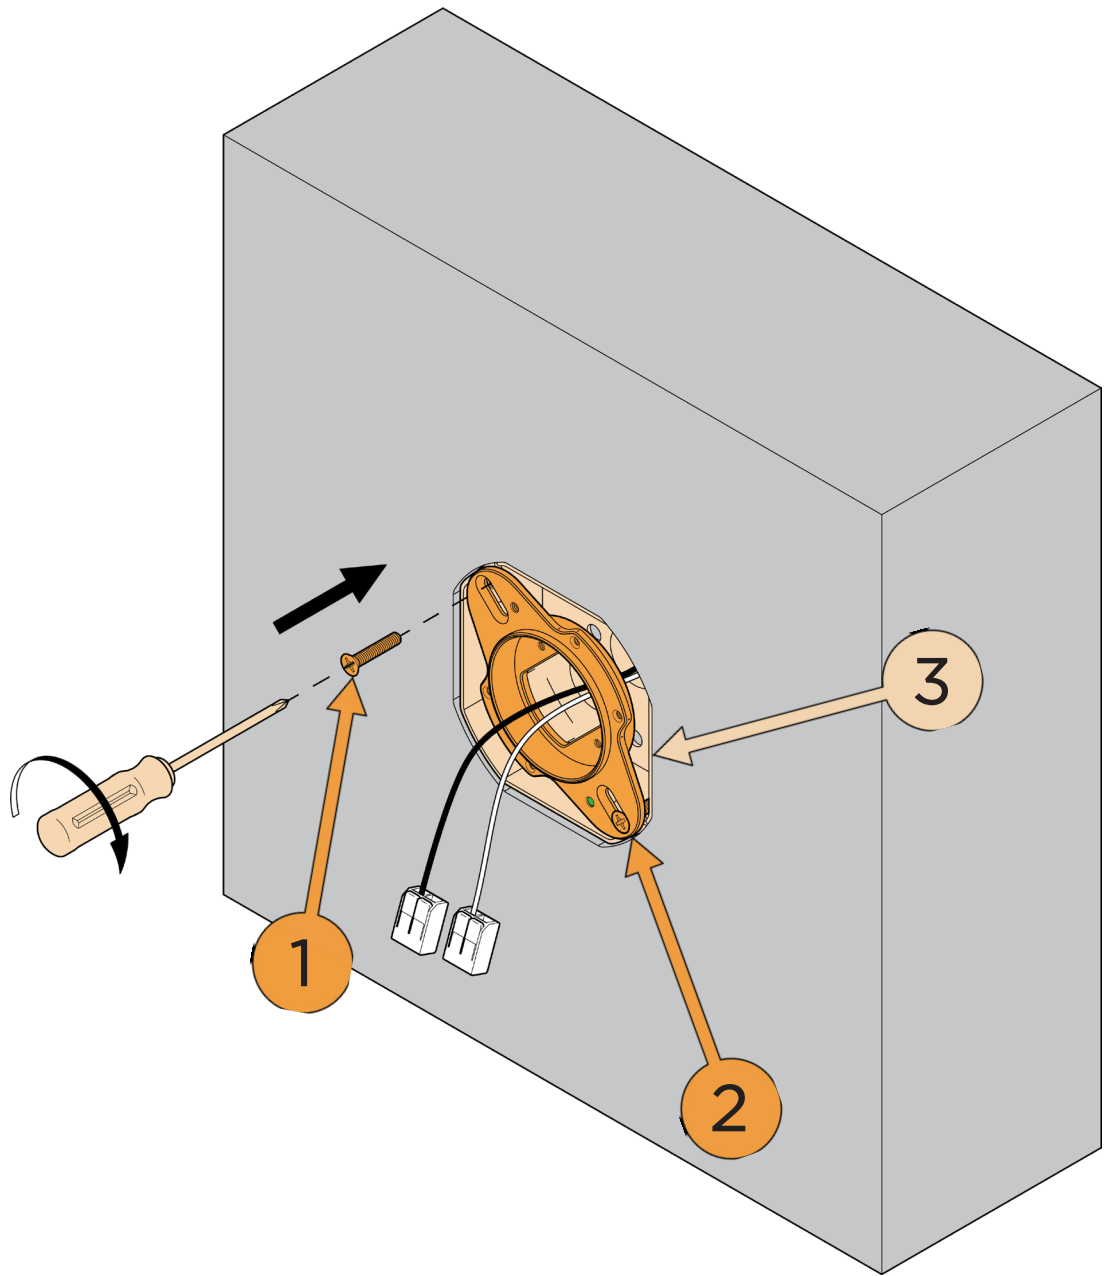

3


Travel the two port wago clip ① wire leads through the centerhole of the additional surface ② (wood panel, mirror, tile, substrate, etc.)

Install the additional surface ②

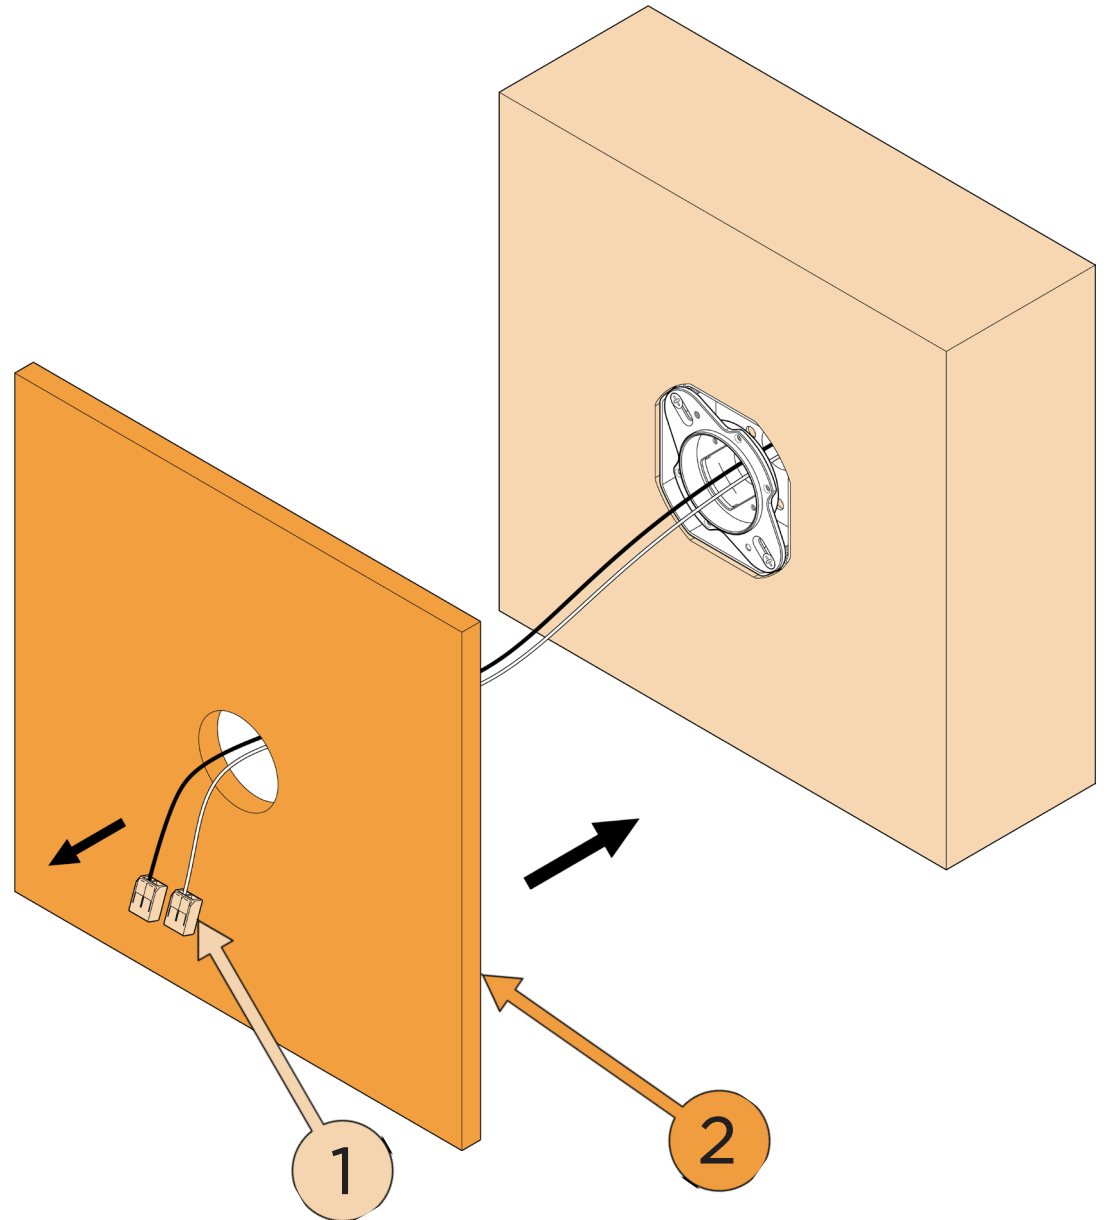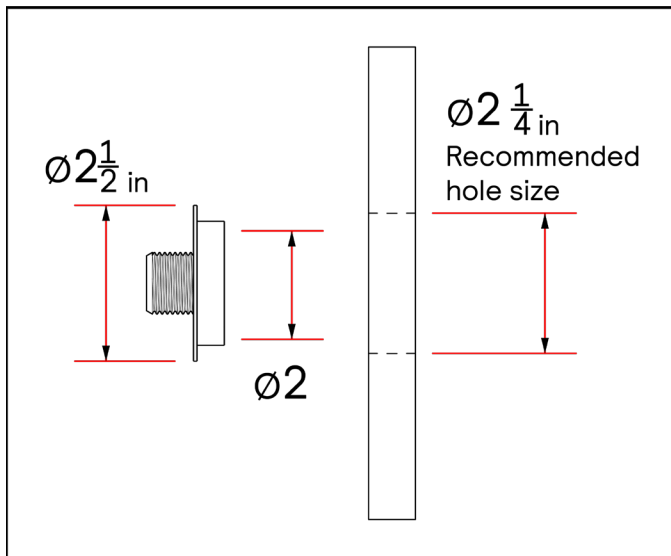


4

Remove the cover plate ①
from the adapter ②

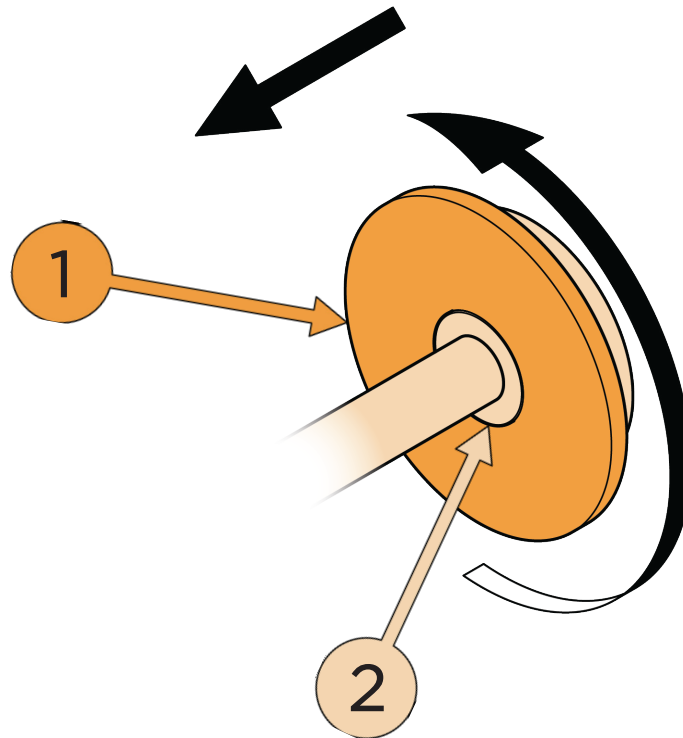

5

Connect the wires from the socket assembly ① to the two port wago clip ② wire leads.


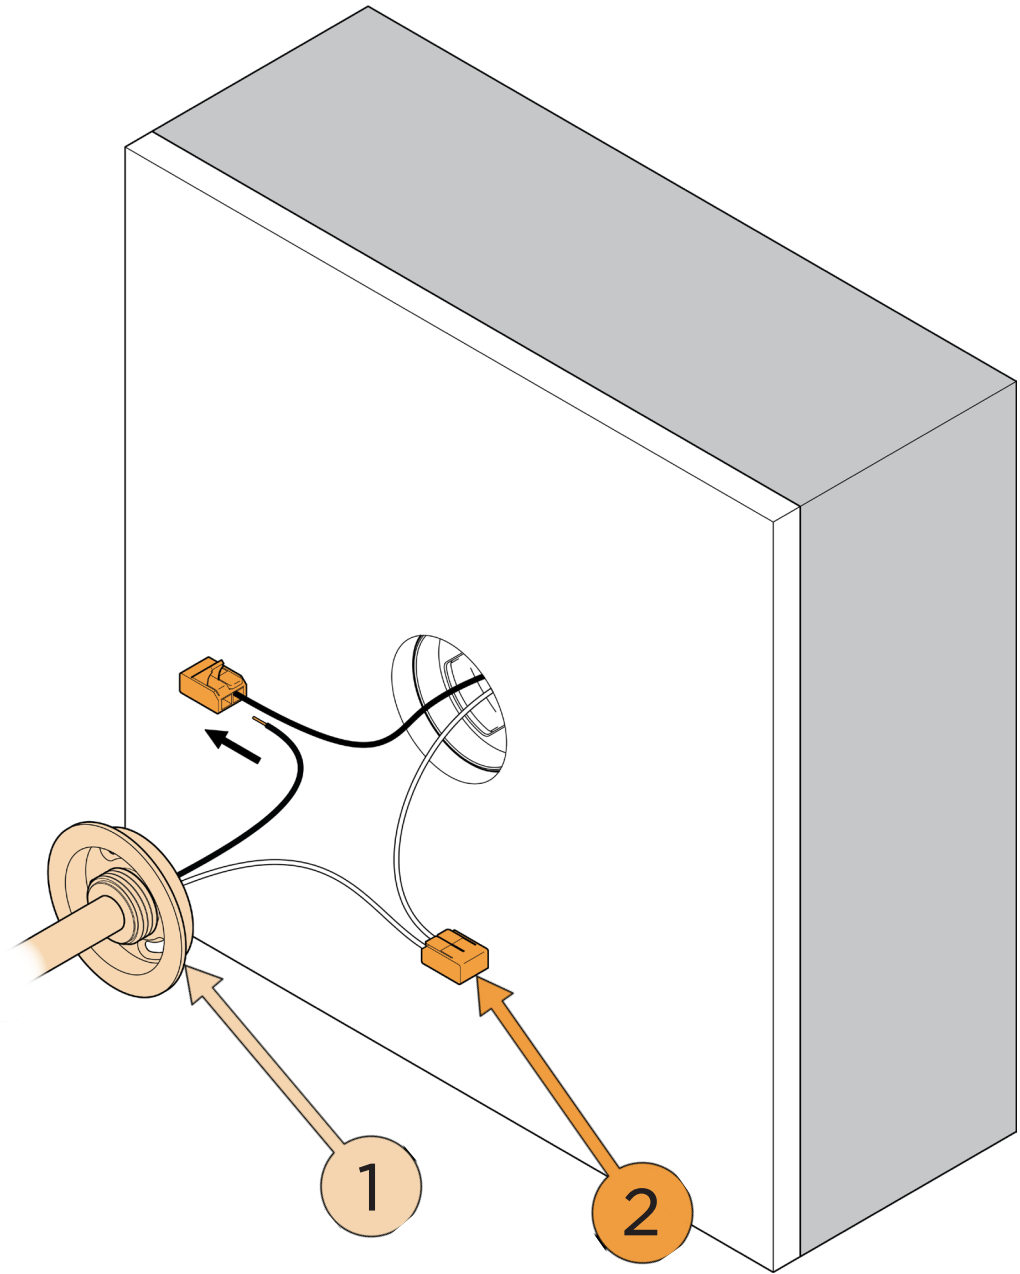


6

Using the provided 6-32 screws **1**
mount the lighting fixture **2**
onto the mounting plate **3**

*Measure the distance between the finished surface and the junction box to determine which 6-32 screw length to use.

*Do not overtighten the 6-32 screws.
Overtightening can lead to potential damage to the wall.

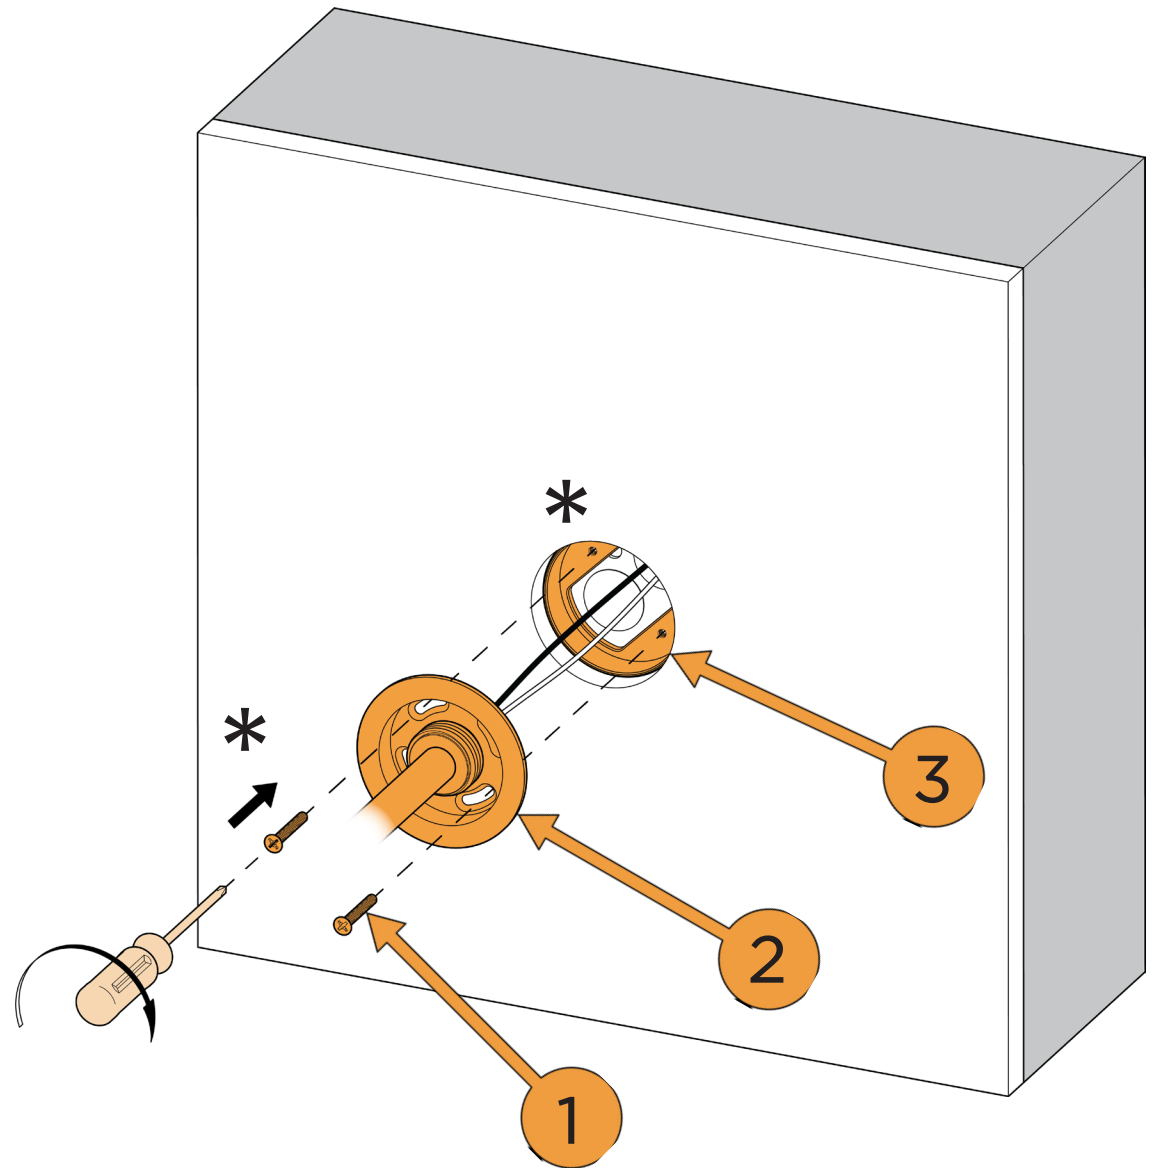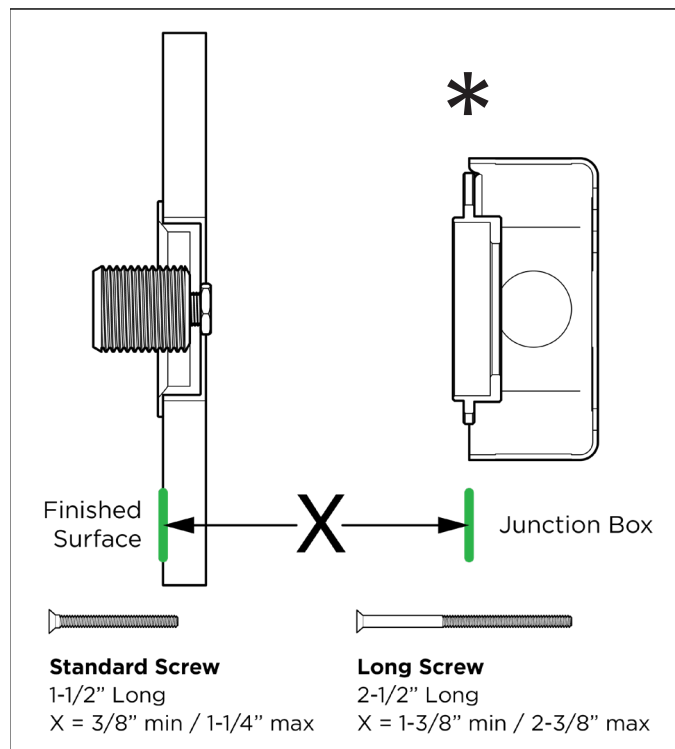

7

Screw the cover plate ①
onto the adapter ②

